## **TECHNICAL BULLETIN**

## **PRODUCT: ALL BOILERS**

## HEATING SYSTEM DISTRIBUTION PIPEWORK SIZING:

It is essential to correctly size the distribution pipework to ensure the efficient operation of a heating system.

We have provided adjacent information from the Domestic Heating Design Guide published in accordance with CIBSE, HHIC, HVCA, IPHE guidelines and information.

This guide should only be used on fully pumped systems.

We will point out that this Technical Bulletin should be only used as a guide and distribution pipework should always be calculated and sized correctly.

Table 1: Quick reference pipework sizing guide

Copper Pipe Diameter (mm)	Approximate Loading - Watts	
	11 ∆t °C	20 ∆t °C
8	1500	2700
10	2400	4300
15	6000	11000
22	13000	23000
28	22000	40000
35	34000	62000
42	55000	100000

Page 1 of 1

Whilst it is always our intention to fully assist, it is essential to recognise that all information given by the company in response to an enquiry of any nature is provided in good faith and based upon the information provided with the enquiry. We recommend that advice should always be checked with your installer or contract partner. Consequently, the company cannot be held responsible for any liability relating to the use or repetition of such information or part thereof. In addition, whilst making every reasonable effort to monitor the performance and quality of our supply, installation and service network, we do not accept responsibility for the workmanship or operation of any third party company that the company may have promoted either in conversation, e-mail or other communication.

Similarly, the views and opinions expressed in communication with individuals within the company may not reflect that of the business as a whole.



TB 0039 a (2010/08)