


Installation, Commissioning and Servicing instruction manual

Floor Standing oil-fired Condensing Boiler using Room Sealed Flue

# Greenstar Danesmoor External Regular <sup>2022+</sup> & External System <sup>2022+</sup> 12/18, 18/25 & 25/32

For fully pumped open vent or sealed central heating systems and domestic hot water cylinders.  
These appliances are for use with Kerosene (Class C2) only.

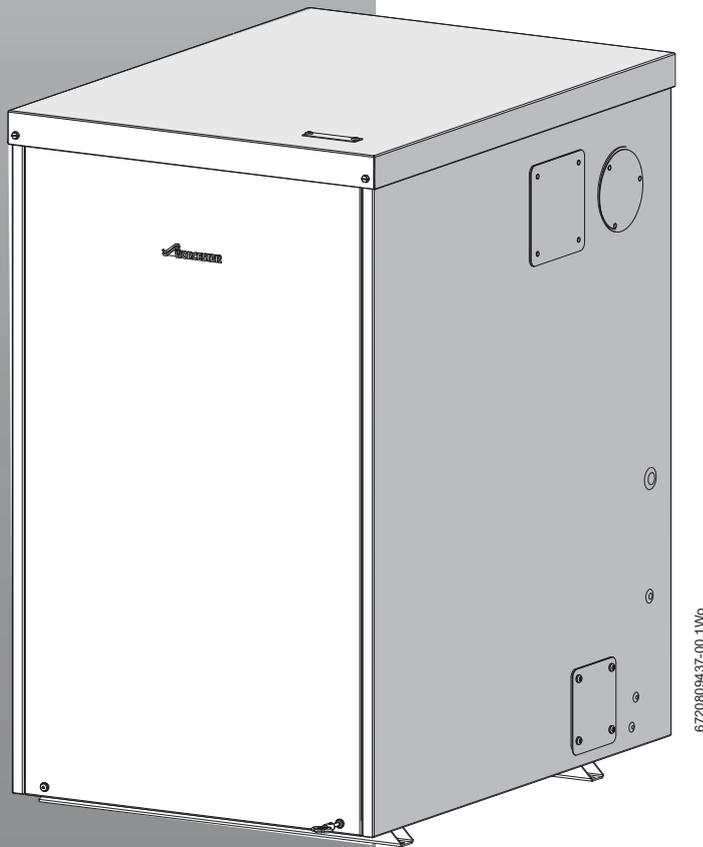

## Contents

<b>1</b>	<b>Key to symbols and safety instructions</b> .....	<b>3</b>	5.4.7	Installation notes .....	28
1.1	Key to symbols .....	3	5.5	Combustion chamber (18/25 Regular shown) .....	28
1.2	General safety instructions .....	3	5.6	Pipework connections .....	29
<b>2</b>	<b>Installation regulations</b> .....	<b>4</b>	5.7	Oil burner and pump .....	30
2.1	Complying with the building regulations .....	4	5.8	Refitting components .....	31
<b>3</b>	<b>Appliance information</b> .....	<b>6</b>	5.9	Electrical .....	32
3.1	General information .....	6	<b>6</b>	<b>Commissioning</b> .....	<b>35</b>
3.2	Technical data .....	6	6.1	Pre-Commissioning checks - 18/25 Regular shown ...	35
3.3	Energy Efficiency .....	7	6.2	Filling the system .....	35
3.4	Layout and components - 18/25 Regular appliance shown .....	8	6.3	Water treatment .....	35
3.5	Layout and components - 12/18 System appliance shown .....	9	6.3.1	Appliance drain points .....	36
<b>4</b>	<b>Pre-Installation</b> .....	<b>10</b>	6.3.2	Appliance vent points .....	36
4.1	Cleaning primary systems .....	10	6.4	Starting the appliance .....	36
4.1.1	Before cleaning the system: .....	10	6.4.1	Single pipe gravity feed systems: .....	36
4.1.2	Flushing the system .....	10	6.4.2	Double pipe sub-gravity feed systems and single pipe suction lift with de-aerator: .....	36
4.1.3	Inhibitor .....	10	6.4.3	Pump adjustments .....	37
4.1.4	Artificially softened water .....	10	6.4.4	Burner head setting .....	37
4.2	Mains supply .....	11	6.4.5	Boiler lock out indicator on: .....	38
4.2.1	Electrical supply .....	11	6.4.6	Combustion checks .....	38
4.3	Oil supply .....	11	6.4.7	Central heating .....	39
4.3.1	Single pipe gravity feed system: .....	11	6.5	Finishing commissioning .....	40
4.3.2	Double pipe sub-gravity feed system: .....	11	6.5.1	Hand over .....	40
4.3.3	Single pipe suction lift with de-aerator: .....	12	6.5.2	Appliance guarantee .....	40
4.3.4	Pipework .....	12	<b>7</b>	<b>Service and Spares</b> .....	<b>41</b>
4.3.5	Boiler isolation valve .....	12	7.1	Inspection and service - 18/25 Regular shown .....	41
4.4	Water systems and pipework .....	12	7.2	Clean the appliance .....	42
4.5	Condensate pipework .....	14	7.2.1	Cleaning the flue manifold and secondary heat exchanger .....	42
4.5.1	Condensate disposal connections .....	14	7.2.2	Combustion chamber baffle check .....	42
4.5.2	Soak away .....	15	7.2.3	Clean the burner .....	43
4.6	Pressure relief pipework .....	15	7.2.4	Re-commission the burner .....	44
4.7	Boiler locations and clearances .....	16	<b>8</b>	<b>Fault finding and diagnosis</b> .....	<b>46</b>
4.8	Flue gas system considerations .....	17	8.1	Burner functions .....	46
4.8.1	Combustion air quality .....	17	8.2	Heating and hot water .....	47
4.8.2	Flue terminal positions .....	17	8.3	Boiler function .....	48
4.9	Flue options .....	20	8.4	Logic for the 535 SE/LD RDB control box .....	49
4.9.1	Cabinet mounted balanced horizontal flue options ..	20	8.5	Riello control box 12/18 model .....	50
4.9.2	Plume management .....	20	8.5.1	Control box LED codes .....	50
4.9.3	Plume management considerations .....	21	8.5.2	Fault finding .....	50
<b>5</b>	<b>Installation</b> .....	<b>23</b>	8.5.3	Flame sensing photocell 12/18 models .....	52
5.1	Unpacking the boiler .....	23	8.5.4	Flame sensing photocell 18/25 and 25/32 models ...	52
5.2	Pipework positions and flue opening .....	23	8.6	Oil supply vacuum testing .....	52
5.3	Boiler installation .....	24	8.7	Air pressure switch and flue overheat reset .....	52
5.4	Flue installation .....	25	8.8	Air pressure switch connections .....	52
5.4.1	Flue Components .....	25	8.9	Oil appliance commissioning checklist .....	53
5.4.2	Rear Flue options_ Greenstar - all models .....	25	8.10	Service interval record .....	54
5.4.3	Side Flue options - Greenstar Danesmoor .....	26			
5.4.4	All flue options, final assembly .....	26			
5.4.5	Terminal guard .....	27			
5.4.6	Flue damper installation .....	27			

# 1 Key to symbols and safety instructions

## 1.1 Key to symbols

### Warnings

	Warnings in this document are identified by a warning triangle printed against a grey background. Keywords at the start of a warning indicate the type and seriousness of the ensuing risk if measures to prevent the risk are not taken.
---	---

The following keywords are defined and can be used in this document:

- **NOTICE** indicates a situation that could result in damage to property or equipment.
- **CAUTION** indicates a situation that could result in minor to medium injury.
- **WARNING** indicates a situation that could result in severe injury or death.
- **DANGER** indicates a situation that will result in severe injury or death.

### Important information

	This symbol indicates important information where there is no risk to people or property.
---	---

### Additional symbols

Symbol	Meaning
<b>1.</b>	a numbered step in an action sequence
▶	a step in an action sequence
→	a reference to a related part in the document or to other related documents
①	a reference number to identify or refer to a part or item
.	a list entry
-	a list entry (second level)

Table 1 Symbols

### Examples of additional symbols used

#### A numbered step in an action sequence

A sequence of numbered steps or actions carried out in a specific order to complete a task.

1. First action
  2. Second action
  3. Third action
- etc.

#### A step in an action sequence

A sequence of defined actions or steps carried out in order to complete a task.

- ▶ Action
- ▶ Next action
- ▶ etc

#### A reference to a related part in the document or to other related documents.

To refer the reader to a specific figure/table/section within the manual.

→ e.g. figure 1.

#### A reference number to identify or refer to a part or item.

In a related figure, items or parts identified by a sequential number.

#### List entries, first and second levels

- A single component/item
- A component/list, made up of multiple parts/items.

- Sub component or sub-list of main component/list.
- etc.

### Abbreviations used in this manual

∅	Diameter
CH	Central Heating
DHW	Domestic Hot Water
DCW	Domestic Cold water
HE	Heat Exchanger
TRV	Thermostatic Radiator Valve
IP	Ingress Protection
CF	Conventional Flue
RS	Room sealed
N/A	Not Allowed
SEDBUK	Seasonal Efficiency of Domestic Boilers in the UK
OFTEC	Oil Firing Technical Association for the Petroleum Industry
WRAS	Water Regulations Advisory Scheme
IET	Institute of Engineering and Technology
LABC	Local Authority Building Control Body
DWTA	Domestic Water Treatment Association

### Read these instructions before starting any installation

These instructions are applicable to the Worcester appliance model(s) stated on the front cover of this manual only and must not be used with any other make or model of appliance.

The instructions apply in the UK and Eire only and must be followed except for any statutory obligation.

This appliance must be installed by a competent person, failure to install correctly could lead to prosecution.

## 1.2 General safety instructions

These installation instructions are intended for heating engineers, plumbers, and electricians.

- ▶ Read any installation instructions (boiler, heating controls, etc.) carefully before starting the installation.
- ▶ Observe the safety instructions and warnings.
- ▶ Observe national and regional regulations, technical rules and guidelines.
- ▶ Record all work carried out.

### Oil fumes or leaks from the appliance

If you smell oil fumes, observe the following rules.

- ▶ Extinguish any naked flames
- ▶ Isolate the electrical supply
- ▶ Isolate the fuel supply to the boiler
- ▶ Rectify the fault

### Health and safety

The appliance contains no asbestos and no substances have been used in the construction process that contravene the COSHH Regulations (Control of Substances Hazardous to Health Regulations). Where applicable, the CE mark indicates compliance with relative EU Directives.

### Combustible and corrosive materials

Do not store or use any combustible materials (paper, thinners, paints etc.) inside or within the vicinity of the appliance.

The combustion air must be kept clear of chemically aggressive substances which can corrode the appliance and invalidate any warranty.

### Handling instructions and guidelines

It is advised that more than one person is involved in the transfer of the packaged appliance from the van to the point of installation.

It is advised that no attempt should be made to move the packaged appliance without the use of a suitable truck.

At all times the correct method for handling heavy objects should be strictly observed.

- ▶ Lift only a manageable weight, or ask for help.
- ▶ When lifting, bend the knees, and keep the back straight and feet apart.
- ▶ Do not lift and twist at the same time.
- ▶ Lift and carry items close to the body.
- ▶ Wear protective clothing and gloves to protect from any sharp edges.

### Intended use

This boiler must only be used as a heat appliance in a heating system for domestic purposes.

Any other use is considered inappropriate. Any damage that results from such use is excluded from liability.

### Appliance operation

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance, in a safe way, and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

### Installation, commissioning and servicing

Installation, commissioning and servicing must only be carried out by a competent registered engineer.

- ▶ Only use original spares.
- ▶ Advise the user to have the system regularly serviced by a competent, qualified engineer (such as OFTEC registered personnel) using approved spares, to help maintain the economy, safety and reliability of the appliance.

### Fitting and Modification

Fitting the appliance and any controls to the appliance may only be carried out by a competent engineer in accordance with these instructions and the relevant Installation Regulations.

Flue systems must not be modified in any way other than as described in the fitting instructions.

Any misuse or unauthorised modifications to the appliance, flue or associated components and systems could invalidate the warranty. The manufacturer accepts no liability arising from any such actions, excluding statutory rights.

### Electrical work

Electrical work must only be carried out by a qualified electrician.

- ▶ Before starting electrical work:
  - Isolate the mains electrical supply and secure against unintentional re-connection.
  - Check for zero potential.
- ▶ Also observe connection diagrams of other system components.

### Handover to the user

When handing over, instruct the user how to operate the heating system and inform them about its operating conditions.

- ▶ Explain how to operate the heating system and draw the user's attention to any safety-relevant action.
- ▶ Explain that modifications and repairs must only be carried out by an authorised contractor.
- ▶ Advise the user to have the system serviced annually by a competent, OFTEC registered engineer.
- ▶ Leave the installation instructions with the completed commissioning form and the operating instructions with the user.

## 2 Installation regulations

### 2.1 Complying with the building regulations

This heating appliance forms part of the controlled services for the building. It is law that all controlled services for buildings must comply with building regulations. You must be able to satisfy your Local Authority Building Control Body (LABC) that the work carried out concerning the installation and commissioning of this heating appliance has been carried out to a satisfactory standard.

OFTEC operate a competent persons scheme and registered installers are able to certify that their work complies with building regulations. Under the scheme;

- OFTEC must be informed about every installation.
- OFTEC will issue a building regulations compliance certificate to the householder and will notify the LABC.

OFTEC provide controlled document forms CD10 and CD11 for use during installation and commissioning respectively.

Other organisations operate self-certification schemes e.g. NAPIT and BESCA Ltd. and it may be possible for installers who are members of these organisations to self certify their work.

Alternatively you must submit a building control notice to the LABC before installing any boiler. The LABC will then arrange regular inspection visits during the work to ensure that the installation complies with the regulations.

### Installation

Failure to install appliances correctly could lead to prosecution.

The appliance should be installed by a competent person. The person installing the appliance should be aware of the Health and Safety at Work Act and take appropriate action to ensure that the regulations are adhered to. In order to give optimum efficiency and trouble free operation the appliance must be commissioned by a qualified OFTEC engineer.

The compliance with a British Standard does not, in itself, confer immunity from legal obligations. In particular the installation of this appliance must be in accordance with the relevant requirements of the following British Standards and regulations in respect of the safe installation of equipment:

- BS 5410: part 1: Code of practice for Oil Fired Boilers.
- BS 799: part 5: Specification for Oil Storage Tanks.
- BS 7593: Code of Practice for treatment of water in domestic hot water central heating systems.
- BS 5449: part 1: Specification for forced circulation hot water central heating for domestic premises.
- BS 5955: part 8: Specification for the installation of thermoplastic pipes and associated fittings for use in domestic hot and cold water services and heating systems.

- BS 7291: Thermoplastic pipes and associated fittings for hot and cold water for domestic purposes and heating installations in buildings.
- BS 7074: part 1: Application, selection and installation of expansion vessels and ancillary equipment for sealed water systems.
- BS 1254-2: Copper and copper alloys plumbing fittings part 2: Fittings with compression ends for use with copper tubes.
- BS 7671: IET Wiring Regulations, current edition.
- BS 1362: Specification for general purpose fuse links for domestic and similar purposes.
- BS EN 12828: Heating systems in buildings. Design for water-based heating systems.

The Building Regulations Part G, Part J and L1 England and Wales; Part F, Part G and Part J Section III Scotland; Part L and Part F Northern Ireland.

Local water company bye-laws.

The Control of Pollution (Oil) Regulations.

OFTEC Standards.

Where no specific instruction is given, reference should be made to the relevant codes of practice.

#### **Installations in Eire (Republic of Ireland)**

The Installation must be performed by a competent and suitably trained person in accordance with the following Eire regulations.

Current Building Regulations - Republic of Ireland

ETCI rules for electrical installation

#### **For further guidance see:**

OFTEC Technical book three - Regional requirements: Republic of Ireland

## 3 Appliance information

### 3.1 General information

#### Standard package:

- A - Floor standing oil fired condensing boiler
- B - Literature pack:
  - Greenstar Danesmoor external Installation, Commissioning and Servicing instruction manual
  - User Instructions
  - Guarantee registration card
- C - Condensate trap
- D - BSP plug, one inch (Regular only)
- E - ErP label
- F - Flue damper
- G - Balanced flue kit
- H - 100mm Ø Services duct
- J - Cabinet key

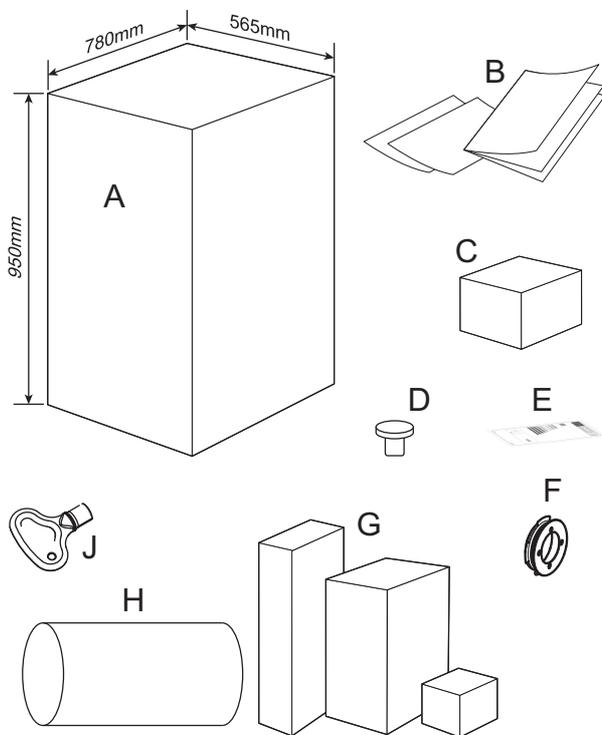


Fig. 1 Standard package

6720821725-03.1W0

### 3.2 Technical data

Description	Units	12/18	18/25	25/32
<b>Central heating</b>				
Central heat output (max)	kW	18	25	32
Primary water capacity (total)	litres	20	21	22
Max. static head (Regular only)	metres	30	30	30
Min. static head (Regular only)	metres	1	1	1
Water side resistance (20°C difference)	mbar	20	30	56
Maximum available pump head (20°C difference) System only	mH <sub>2</sub> O	5.2	4.3	4.1
Maximum permissible sealed system operating pressure in accordance with WRAS guidelines	bar	2.5	2.5	2.5
<b>Flue</b>				
Exit flue gas mass flow	kg/hr	29	40	51
<b>Pipework connections</b>				
Fuel line (compression)	mm	10	10	10
Flow Kitchen	BSP	1"	1"	1"
Flow Kitchen System	mm	22	22	28
Kitchen flow and optional vent/air vent	BSP	1"	1"	1"
Return	mm	22	22	28
Condensate (Polypropylene)	mm	21.5	21.5	21.5
PRV outlet - System only	mm	15	15	15
<b>Electrical</b>				
Electrical power supply voltage	ac ..V	230	230	230
Frequency	Hz	50	50	50
<b>Thermostats</b>				
Boiler flow temperature range	°C	55/81	55/81	55/81
Control thermostat differential	°C	5	5	5
Boiler high limit thermostat set point	°C	95	95	95
Boiler manual reset overheat thermostat set point	°C	105	105	105
Flue manual reset overheat thermostat set point	°C	110	110	110
<b>General data</b>				
Maximum hearth temperature	°C	<100	<100	<100
SEDBUK 2009	%	91.1	90.9	90.7
SEDBUK 2005	%	93.2	93.0	92.8
Appliance protection rating	IP	45	45	45
Weight (excluding packaging)	kg	110	114	124
External Regular				
Weight (excluding packaging)	kg	119	121	131
External System				

### 3.3 Energy Efficiency

The following product data satisfy the requirements of the EU Regulations No. 811/2013 and No. 812/2013 supplementing Directive 2010/30/EU.

Product data	Symbol	Unit	7731600248	7731600249	7731600250	7731600257	7731600258	7731600259
Product type	–	–	Danesmoor External Regular <sup>2022+</sup> 12/18	Danesmoor External Regular <sup>2022+</sup> 18/25	Danesmoor External Regular <sup>2022+</sup> 25/32	Danesmoor External System <sup>2022+</sup> 12/18	Danesmoor External System <sup>2022+</sup> 18/25	Danesmoor External System <sup>2022+</sup> 25/32
Condensing boiler	–	–	Yes	Yes	Yes	Yes	Yes	Yes
Low temperature boiler	–	–	No	No	No	No	No	No
B1 boiler	–	–	No	No	No	No	No	No
Cogeneration space heater (CHP)	–	–	No	No	No	No	No	No
Combination heater	–	–	No	No	No	No	No	No
Rated heat output	P <sub>rated</sub>	kW	18	25	32	18	25	32
Seasonal space heating energy efficiency	η <sub>s</sub>	%	92	92	92	92	92	92
Energy efficiency class	–	–	A	A	A	A	A	A
<b>Useful heat output</b>								
At rated heat output and high temperature regime <sup>1)</sup>	P <sub>4</sub>	kW	18.2	25.1	32.9	18.2	25.1	32.9
At 30 % of rated heat output and low temperature regime <sup>2)</sup>	P <sub>1</sub>	kW	5.6	7.8	10.0	5.6	7.8	10.0
<b>Useful efficiency</b>								
At rated heat output and high temperature regime <sup>1)</sup>	η <sub>4</sub>	%	91.8	91.9	91.5	91.8	91.9	91.5
At 30 % of rated heat output and low temperature regime <sup>2)</sup>	η <sub>1</sub>	%	98.5	97.8	97.3	98.5	97.8	97.3
<b>Auxiliary electricity consumption</b>								
At full load	e <sub>l,max</sub>	kW	0.165	0.159	0.150	0.165	0.159	0.150
At part load	e <sub>l,min</sub>	kW	0.053	0.049	0.047	0.053	0.049	0.047
In standby mode	P <sub>SB</sub>	kW	0	0	0	0	0	0
<b>Other items</b>								
Standby heat loss	P <sub>stby</sub>	kW	0.166	0.159	0.161	0.166	0.159	0.161
Ignition burner power consumption	P <sub>ign</sub>	kW	-	-	-	-	-	-
Emissions of nitrogen oxides	NO <sub>x</sub>	mg/kWh	110	103	109	110	103	109
Annual energy consumption	Q <sub>HE</sub>	GJ	57	78	103	57	78	103
Sound power level, indoors	L <sub>WA</sub>	dB(A)	N/A	N/A	N/A	N/A	N/A	N/A

Table 2 Product data for energy consumption

- 1) High-temperature regime means 60 °C return temperature at heater inlet and 80 °C feed temperature at heater outlet.
- 2) Low temperature means for condensing boilers 30 °C, for low-temperature boilers 37 °C and for other heaters 50 °C return temperature (at heater inlet).

### 3.4 Layout and components - 18/25 Regular appliance shown

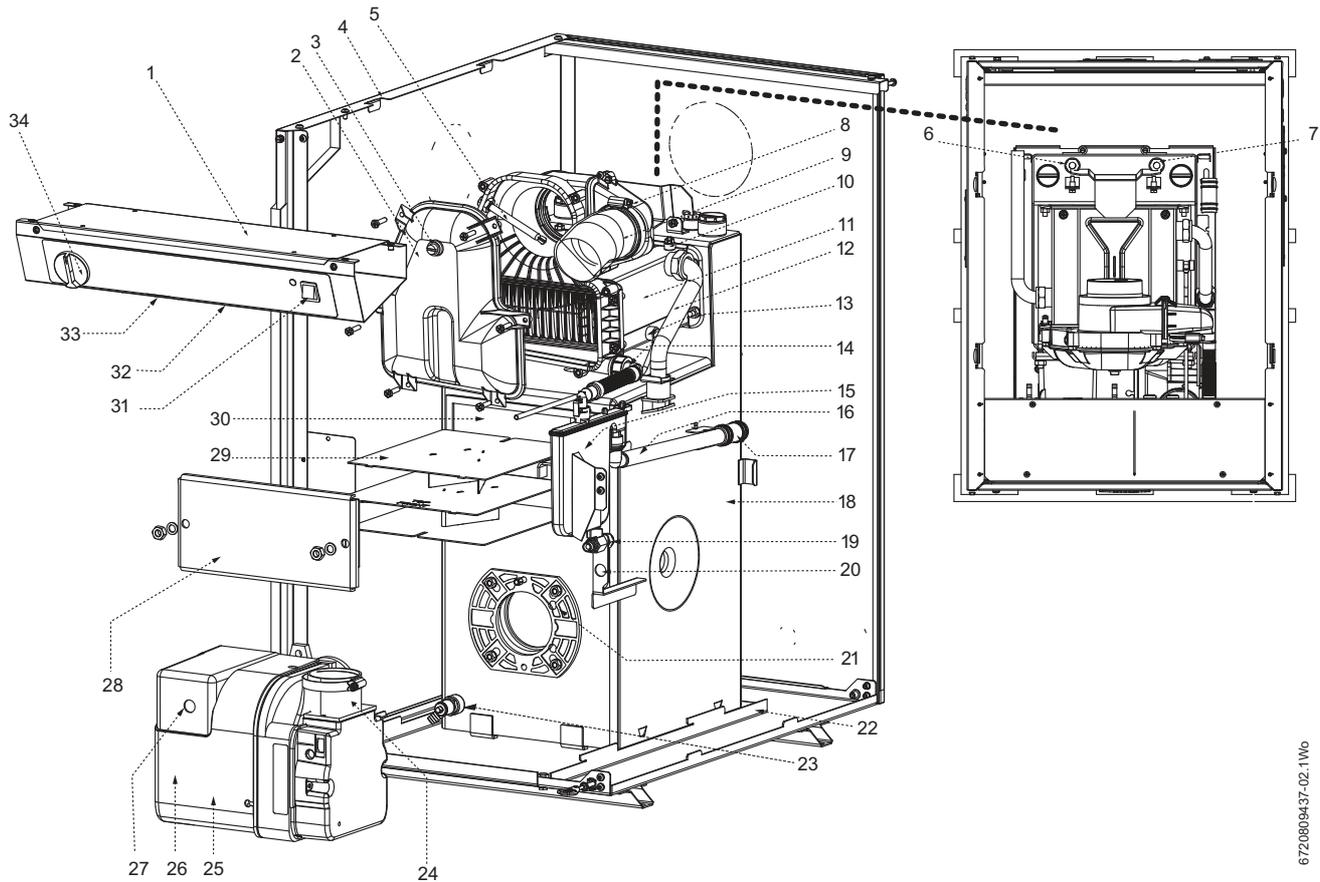


Fig. 2 18/25 Appliance shown

**Figure 2 does not include the top, front, right hand side panel and cross brace.**

1	Control box assembly	18	Primary heat exchanger
2	Flue manifold access cover	19	Oil isolating valve
3	Flue gas sampling point	20	Optional oil return position
4	Casing side panel	21	Burner mounting plate
5	Flue overheat thermostat phial	22	Base plate and oil drip tray
6	Control & manual reset overheat thermostat phial	23	Primary heat exchanger drain
7	Auto-reset high-limit thermostat phial	24	Burner air intake - connected by flexible duct (9) to air inlet casing (8)
8	Air inlet casing	25	Burner motor - behind plastic cover
9	Flexible air duct (connecting to air intake on burner)	26	Oil pump - behind plastic cover
10	Secondary heat exchanger bleed point (one on each side)	27	Lockout reset button (on front of burner control box)
11	Secondary heat exchanger	28	Combustion chamber access door (primary baffle inside)
12	Heat exchanger flow pipe	29	One piece baffle arrangement
13	Secondary heat exchanger drain	30	Combustion chamber
14	Condensate outlet	31	Mode switch
15	Condensate trap	32	Boiler overheat reset button
16	Condensate drain pipe	33	Flue overheat reset button
17	Flexible condensate drain pipe connection	34	Temperature control knob

Table 3 Appliance component details (Regular model)

### 3.5 Layout and components - 12/18 System appliance shown

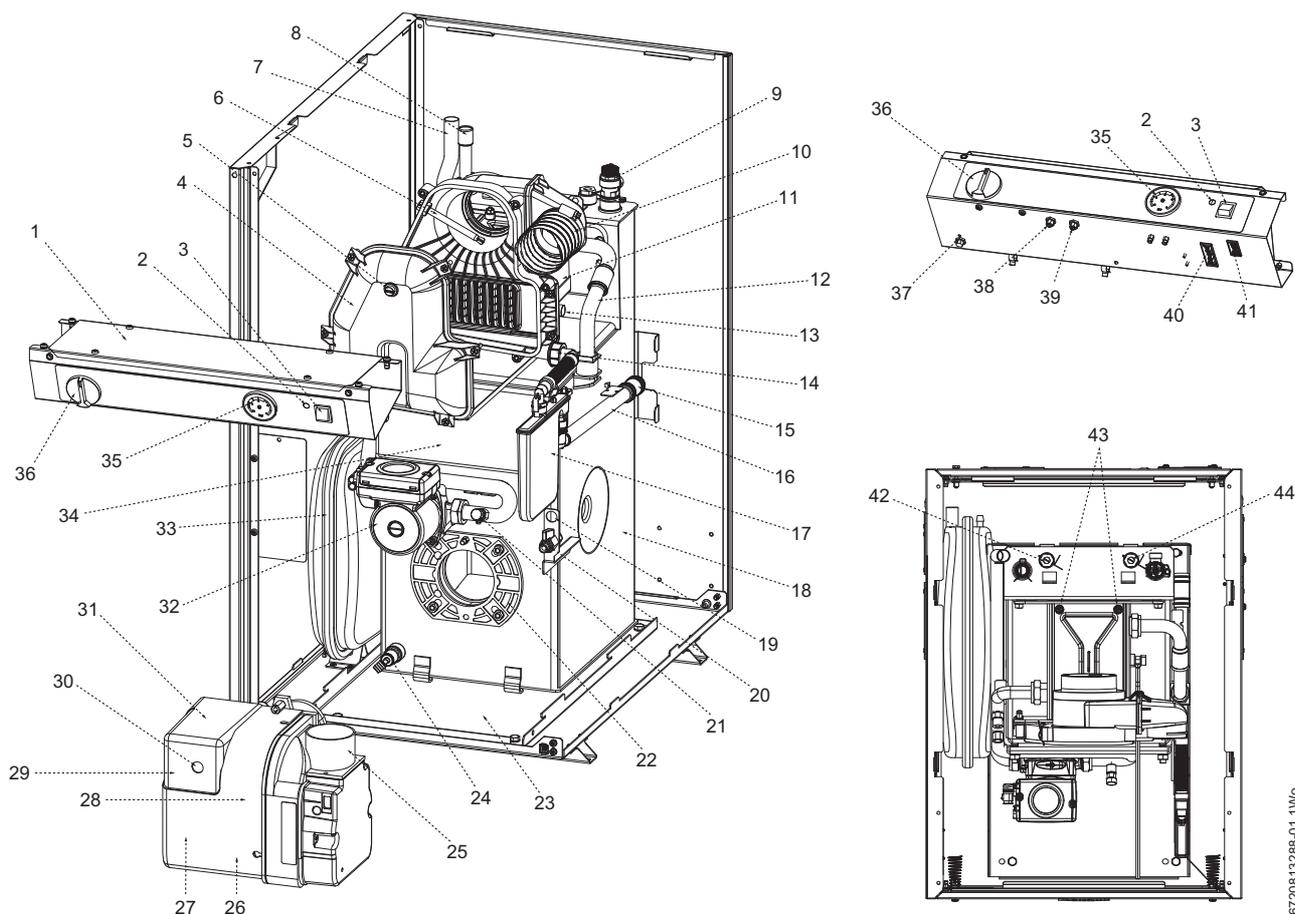


Fig. 3 Exploded system appliance view

**Figure 3 does not include the top, front, right hand side panel and cross brace.**

1	Control box assembly	24	Primary heat exchanger drain
2	Demand indicator	25	Burner air intake - connected to air inlet casing by flexible duct
3	Mode switch	26	Oil pump (behind plastic cover)
4	Flue manifold access cover	27	Riello RDB burner
5	Flue gas sampling point	28	Burner motor (behind plastic cover)
6	Flue overheat thermostat phial	29	Plastic cover
7	Return connection	30	Lock out reset button (on the front of the burner control box)
8	Flow connection	31	Burner control box (behind plastic cover)
9	Pressure relief valve	32	Circulating pump
10	Flexible air duct (connecting to air intake on burner)	33	Expansion vessel
11	Secondary heat exchanger	34	Combustion chamber access door (primary baffle inside)
12	Heat exchanger flow pipe	35	System pressure gauge
13	Secondary heat exchanger drain	36	Temperature control knob
14	Condensate outlet	37	Auto reset thermostat
15	Flexible condensate drain pipe connection	38	Flue overheat reset button
16	Condensate drain pipe	39	Boiler overheat reset button
17	Condensate trap	40	Burner lead connector socket
18	Primary heat exchanger	41	Service socket
19	Optional oil return position	42	Control & manual reset overheat thermostat phial
20	Oil isolating valve	43	Auto-reset high-limit thermostat phial
21	Pump drain point	44	Secondary heat exchanger bleed point (one on each side)
22	Burner mounting plate		
23	Base plate and oil drip tray		

Table 4 Appliance component details (System model)

## 4 Pre-Installation

### 4.1 Cleaning primary systems



**DANGER:** Danger to life through electric shock!

- ▶ Before carrying out any work on electrical components, isolate them from the power supply (230 V AC) (fuse, circuit breaker) and secure against unintentional reconnection.



**NOTICE:** Risk of damage to appliance or accessories!

- ▶ All the following pre-installation sections must be read and requirements met before starting the appliance or flue installations.



**NOTICE:** Risk of damage to system or appliance!

Debris from the system can damage the appliance and reduce efficiency. Failure to comply with the guidelines for the use of water treatment with the appliance will invalidate the appliance guarantee and contravene the Building Regulations.

- ▶ It is a requirement of the Building Services Compliance Guide which is a second tier document to the Building Regulations to flush and inhibit the primary water system in accordance with BS 7593.
- ▶ It is recommended that you fit a primary water cleanser to the system. Worcester recommends fitting a filter that will help remove both magnetite and non-magnetic debris.

#### 4.1.1 Before cleaning the system:

- ▶ Ensure that the system and pipe work is in good working order.
- ▶ **Where possible keep the existing appliance/circulating pump in place when flushing the system.**

#### Follow the guidance of BS7593:

Treatment of water in domestic hot water central heating and also the flushing guidelines below.

#### 4.1.2 Flushing the system

- ▶ Fill the system with cold water and check for leaks.
- ▶ Open vented systems only:
  - Turn off the water to the system header tank.
- ▶ Open all drain cocks and drain the system.
- ▶ Close drain cocks and add a suitable flushing agent at the correct strength for the system conditions in accordance with the manufacturer's instructions.
- ▶ Circulate the flushing agent before the boiler is fired up.
- ▶ Run the boiler/system at normal operating temperature as directed by the manufacturer of the flushing agent.
- ▶ Drain and thoroughly flush the system to remove the flushing agent and debris.
- ▶ It may be necessary to use a power flushing machine to aid the cleansing procedure in some circumstances.
- ▶ Close the drain cocks and manual air vents.
- ▶ Add a suitable inhibitor to the system in accordance with the manufacturers instructions.
- ▶ Open vented systems only:
  - Turn on the water to the system header tank and allow the system to fill.

- ▶ Sealed systems only:
  - Fill the system to between 1 and 1.5 bar via a WRAS approved filling loop.
- ▶ Vent any air from the boiler and system.

#### 4.1.3 Inhibitor

Add a suitable inhibitor or combined inhibitor/anti-freeze, if the system is exposed to freezing conditions, to the heating system in accordance with the DWTA code of practice and manufacturer's guidelines.



The inhibitor or combined inhibitor/anti-freeze must not cause damage to the materials within the boiler (mild steel, stainless steel, copper and brass) and any other materials/components within the system.

- ▶ The concentration level of inhibitor in the system should be checked every 12 months or sooner if system content is lost.



**WARNING:** Sealing agents

- ▶ In cases where all attempts to find a system micro leak have failed, Worcester, Bosch Group supports the use of Fernox F4 leak sealer.

#### Water treatment products

Suitable water treatment products can be obtain from the following manufacturers:

ADEY	01242 546700 <a href="http://www.adey.com">www.adey.com</a>
FERNOX	0330 100 7750 <a href="http://www.fernox.com">www.fernox.com</a>
SENTINEL	01928 704330 <a href="http://www.sentinelprotects.com/uk">www.sentinelprotects.com/uk</a>

#### 4.1.4 Artificially softened water

It is possible to have an ion exchange water softener fitted to the cold water system of the property. However, the boiler requires an untreated cold water connection taken from the mains supply, before the water softener, to the primary water filling point of the heating system.

Alternatively there are water softening/treatment devices that do not adjust or alter the pH levels of the water. With these devices it may not be necessary to provide an untreated water by-pass to the primary water filling point of the heat system.



**NOTICE:**

- ▶ Salt based, softened water must not be used to fill the central heating system.

## 4.2 Mains supply

### 4.2.1 Electrical supply

- Supply: 230V - 50 Hz
- Cable: PVC insulated 0.75 mm<sup>2</sup> (24 x 0.2mm) temperature rated to 90°C.
- Circuit breaker incorporating earth leakage protection.
- External 5A fuse to BS1362.
- The appliance must be earthed.
- This appliance must not be connected to a three phase supply.
- Wiring must comply with the latest IET wiring regulations.
- It must be possible to isolate the appliance from the electrical supply with at least a 3mm contact separation in both poles supplying the appliance.
- Wiring between the appliance and the electrical supply must comply with IET wiring regulations and any local regulations that may apply for fixed wiring to a stationary appliance.
- Any system connected to the boiler must not have a separate electrical supply.

## 4.3 Oil supply



**NOTICE:** Contaminated oil supplies can damage the appliance.  
Failure to ensure that the oil supply is clear of contaminants may invalidate the appliance warranty.

- ▶ Ensure the oil supply is free of contaminants and measures are taken to prevent contamination of the appliance.



**NOTICE:** Liquid fuel supply pipes should be provided with mains equipotential bonding in accordance with BS 7671.

- **This appliance is suitable for Kerosene (Class C2) only, no other fuel must be used.**
- Plastic or steel tanks must be installed to BS 5410.  
A steel tank should conform to BS 799: part 5 and have a slope of 1:24 away from the outlet with a sludge cock at the lower end.
- **Do not use galvanised steel tanks or pipework for the oil system.**
- **Do not use soldered joints on the oil supply pipework.**

#### Key to Oil supply illustrations, figures 4, 5 & 6

1	Oil storage tank
2	Full base (plastic tank)
3	Isolating valve
4	Oil strainer and water separator
5	Fire valve to BS 5410
6	External boiler casing
7	Oil filter (70µm max filtration size)
8	Fire valve sensor
9	Oil pump
10	Oil burner
11	Non-return valve
12	De-aerator
13	Appliance isolation valve

Table 5 Key to oil supply feed system

### 4.3.1 Single pipe gravity feed system:

The oil storage tank [1] must be positioned so that the oil level does not exceed 4 metres above the level of the burner oil pump [9] and in addition the oil level must be at least 300mm above the oil pump [9]. Where the maximum oil level in the oil storage tank exceeds 4 metres, a head breaking device must be installed between the tank [1] and the burner oil pump [9].

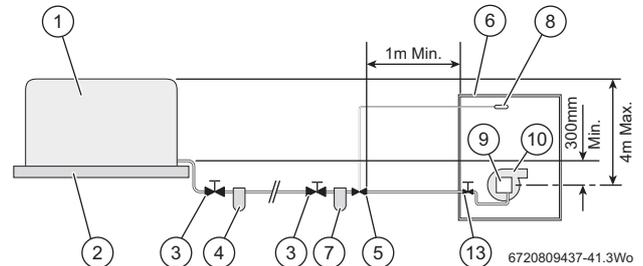


Fig. 4 Single pipe feed



All dimensions are in metres unless otherwise stated. The maximum pipe run figures are based on using copper pipe with an inside diameter of 2mm less than the outside diameter.

#### Maximum pipe run for single pipe gravity fed system

Head (m)	10mmØ	12mmØ	Head (m)	10mmØ	12mmØ
0.5	12	30	2.5	62	100
1.0	25	69	3.0	74	100
1.5	37	91	3.5	87	100
2.0	49	100	4.0	99	100

### 4.3.2 Double pipe sub-gravity feed system:

Maximum suction height 3.5 m. Non-return valves must be fitted to the inlet and return oil line between the oil pump [9] and oil storage tank [1].

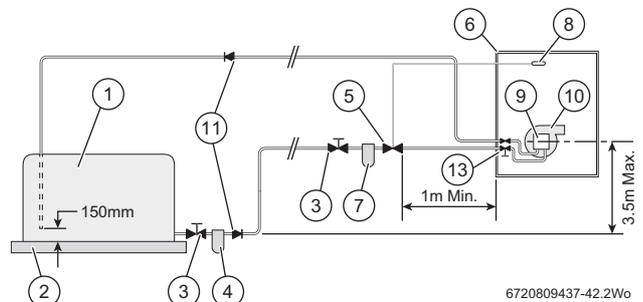


Fig. 5 Double pipe feed

#### Maximum pipe run for double pipe sub-gravity feed system

Head (m)	10mmØ	12mmØ	Head (m)	10mmØ	12mmØ
0	50	100	2.0	26	66
0.5	44	100	2.5	20	50
1.0	38	95	3.0	14	37
1.5	32	80	3.5	8	22

### 4.3.3 Single pipe suction lift with de-aerator:

Maximum suction height 3.5 metres. The oil tank [1] must be positioned below the oil pump [9]. Create an inlet and return loop between the de-aerator [12] and oil pump [9].

A non-return valve must be incorporated within the de-aerator or fitted to the oil line between the oil storage tank [1] and the de-aerator [12].

A top feed oil tank fitted with a de-aerator using an internal non-return valve should have any non-return valves fitted in the base of the tank to the suction line removed to assist purging air from the oil line.

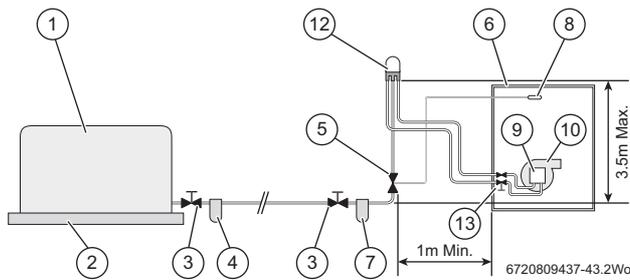


Fig. 6 De-aerator feed

#### Maximum pipe run for single pipe suction lift with de-aerator

Head (m)	FUEL FLOW RATE			
	2.5kg/h 8mmØ	5kg/h 8mmØ	10kg/h 8mmØ	10kg/h 10mmØ
0	100	55	26	100
0.5	95	45	23	100
1.0	80	40	20	90
1.5	70	35	17	75
2.0	60	30	14	65
2.5	45	25	11	50
3.0	35	15	8	35
3.5	25	10	5	20



The table and illustration above is a guide only and does not in any way override the de-aerator manufacturer's instructions.

#### 4.3.4 Pipework

- ▶ Refer to the oil supply sections Single pipe gravity feed system: 4.3.1, Double pipe sub-gravity feed system: 4.3.2 & Single pipe suction lift with de-aerator: 4.3.3 for oil supply pipework configurations.

Oil supply pipework considerations:

- Lay the oil supply pipe as straight and level as possible to avoid air pockets and unnecessary friction losses.
  - Route away from the boiler access door or other hot surfaces.
- Install a manual isolating valve to the oil supply pipe, as close to the oil storage tank as possible.
- Fit an oil strainer and water separator to the oil supply pipe, near the oil storage tank.
  - Fit an additional oil filter (70 µm max filtration size) close to the boiler, but not inside the boiler casing.
- Fit a fire valve in accordance with BS 5410.
  - The fire valve should be fitted externally to the building and appliance with the fire valve sensor located within the appliance case.
  - A fire valve with a shut off temperature of 85°C or higher must be fitted to avoid the possibility of nuisance shut offs.
  - A capillary type valve provides a neat and simple installation. Alternatively, a fusible link or electrical system may be used.
- Under no circumstances should a combination isolating/fire valve be used as the sole fire protection device.

#### 4.3.5 Boiler isolation valve

- ▶ Use copper pipe of the correct diameter according to the information shown in oil supply sections 4.3.1, 4.3.2 & 4.3.3.
  - If using soft copper pipe (R220) with a compression fitting, an insert must be used to prevent the pipe from collapsing or distorting when the fitting is tightened.
- ▶ Slide nut [1] and olive [5] onto the oil supply pipe [4].
- ▶ Slide insert [3] into the pipe.

- ▶ Offer the pipe to the fitting [2] and tighten the nut [1].

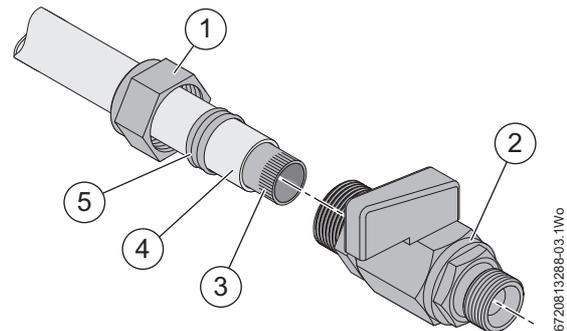


Fig. 7 Isolation valve bracket removed for clarity

- ▶ Use flexible hoses to the oil pump.

## 4.4 Water systems and pipework



#### NOTICE:

- ▶ The boiler should not be allowed to operate with a return temperature of less than 30°C when the system is up to operating temperature.



Oil burners cannot modulate to accommodate a reduction in heating loads. If the heating load can be significantly reduced due to TRV's or zoning of the heating circuits, consideration should be given as to how short cycling of the burner could be prevented. Burner run times should remain greater than 2 minutes during normal operation. A buffer vessel or thermal store should be considered to help prevent excessive short cycling of a single appliance, or a low loss header could be used to divide the heating duty between multiple lower output appliances.

#### Primary system plastic pipework:

- Any plastic pipework used for the CH system must have a polymeric barrier, complying with BS 7921 and installed to BS 5955 with 1000mm (minimum) length of copper or steel pipe connected to the boiler.
- Plastic pipework used for underfloor heating must be correctly controlled with a thermostatic blending valve limiting the temperature of the circuits to approximately 50°C with 1000mm (minimum) length of copper or steel pipe connected to the boiler, and a 20K differential must be maintained at the appliance.

#### Primary system/connections/valves:

- Do not use galvanised pipes or radiators.
- All system connections, taps and mixing valves must be capable of sustaining a pressure of 3 bar.
- Radiator valves should conform to BS 2767:10.
- All other valves should conform to BS 1010.
- An automatic bypass valve must be connected between the heating flow and return where TRVs are used on all radiators, fitted to give at least a 3 metre circuit when activated.
- Drain cocks are required at all the lowest points on the system.
- Air vents are required at all high points on the system.

**Open vent primary system (regular only)**

- The open vent pipe [F] and feed and expansion pipe [H] must rise continuously from the appliance.
- The feed and expansion cistern [E] must be positioned to provide a static head [S] of at least 1 metre above the highest point in the heating system to the water level in the feed and expansion cistern [E].
- Ensure adequate space is left in the expansion cistern for expansion of the system water.
- No valve shall be fitted in the open vent pipe (F) or the feed and expansion pipe [H].
- The open vent pipe [F] must be at least 22mmØ.

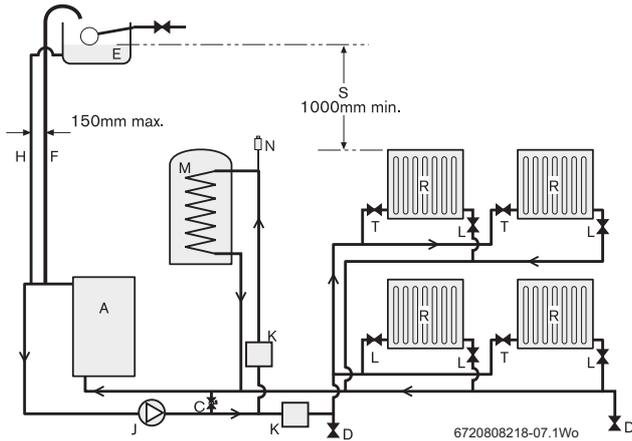


Fig. 8 Regular appliance open vent layout

- [A] Regular appliance
- [A1] System appliance
- [B] Expansion vessel\*
- [C] Automatic bypass valve
- [D] Drain cock
- [E] Feed and expansion cistern
- [F] Open vent 22mmØ min.
- [G] Pressure gauge\*
- [H] Feed and expansion 15mmØ min.
- [J] Circulating pump\*
- [K] Zone valves
- [K1] Three port valve
- [L] Lockshield valve
- [M] Hot water cylinder
- [N] Automatic air vent
- [P] Pressure relief valve\*
- [P1] Pressure relief discharge
- [R] Radiators
- [T] Thermostatic radiator valve TRV
- [U] To filling system
- [NOTE] \* Components included internally on the system boiler

**Fully pumped sealed primary system:**

- A pressure relief valve [P], spring loaded safety valve set to operate at 3bar, must be fitted to the heating flow pipe as close as possible to the boiler or onto one of the boiler top 1" BSP outlets.
- An expansion vessel [B] must be fitted to the heating return pipe as close as possible to the boiler and pressurised for the system volume according to the instructions supplied with the vessel.
- A pressure gauge [G], 3 bar minimum, must be fitted to the heating flow pipe or one of the boiler 1" BSP outlets.
- An automatic air vent [N] must be fitted.

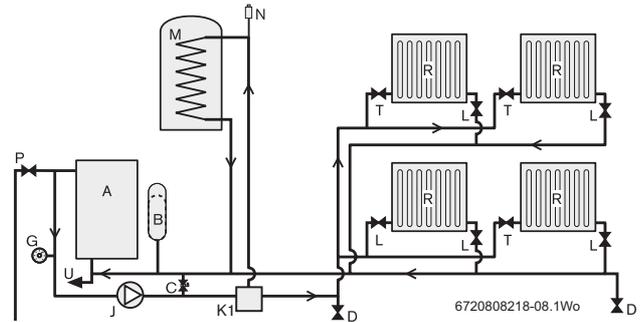


Fig. 9 Regular appliance system layout

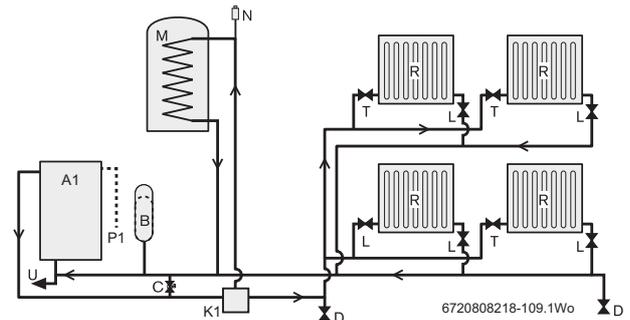


Fig. 10 System appliance system layout

**Filling primary sealed systems**

**NOTICE: FILLING THE SYSTEM**

▶ The system must not be filled with salt based, softened water.

- Where the system volume is more than 180 litres at 0.5 bar or exceeds 2.65 bar at maximum heating temperature an extra expansion vessel [B] figure 10 must be fitted as close as possible to the appliance in the central heating return.
- Pressurise the extra expansion vessel [B] figure 10 to the same figure as the expansion vessel built into the appliance (system boilers).
- Filling the system must comply with the method shown in figure 11.
- The filling point must be at low level and must never be a permanent connection to the mains water supply.
- Filling loops must be WRAS approved.

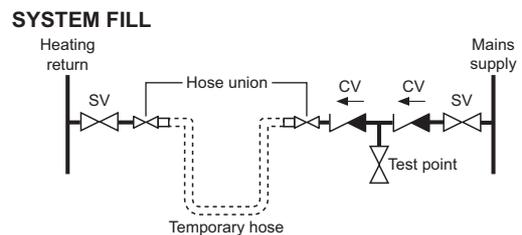


Fig. 11 System fill

- [SV] Stop valve
- [CV] Check valve

### 4.5 Condensate pipework

**NOTICE:**

- ▶ Where a new or replacement boiler is being installed, access to an internal "gravity discharge" point should be one of the factors considered in determining boiler location.
- ▶ The condensate pipe must be nominally 21.5mm Ø Polypropylene pipe.
- ▶ The condensate pipe work must fall at least 52mm per metre towards the outlet and should take the shortest practicable route.
- ▶ Ensure there are no blockages in the pipe run.

**NOTICE:** Rainwater or external drain disposal

Untreated condensate must not be allowed to flow into streams or rivers

- ▶ A rainwater down pipe or an external drain shall only be used for condensate disposal if the down pipe or external drain is connected to a combined foul and rainwater system
- ▶ Refer to BS 6798 for more information

**NOTICE:** Grey water systems

Contamination of recovered water

- ▶ Condensate disposal shall not be allowed into a grey water recovery system that is intended for re-use

**NOTICE:** Freezing conditions

- ▶ Pipe work length should be kept to a minimum and the route as vertical as possible.
- ▶ When required, use only weather proof insulation.

**NOTICE:** Condensate waste

- ▶ Care should be taken when siting a soak-away to avoid obstructing existing services.

Externally run condensate drainage pipe should terminate at a suitable foul water discharge point, or purpose-designed soak away. If this method is chosen then the following measures should be adopted:

- ▶ The external run be kept as short as possible and not exceed three metres.
- ▶ The pipe diameter should be increased to 32mm and should be insulated using suitable waterproof and weather resistant insulation.
- ▶ The external pipe should take the shortest and least exposed route to the discharge point, and should "fall" as steeply as possible away from the boiler, with no horizontal runs in which condensate might stand.
- ▶ The use of fittings, elbows etc. should be kept to a minimum and any internal "burrs" on cut pipe work should be removed so that the internal pipe section is as smooth as possible.

#### 4.5.1 Condensate disposal connections

**i** Condensate drainage pipe can be run above or below ground.

Key to condensate illustrations	
1	Condensate discharge from boiler
2	Push fit connector
3	Soil and vent stack
4	Minimum 450mm and up to three storeys
5	Pipe work transition
6	Insulate and increase pipe size
7	External rain water pipe into foul water
8	External air break
9	43mm pipe (min 100mm upstand)
10	PVCu strap on fitting
11	43mm 90° male/female bend
*	Condensate trap of 75mm already incorporated into the boiler

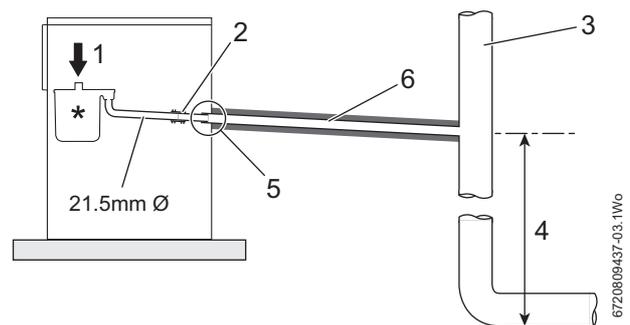


Fig. 12 Disposal to a soil vent stack

#### Fitting an external air break

- Refer to figure 13 when a rain water down pipe is used to dispose of condensate.
- An air break must be installed in the 43mm pipe work, between the boiler condensate outlet and the drainpipe, outside the property, to avoid flooding during adverse weather conditions.

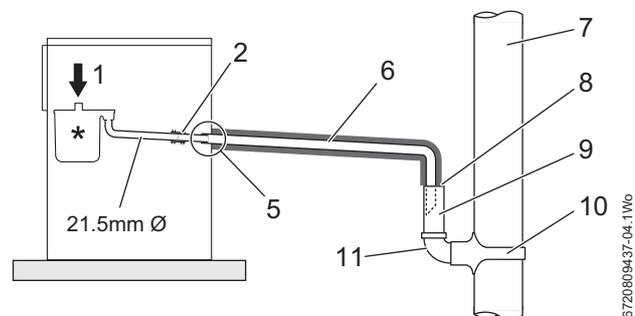


Fig. 13 Disposal into a rainwater down pipe

Where the pipe terminates over an open drain or gully, the pipe should terminate below the grating level, but above water level, in order to minimise "wind chill" at the open end.

The use of a drain cover (such as those used to prevent blockage by leaves) may offer further protection from wind chill.

Pipe drainage will be improved if the end is cut at 45° as opposed to a straight cut.

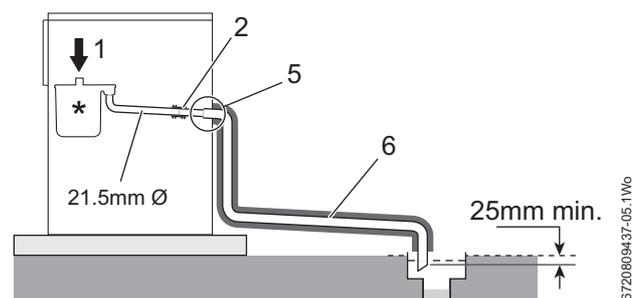


Fig. 14 External drain

**4.5.2 Soak away**

**NOTICE:** Condensate waste  
 ▶ Care should be taken when siting a soak-away to avoid obstructing existing services.

- The condensate drainage pipe may be run above or below ground to the soak away. The examples shown on this page run above ground.
- The soak away must use a 100mm Ø plastic tube with two rows of three 12mm holes on 25mm centres and 50mm from the bottom of the tube. The holes must face away from the house.
- The tube must be filled with and surrounded by at least 100mm of limestone chippings to a depth of 400mm.

**i** Minimum hole size for the condensate soak away must be 400mm deep by 300mmØ .

In situations where there are likely to be extremes of temperature or exposure, the use of a proprietary trace-heating system for external pipe work, incorporating an external frost thermostat, should be considered. If such a system is used, the requirement to use 32mm pipe does not apply. However, all other guidance above and the instructions for the trace heating system, should be closely followed.

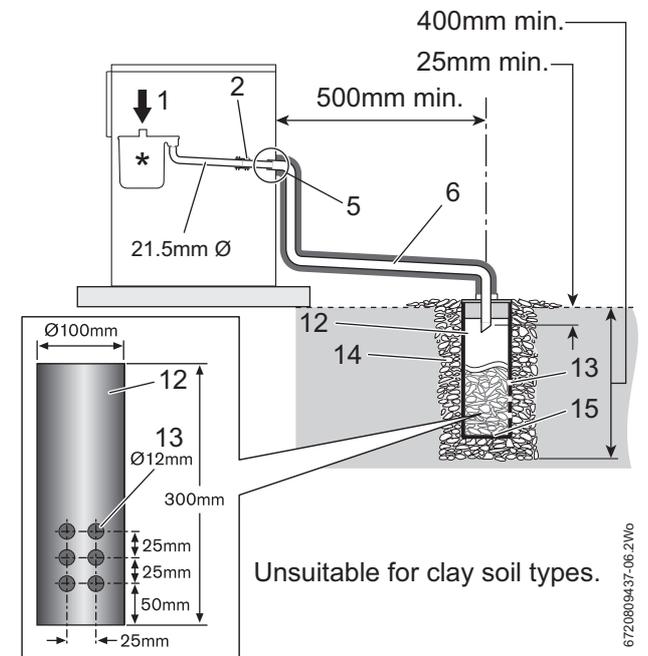


Fig. 15 Disposal to a soakaway

Key to condensate soakaway	
1	Condensate discharge from boiler
2	Universal connector
5	Pipe work transition
6	Insulate and increase pipe size
12	100mm Ø minimum plastic pipe
13	Drainage holes
14	Limestone chippings (25kg min.)
15	Bottom of sealed tube
*	Condensate trap of 75mm already incorporated into the boiler

**4.6 Pressure relief pipework**

- The pressure relief discharge pipe [2] should be at least 15 mm diameter copper pipe and run downwards away from the boiler and discharge away from any electrical or other hazard, preferably to an external drain or soakaway.

- Pipe [2] should be finished with a partial bend, near the outlet to prevent discharge onto entrances or other public access where it could cause a hazard.

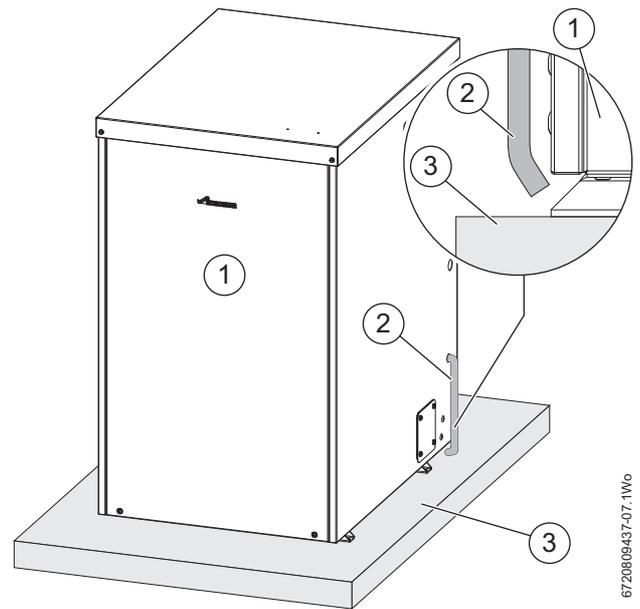


Fig. 16 Pressure relief pipe work

- [1] External casing
- [2] PRV discharge pipe
- [3] Hardstanding

6720809437-07.1W6

### 4.7 Boiler locations and clearances



**WARNING:** This appliance should not be installed where there is a potential for excessive ground water coverage. This boiler is only suitable for installing externally at a suitable location onto a fixed permanent rigid, non-combustible surface capable of supporting the boiler weight. There must be a sufficient hard standing around the appliance to allow for servicing. The boiler must be installed on a flat level surface to ensure that condensate does not enter the primary heat exchanger. Tarmac and wood hardstandings are not recommended.

**Clearances:**

- ▶ Minimum service and flue clearances.
  - Above - 600mm
  - Front - 600mm
  - RH clearance flue outlet on rear - 300mm
  - LH clearance flue outlet on rear - 300mm
  - Rear clearance flue outlet on side - 50mm
  - Rear clearance flue outlet on rear 2500mm

It is strongly recommended that the flue terminal faces away from walls to reduce the possibility of wetting occurring.

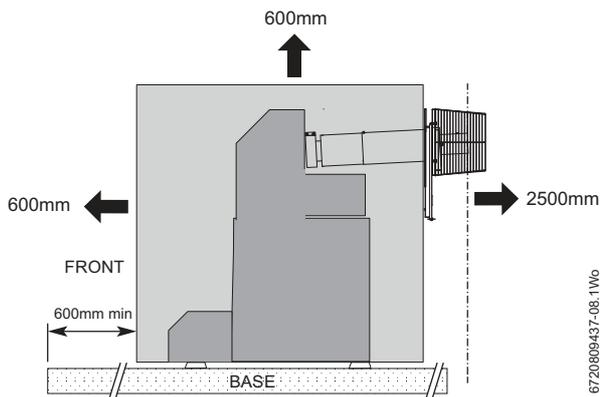


Fig. 17 Above clearance

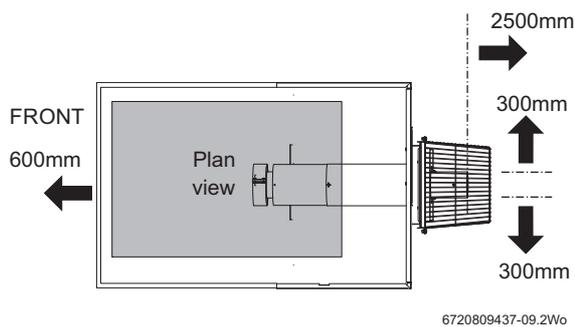


Fig. 18 Rear exit flue clearances

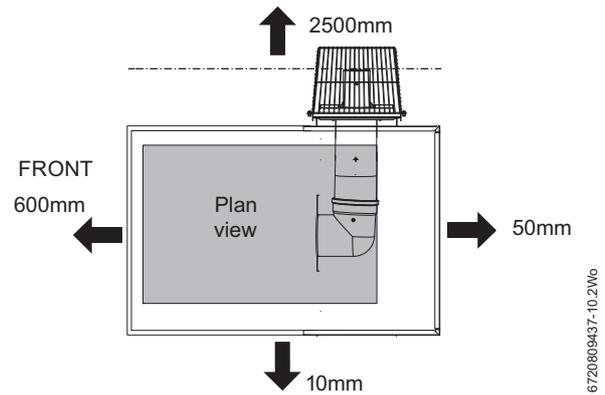


Fig. 19 Left exit flue clearances

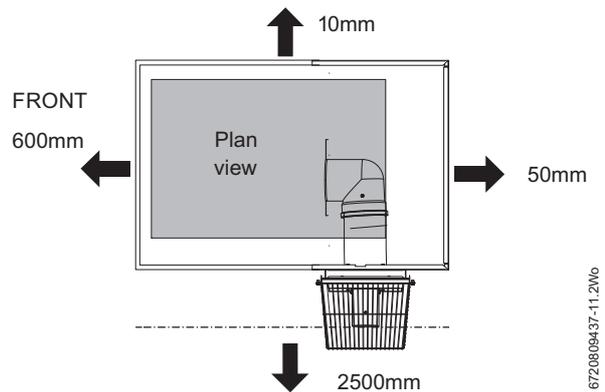


Fig. 20 Right exit flue clearances

## 4.8 Flue gas system considerations



**CAUTION:** Non accessible flue systems:

- ▶ Where a flue system is not going to be accessible, provision must be made for service and inspection.
- ▶ Flue gas system must comply with local standards and regulations.

### Room air dependant operation

The boiler primarily operates as a “room air sealed” unit, however the boiler can be operated as a “room air dependant” unit, if required.

Provide sufficient boiler room ventilation when operating the appliance room air dependent.

- ▶ Do not obstruct or block any ventilation openings.
- ▶ Ventilation openings must always be kept clear.

#### 4.8.1 Combustion air quality

To avoid corrosion, combustion air must be free from aggressive substances (e.g. hydrogen halide, chlorines and fluorine).



**NOTICE:** Damage to appliance from contaminated combustion air and contaminated air in the vicinity of the appliance!

- ▶ Never operate the boiler in a dusty chemically aggressive environment i.e. spray painting, hair dressing and farming facilities.
- ▶ Never operate the boiler in places where using or storing trichlorethane, hydrogen halide and other aggressive chemical substances. These substances can be contained in spray cans, various glues, primers, paints and cleaning substances. In this case, the appliance must be connected in a room sealed configuration.


#### 4.8.2 Flue terminal positions



All measurements are the minimum clearances required

- Flue terminals must be positioned to avoid combustion products entering into buildings.
- The flue must be fitted and terminated in accordance with the recommendations of the latest version of BS 5410:1.
- The flue must not cause an obstruction.
- Discharge from the flue outlet must not cause a nuisance or dispute.
- Flue gases have a tendency to plume and in certain weather conditions a white plume of condensation will be discharged from the flue outlet which could be regarded as a nuisance, for example, near security lighting.
- There should be no restriction preventing the clearance of combustion products from the terminal.
- The air inlet/outlet duct and the terminal of the boiler must not be closer than 25mm to any combustible material. Detailed recommendations on protection of combustible materials are given in the latest version of BS 5410:1.
- Where a vertical flue terminates in an area that is enclosed on 3 sides, the flue must be no more than 1,000mm below the lowest roof line. You must ensure that all clearances are maintained and that products of combustion disperse safely from the area.
- Dimensions from a flue terminal to a fanned air inlet to be determined by the ventilation equipment manufacturer.
- A protective stainless steel terminal guard, must be fitted if the terminal is 2 metres or less, above a surface where people have access.
- See “Contact Information” on the back cover for flue guard information.

- Avoid discharging flue gases into car ports or narrow passageways.

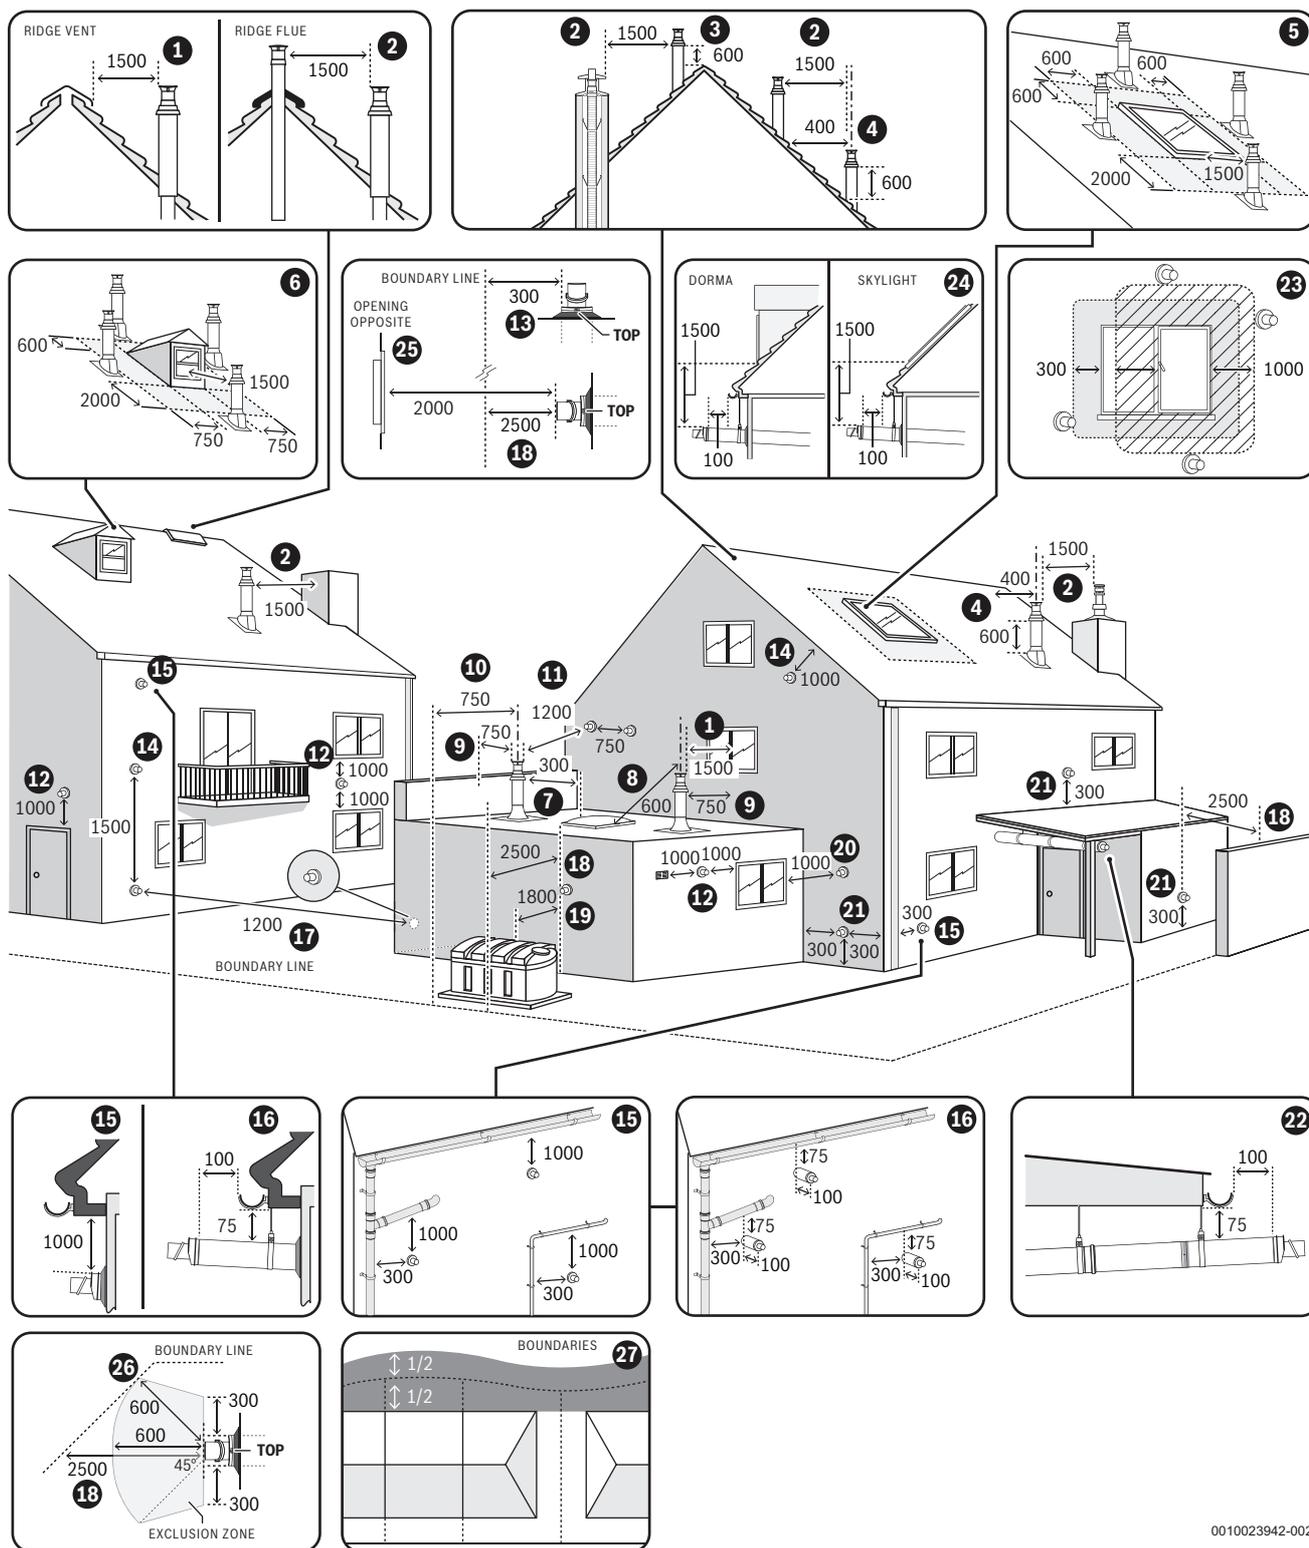

0010023942-002

Fig. 21 Flue terminal positions



**NOTICE:**

- ▶ All measurements are the minimum clearances required.
- ▶ Terminals must be positioned so to avoid combustion products entering the building.
- ▶ Support the flue at approximately one metre intervals and at a change of direction, use suitable brackets and fittings:  
- flue bracket 125mm x 1- Part No.: 7 716 191 179
- ▶ In spite of the dimensions given here, the terminal must not be closer than 300mm to combustible material, in the case of a thatched roof double this dimension.
- ▶ Terminals must be positioned so to avoid products of combustion accumulating in stagnant pockets around the building or entering the building.
- ▶ Terminals must be at least 1.8m from an oil storage tank unless a wall with of at least 30 minutes fire resistance and extending 300mm wider and higher than the tank is between the tank and the terminal.

**Key to illustration 21:**

1. 1,500mm measured between an opening or vented window and vertical flue terminal. This measurement can be reduced to 1000mm providing the flue terminal is at least 300mm above the opening.
2. Minimum clearance to an additional flue, 1,500mm between room sealed flues or room sealed flue and open flue, 1,000mm between open flues.
3. 600mm above a vertical structure less than 750mm from the side of the terminal.
4. The flue must extend at least 600mm above the intersection of the roof (flat and pitched) and be 400mm horizontally from a pitched roof or 500mm in regions with heavy snow fall
5. The flue must not penetrate the roof in the shaded area. The flue must be at least 2,000mm from the opening or vent when sited below the window, 600mm when sited to either side or above. The terminal must be at least 1,500mm room sealed, 1,000mm open flue from the opening or vent when measured horizontally.
6. The flue must not penetrate the roof in the shaded area. The flue must be at least 1,000mm from the opening or vent when sited below the window, 750mm when sited to either side and 300mm above. The terminal must be at least 1,500mm room sealed, 1,000mm open flue from the opening or vent when measured horizontally.
7. 300mm minimum clearance measured from a non opening skylight to a vertical flue. Vertical flue clearance,
8. 600mm minimum clearance measured from an opening or vented skylight to a vertical flue. If the terminal is within 1,500mm of the opening or vented skylight then it must be at least 600mm above the opening.
9. 750mm clearance to a structure from a vertical flue.  
Not required if the terminal is 600mm above the structure.
10. 750mm adjacent to a boundary line unless it will cause a nuisance. BS 5410: Part 1 recommended that care is taken when siting terminal in relation to boundary lines.
11. 1,200mm separation measured between a vertical flue and a horizontal flue terminal. Not required if the horizontal flue is 1,500mm above vertical flue terminal.
12. 1,000mm (BS 5410-1) above, below and either side of an opening door, air vent or opening window. These clearances are required by BS 5410 Part 1 to reduce a possible plumbing nuisance. If 1,000mm cannot be achieved then the distance can be reduced to 600mm to comply with Approved Document J of the building regulations if it will not cause a nuisance or dispute.

13. 300mm adjacent to a boundary line unless it will cause a nuisance. BS 5410: Part 1 recommended that care is taken when siting terminal in relation to boundary lines.
14. 1,500mm vertically between terminals and the same wall.
15. 1,000mm (BS 5410-1) below eaves, gutters and sanitary pipe and 300mm from vertical sanitary pipes and drains.  
If 1,000mm cannot be achieved then the distance below eaves, gutters and sanitary pipe can be reduced to comply with Approved Document J of the building regulations if it will not cause a nuisance or dispute. 75mm if combustible material is protected or 600mm without protection to combustible material. <sup>1)</sup>
16. The dimension below eaves, gutters, pipes and drains can be reduced to 75mm, as long as the flue terminal is extended by 100mm past any overhang. The telescopic flue joint must be sealed with suitable silicone sealant if it is external to the building
17. 1,200mm between terminals facing each other.
18. 2,500mm (BS 5410-1) distance to a surface or boundary line. If 2,500mm cannot be achieved then the distance can be reduced to 600mm to comply with Approved Document J of the building regulations if it will not cause a nuisance or dispute.
19. Terminals must be at least 1,800mm from an oil storage tank unless a wall with of at least 30 minutes fire resistance and extending 300mm wider and higher than the tank is between the tank and the terminal. The flue air intake must be at least 900mm away from the oil storage tank vent.
20. 1000mm diagonally to an opening door, air vent or opening window.
21. 300mm to an internal or external corner. 300mm above a surface, such as the ground/ floor level or roof surface.
22. The dimension below eaves, balconies and car ports can be reduced to 75mm, as long as the flue terminal is extended to clear any overhang. The telescopic flue joint of the terminal must be sealed with suitable silicon sealant if it is external to the building.
23. 1,000mm (BS 5410-1) from an opening or vented window, 300mm to a fixed unvented window. If 1,000mm cannot be achieved then the distance from an opening or vented window can be reduced to 600mm to comply with Approved Document J of the building regulations if it will not cause a nuisance or dispute.
24. The flue terminal must be at least 1,500mm from the opening or vented skylight when sited below the opening or vented skylight.
25. Proximity of flue duct outlet to boundaries, 2000mm distance to an opening in adjacent building facing a terminal. BS 5410: Part 1 recommended that care is taken when siting terminal in relation to boundary lines.
26. The distance between a boundary facing a flue terminal can be measured diagonally from the point of discharge with a minimum distance of 600mm which must be maintained. The exclusion zone ensures compliance with Approved Document J of the building regulations.
27. For the purpose of determining suitable flue terminal positions for oil appliances discharging over public boundaries, the boundary can be considered to extend to the centre line of any adjacent routes or waterways e.g. paths, streets, rights of way, canals, rivers or railways.



**NOTICE:**

- ▶ Installations in car ports are not recommended.
- ▶ Dimensions from a flue terminal to a fanned air inlet to be determined by the ventilation equipment manufacturer.

1) A way of providing protection of combustible material would be to fit a heat shield at least 750mm wide.

## 4.9 Flue options


**i** Only the flue kit provided and the additional plume kit options are approved for use with this appliance.

### 4.9.1 Cabinet mounted balanced horizontal flue options


**i** It is strongly recommended that the flue terminal faces away from walls to minimise the occurrence of wetting.

- The horizontal flue is fitted to the rear or either side of the cabinet.

#### REAR FLUE OUTLET

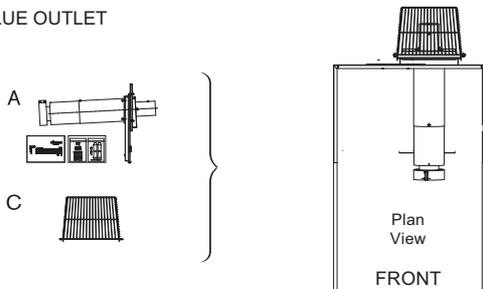

#### LEFT HAND FLUE OUTLET

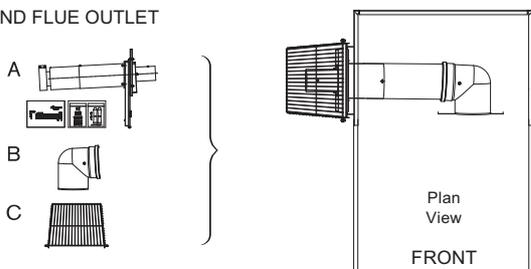

#### RIGHT HAND FLUE OUTLET

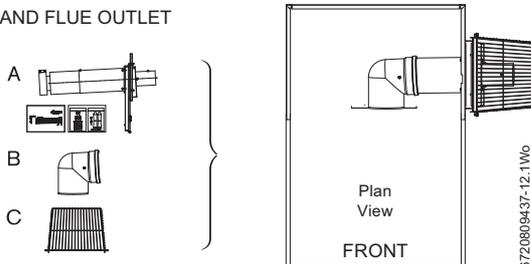


Fig. 22 Flue options

### 4.9.2 Plume management

**NOTICE: Flue length:**

- The flue length of all the external boilers using this plume management application will be in the range of 160 to 5000mm.

Effective lengths of elbows		
Bend	Flue	Plume
90°	1000mm	1000mm
45°	500mm	500mm

Table 6 Effective lengths of bends

#### Fitting the terminal plume management kit

- Remove and retain the screws that secure the terminal end into the flue.
- Discard the terminal end.
- Fit the terminal elbow into the flue but do not secure with the screws until the plume management system has been assembled.

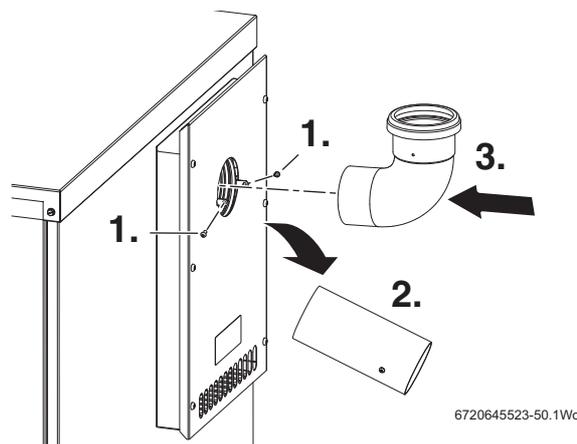


Fig. 23 Fitting the terminal bend

- Connect the sections of the plume management for desired length.
  - Screw the clamp into the wall.
  - Push the extension/s tube fully into the 90° bend, then withdraw the tube by approximately 10mm to allow for expansion.
- Once the plume management system is in place and secured to the wall, secure the terminal bend with the screws removed earlier.
  - The terminal end can be positioned up to 45° either side of the central position, for plume re-direction.
  - Adjust the plume management terminal end into the desired position and secure with the screws provided.

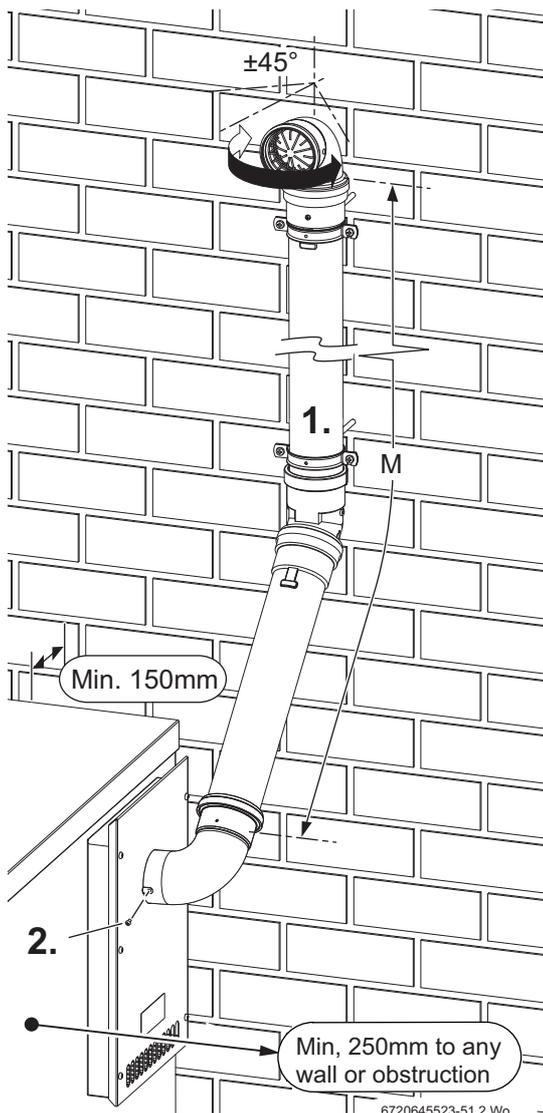


Fig. 24 Plume management detail

**4.9.3 Plume management considerations**

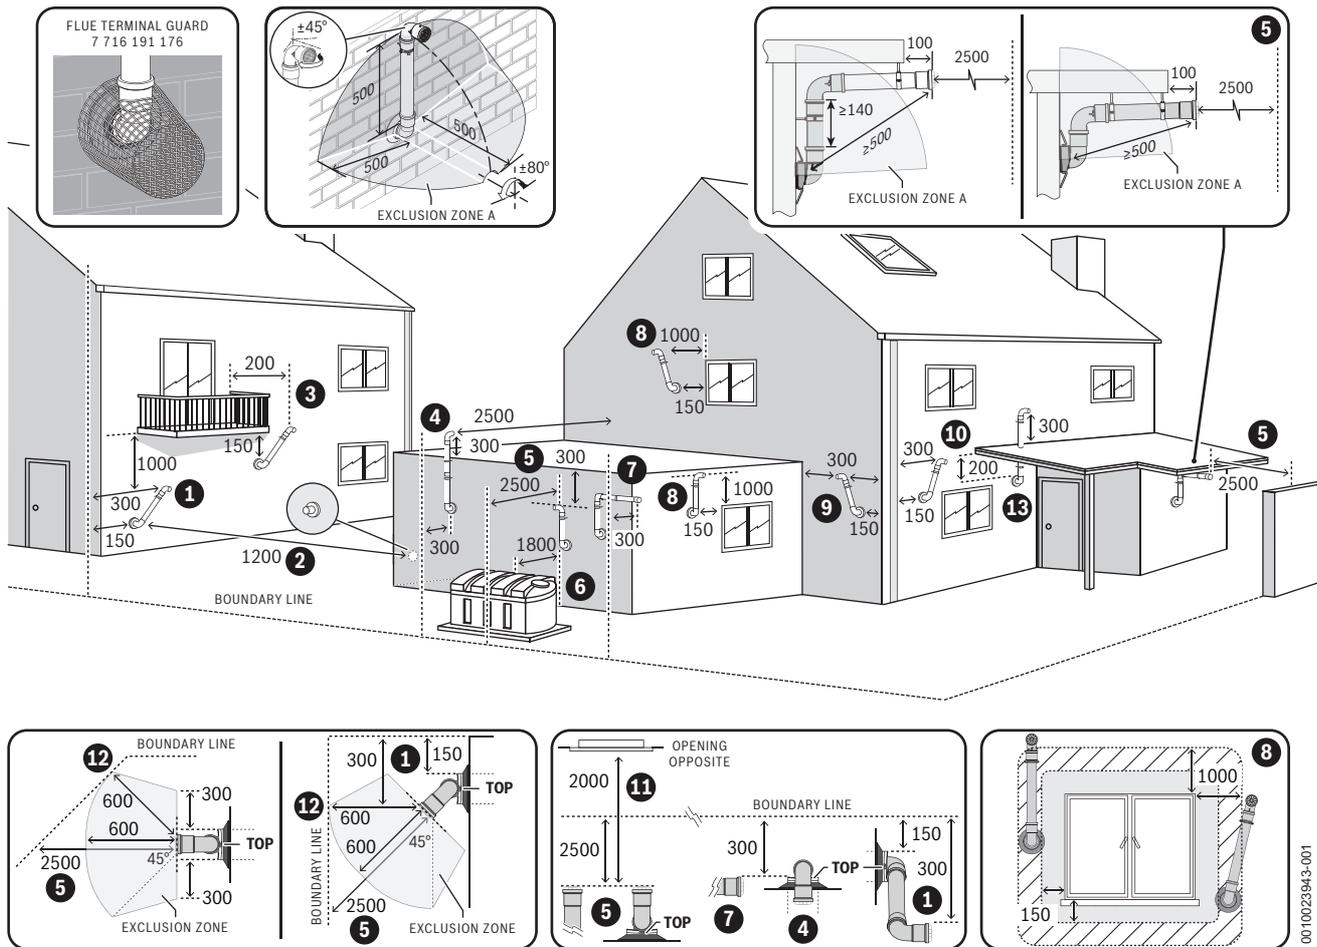


Fig. 25 Plume terminal positions



**NOTICE:**

- ▶ All measurements are the minimum clearances required.
- ▶ Terminals must be positioned so to avoid combustion products entering the building.
- ▶ Support the flue at approximately one metre intervals and at a change of direction, use suitable brackets and fittings.

**KEY TO ILLUSTRATION**

1. Plume Management kit air intake can be reduced to 150mm providing the flue exhaust outlet is no less than 300mm adjacent to a boundary line.
2. 1,200mm between the terminals on opposing walls. Where two plume management kits are used 1200mm must be maintained between both opposing terminals and air inlets. Each terminal should use a minimum length of 500mm plume management
3. Below balcony or overhang. The air intake clearance can be reduced to 150mm providing the flue exhaust outlet has a 1000mm clearance in BS 5410-1.
4. 300mm distance from a boundary line to the air intake as long as the exhaust terminal faces away from the boundary line. The exhaust terminal must have a minimum 300mm clearance to a surface below and there must be at least 2,500mm (BS 5410-1) clearance when measured horizontally in a straight line from the exhaust outlet to any other surface. If 2,500mm cannot be achieved then the flue exhaust outlet distance can be reduced to 600mm to comply with Approved Document J of the building regulations if it will not cause a nuisance or dispute.

5. 2,500mm (BS 5410-1) distance to a surface or boundary line. If 2,500mm cannot be achieved then the distance can be reduced to 600mm to comply with Approved Document J of the building regulations if it will not cause a nuisance or dispute.
6. Terminals must be at least 1,800mm from an oil storage tank unless a wall with of at least 30 minutes fire resistance and extending 300mm wider and higher than the tank is between the tank and the terminal. The flue air intake must be at least 900mm away from the oil storage tank vent.
7. 300mm adjacent to a boundary line unless it will cause a nuisance. BS 5410: Part 1 recommended that care is taken when siting terminal in relation to boundary lines.
8. Above, below and either side of an opening door, air vent or opening window. Using a Plume Management kit the air intake measurement can be reduced to 150mm providing the flue exhaust outlet has a 1,000mm (BS 5410-1) clearance. If 1,000mm cannot be achieved then the flue exhaust outlet distance can be reduced to 600mm to comply with Approved Document J of the building regulations if it will not cause a nuisance or dispute.
9. Internal/external corners. The air intake clearance can be reduced to 150mm providing the flue exhaust outlet has a 300mm clearance.
10. Vertical sanitary pipe: 150mm to the flue air intake and 300mm to the flue exhaust outlet.
11. Proximity of flue duct outlet to boundaries, minimum 2,000mm distance to an opening in adjacent building facing a terminal. BS 5410: Part 1 recommended that care is taken when siting terminal in relation to boundary lines.

12. The distance between a boundary facing a terminal can be measured diagonally from the point of discharge with a minimum distance of 600mm which must be maintained. The exclusion zone ensures compliance with Approved Document J of the building regulations,
13. A plume management kit must not be terminated within the confines of a carport or other covered, partially enclosed extension. The exhaust terminal must be sited at least 300 mm beyond the footprint of the structure, and maintain a distance of at least 600mm to any opening sited within the confines of the structure.

The exhaust terminal can also be routed though the roof of the carport providing 25mm clearance is provided around the flue pipe to any flammable material and that it extends at least 300mm above the roof. The air intake must have a minimum 150mm clearance to any opening in the building in order to ensure the integrity of the structure is maintained. If the air intake is sited within the footprint of the carport then the carport must have at least one completely open side.



- ▶ The flue cannot be lower than 1,000mm from the top of a light well due to the build up of combustion products.
  - ▶ Plume kits running horizontally must have at least a 3° fall back to the appliance for proper disposal of condensate. The initial plume kit horizontal run will have at least a 10° fall back to the appliance, due to the terminal elbow design, for proper disposal of the condensate.
-

## 5 Installation

### 5.1 Unpacking the boiler

**CAUTION:** Lifting and carrying

- ▶ Lift only a manageable weight, or ask for help.
- ▶ When lifting or putting things down, bend your knees, keep your back straight, and feet apart.
- ▶ Do not lift and twist at the same time.
- ▶ Lift and carry object close to your body.
- ▶ Wear protective clothing and gloves to protect against sharp edges.

**NOTICE:** Before installation

- ▶ All the previous Pre-Installation sections must be read and requirements met before starting boiler or flue installation.

#### Unpacking

It is advised that at least two or more persons are involved in the transfer of the packaged boiler from the van to the point of delivery.

- Once the packaged boiler has been delivered, the outer carton is removed first.  
Care should be taken when releasing the straps. If a sharp implement is used make sure the outer carton is not pierced and that the implement is used in such a way so that it may not cause personal injury. All sharp objects must be covered or the blade retracted after use and put away in a safe place.
- Lift carton up and away from the boiler.
  - ▶ Remove the plastic bag and upper front protection cover from the boiler and place safely aside.
  - ▶ Two or more persons are required to move the boiler taking care not to damage the boiler, panels or the floor.

**NOTICE: Heavy objects**

- ▶ At all times the correct method for handling heavy objects should be strictly observed.

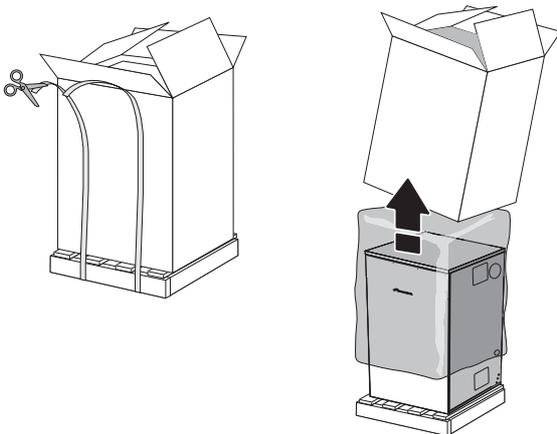


Fig. 26 Unpacking

6720809437-13.1Wo

### 5.2 Pipework positions and flue opening

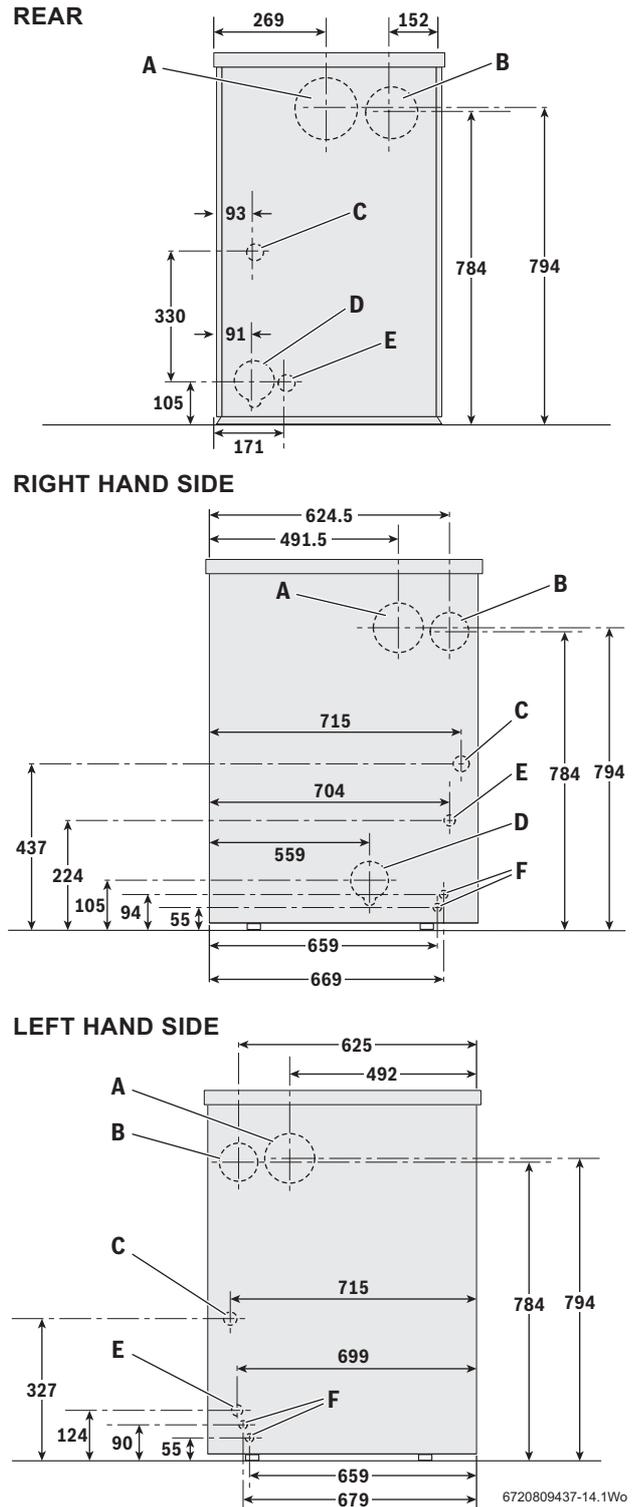


Fig. 27 Pipework and flue positions (all measurements in mm)

- [A] Flue
- [B] Services
- [C] Condensate
- [D] Fire valve & drain access
- [E] PRV (Pressure Relief Valve)
- [F] Oil

**CAUTION: Drilling**

- ▶ Ensure there are no pipes, electrical cables, damp proof courses or other hazards before drilling.

**Safety**

All relevant safety precautions must be undertaken. Protective clothing, footwear, gloves and safety goggles must be worn as appropriate.



For servicing purposes, keep condensate discharge pipe away from components and pipework connections.

**Pipework connections - Regular**

- Flow connections (optional combined feed and vent) 1" BSP
- Return connections 22mmØ copper on 12/18, 18/25 models and 28mmØ copper on 25/32 models
- Condensate outlet 21.5mm Ø

**Pipework connections - System**

- Flow connections 12/18 & 18/25 - 22mm Ø , 25/32 - 28mm Ø .
- Return connections 22mmØ copper on 12/18, 18/25 models and 28mmØ copper on 25/32 models
- Condensate outlet 21.5mm Ø
- PRV - 15mm

**5.3 Boiler installation**

- ▶ Mark position of the 100mm services duct on the exterior wall and make a hole through.
- ▶ Remove the screws [1] securing the base panel to the transit pallet and lift the boiler off the pallet and into its installation position taking care not to scrape the base panel across the hard standing.
  - Do not attempt to lift and position the boiler on your own.
  - Do not use the copper pipes to move the boiler.
- ▶ Fasten the base to the hard standing using the holes provided. Care should be taken to ensure that the base is level.
- ▶ Remove the screws from the top panel and lift up to remove, store safely away from the installation.
- ▶ Remove the key for the door latches from the literature pack.
  - Using the key, turn the latches at the bottom of the front panel through 90° to release the panel. Lift the panel and pull towards you to remove.
  - To release the back panel, remove the two screws from the bottom corners and lift the panel and pull towards to remove.
  - Store both panels safely away from the installation point.

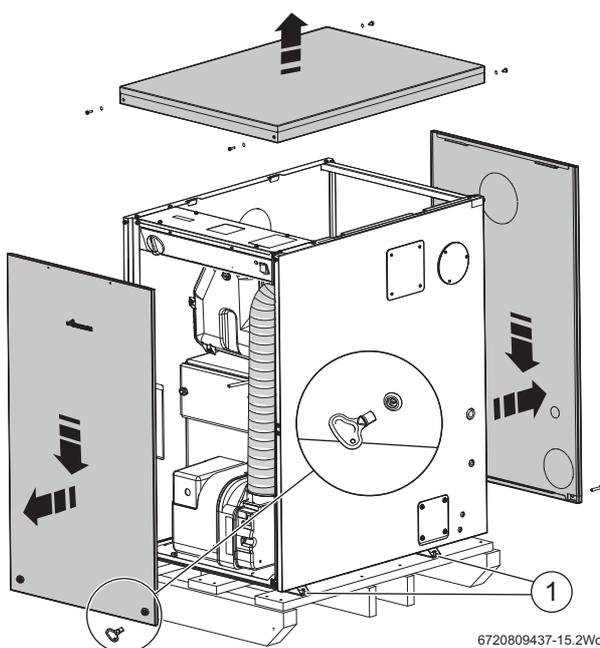


Fig. 28 Access to boiler

- ▶ Unplug burner lead [1] from control box.

- ▶ Unscrew to loosen the retaining ring [4] that secures the flexible air supply tube [3] to the burner and remove from the burner.
- ▶ Undo and remove the retaining nut [2] on the top of the burner. The burner can now be removed from the heat exchanger. Store the burner and retainer nut safely away from the boiler.

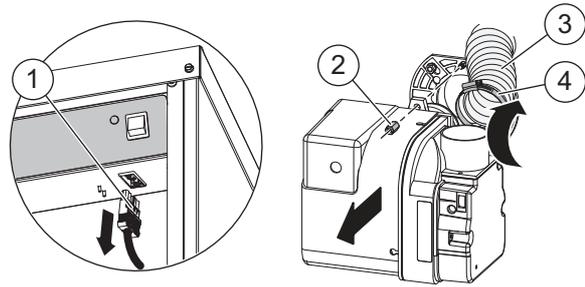


Fig. 29 Disconnecting burner

- ▶ Measure the 100mm Ø services duct to give at least 10mm inside the casing and to finish flush with the interior wall surface, cut to size and fit the duct. Fit the 100mm sealing ring where the duct enters the casing and seal the joint to the exterior wall and inside the cabinet with a suitable sealant.

## 5.4 Flue installation

### 5.4.1 Flue Components

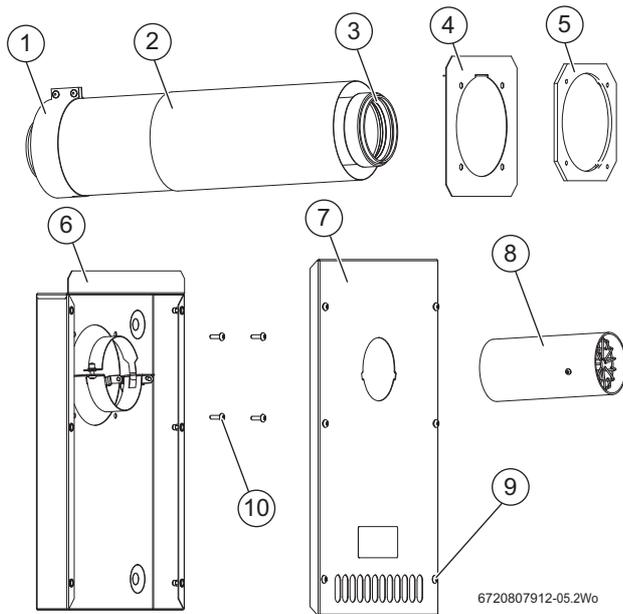


Fig. 30 Flue components

- [1] Air inlet clamp
- [2] Telescopic air inlet section & acoustic insulation
- [3] 80mm Ø flue pipe (including seal)
- [4] Air box mounting bracket
- [5] Air box gasket
- [6] Air box
- [7] Air box cover
- [8] Flue terminal
- [9] Air box cover screws x 6
- [10] Mounting screws x 4 (Accessory pack)

### 5.4.2 Rear Flue options \_ Greenstar - all models

	<p><b>NOTICE:</b></p> <ul style="list-style-type: none"> <li>▶ Ensure inner flue is cut to the correct length as specified in Table 7 before fitting.</li> </ul>
--	--

80mmØ flue pipe length L in mm	
<b>Flue outlet</b>	<b>Greenstar Danesmoor</b>
Rear	450

Table 7 Flue pipe lengths

- ▶ Fit the air inlet telescopic sections [2 & 3] to the boiler flue cowl and secure the inner section with the clamp [1].
- ▶ Push the air inlet outer section [3] (see figure 33) through the rear panel opening until the end of the tube is against the stops [4] on the clamp assembly [5].

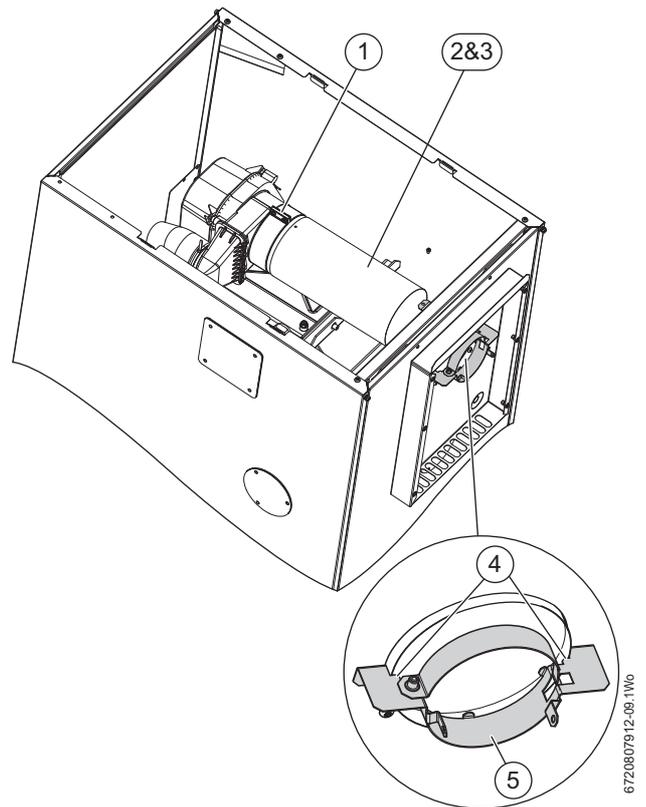


Fig. 31 Rear flue

- [1] Flue clamp
- [2] Telescopic inner section
- [3] Telescopic outer section
- [4] Clamp stops
- [5] Clamp assembly

- ▶ Drill through the two sections of the flue inlet [2 & 3] with the 3.3mm drill bit and secure the two sections with the self-tapping screw.
- ▶ Drill through the tab [6] with the 3.3mm drill bit, into the flue inlet outer section [3] and secure with the self-tapping screw.

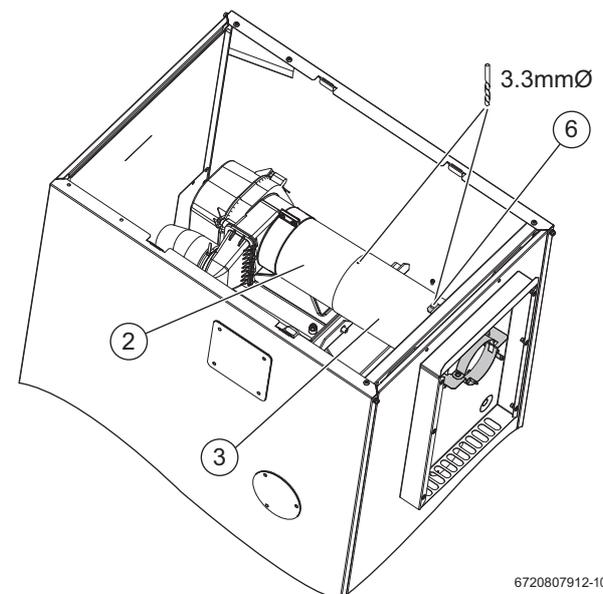


Fig. 32 Drilling detail

- [2] Telescopic inner section
- [3] Telescopic outer section
- [6] Clamp tab

### 5.4.3 Side Flue options - Greenstar Danesmoor



To use the right hand or left hand flue options a 90° swept flue elbow is required (part no. 7 716 190 034) Lightly grease the 90° flue elbow seals with the solvent free grease.


#### Flue options

80mmØ flue pipe length L in mm	
Flue outlet	Greenstar Danesmoor
Right hand	240*
Left hand	255

Table 8 Flue pipe lengths

[\*] Danesmoor right-hand flue: the 125mm air inlet outer section is not needed for this outlet position and so there will be one screw spare.

- ▶ Cut the 80mm flue pipe as required, see table 8
- ▶ Fit the air inlet section [2] to the elbow [3].
- ▶ Fit the clamp [1] to the flue cowl.

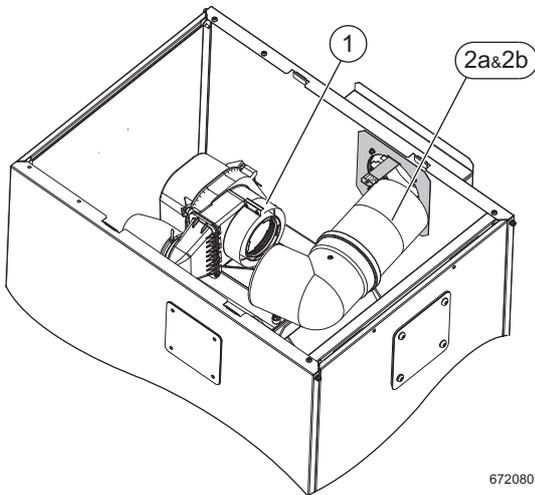


6720807912-11.1Wo

Fig. 33

- [1] Flue clamp
- [2a & 2b] Flue section

- ▶ Push the air inlet section through the side panel opening into the air box until it meets the stops [4] on the clamp assembly
- ▶ Centralise the inner elbow pipe within the elbow.
- ▶ Fit the elbow [3] onto the flue cowl.
- ▶ Tighten the clamp [1] onto the flue elbow.

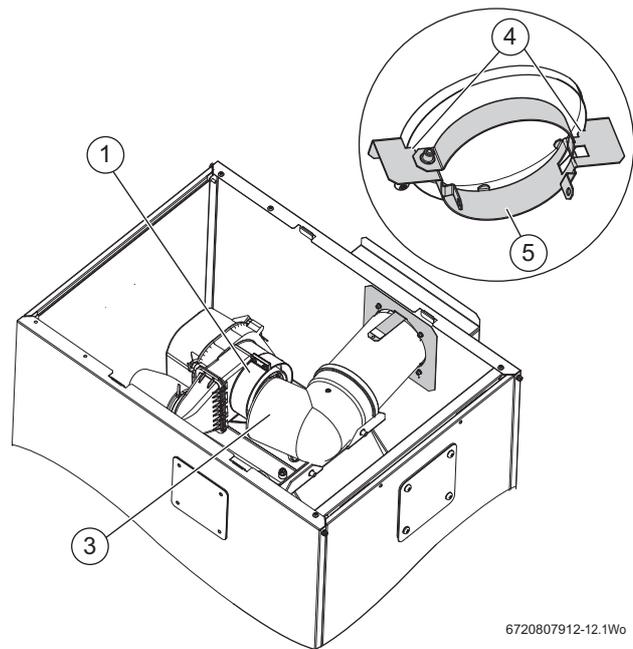


6720807912-12.1Wo

Fig. 34

- [3] Elbow
- [4] Clamp stops
- [5] Clamp

- ▶ Drill through the tab [6] on the mounting bracket, with the 3.3mm drill bit into the air inlet outer section and secure with a self-tapping screw.

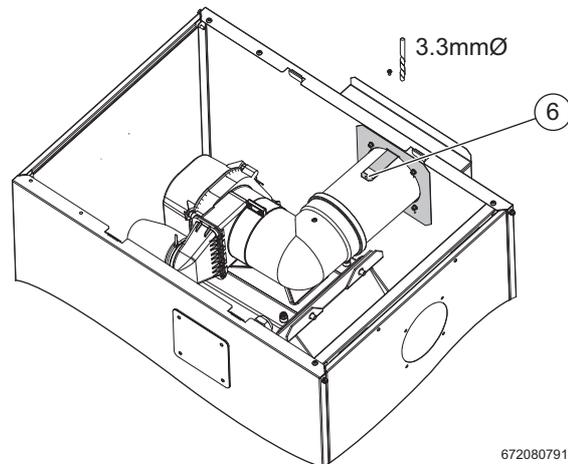

6720807912-13.1Wo

Fig. 35 Tab detail

#### 5.4.4 All flue options, final assembly

- ▶ Lightly grease the flue pipe seal with the solvent free grease supplied.
- ▶ Remove the screw from the clamp bracket [1] and open the clamp.
- ▶ Insert the terminal [3] fully into the 80mmØ flue pipe.
- ▶ Pass the flue pipe [2] through the clamp bracket [1] and push into the flue cowl or elbow.

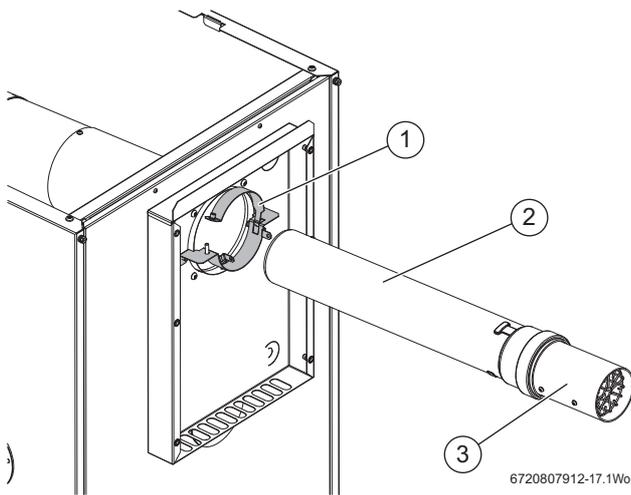


Fig. 36 Final assembly

- [1] Clamp bracket
- [2] Flue pipe
- [3] Terminal

- ▶ Drill two holes into the terminal [3] through the tabs [5], with the 3.3mm drill bit, one either side, and secure the terminal [3] to the tabs [5] using the two self tapping screws.
- ▶ Fit the air box cover [4] over the lip on the top of the air box and secure the bottom two screws removed earlier.

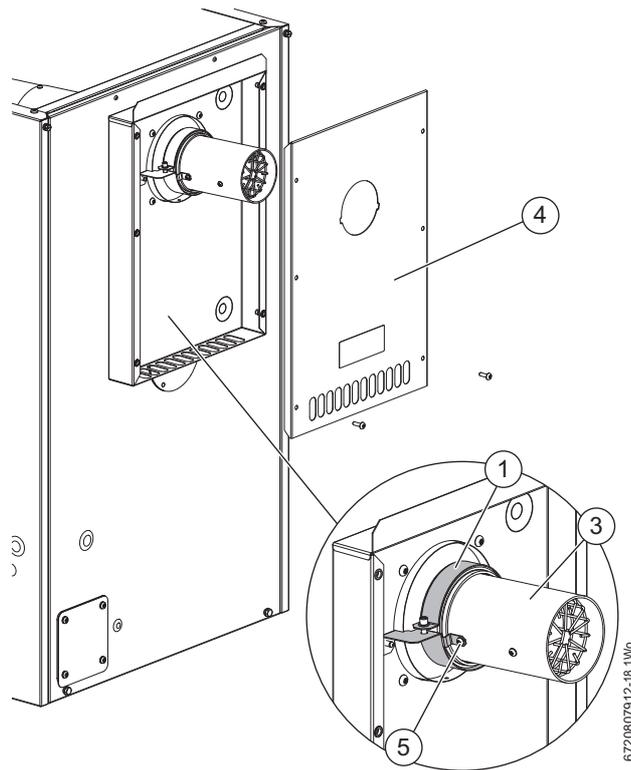


Fig. 37

- [4] Air box cover
- [5] Tab

**5.4.5 Terminal guard**

- ▶ To fit the terminal guard [1] not supplied: Hold the terminal guard [1] in place and secure with the four screws [2] removed from the air box earlier.

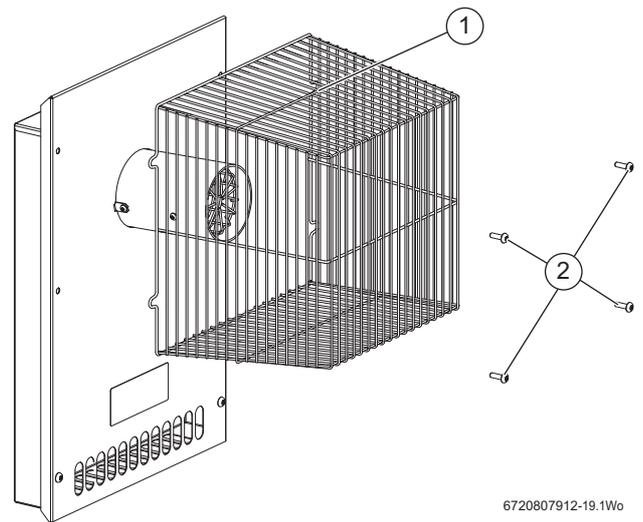


Fig. 38

- [1] Terminal guard
- [2] Screws

**5.4.6 Flue damper installation**

**NOTICE:** Fitting the flue damper  
Failure to fit the flue damper, when required will effect the performance of the boiler and may cause Lockouts.

**i** The flue damper is only fitted to models stated in the table below

Model range	Output (kW)	Flue damper fitted
<b>12/18</b>	13	Yes
	15	Yes
	18	Yes
<b>18/25</b>	18	Yes
	21,5	Yes
	25	Yes
<b>25/32</b>	25	No
	28	No
	32	Yes ≤ 4m flue length
	32	No > 4m flue length

Table 9

Insert the flue damper into the inner tube of the straight extension or 90° elbow and fit the flue as shown in figure 39. Ensure that the rubber seal is fitted into the inner tube.

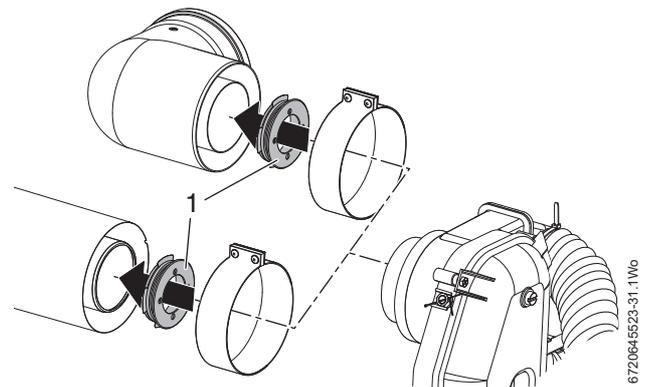



Fig. 39 Flue damper fitting

**5.4.7 Installation notes**

- ▶ Ensure all the seals are in good condition and seated properly.
- ▶ To ease assembly of flue components, grease seals lightly with the solvent free grease supplied.
- ▶ A terminal guard must be fitted if the terminal is 2m or less above a surface where people have access.
- ▶ Lightly grease the flue cowl seal with the solvent free grease supplied.
- ▶ Carefully remove the blanking plate from the appropriate flue aperture (if necessary) and refit the blanking plate in the unused aperture.
- ▶ Carefully remove the insulation from the flue aperture in the cabinet that the flue is to pass through, and fit to the unused aperture (if necessary).

**5.5 Combustion chamber (18/25 Regular shown)**

- ▶ Release the screws and remove flue manifold access cover [4].
- ▶ Check that all the baffles [2] and baffle retainer [3] are correctly fitted to the secondary heat exchanger. Hook the retainer [1] over the end two baffles.
- ▶ Check that the flue damper, if required, is fitted correctly, refer to section 5.4.6
- ▶ Release retaining nuts and washers and remove baffle/combustion chamber access door [5].
- ▶ Ensure one piece baffle set [6] is in the right location, correctly resting on the baffle rests [7] on either side of the combustion chamber and pushed securely into place. Baffle sets for the 18/25 and 25/32 boilers are identified with tabs on the front and rear edge

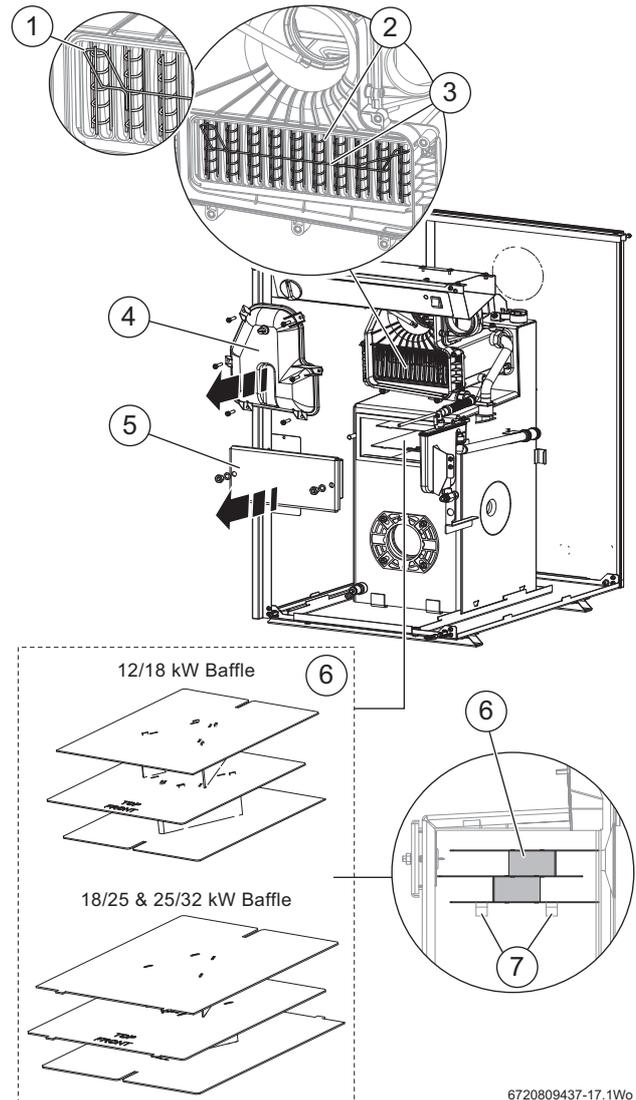

6720809437-17.1Wo

Fig. 40

- ▶ Secure baffle/combustion chamber access door [5] with nuts and washers. Tighten until door is firmly secured. Do not overtighten the nuts.

## 5.6 Pipework connections

**CAUTION: MAINS SUPPLIES**

▶ Isolate the oil & water mains supply before starting any work and follow all relevant safety precautions.

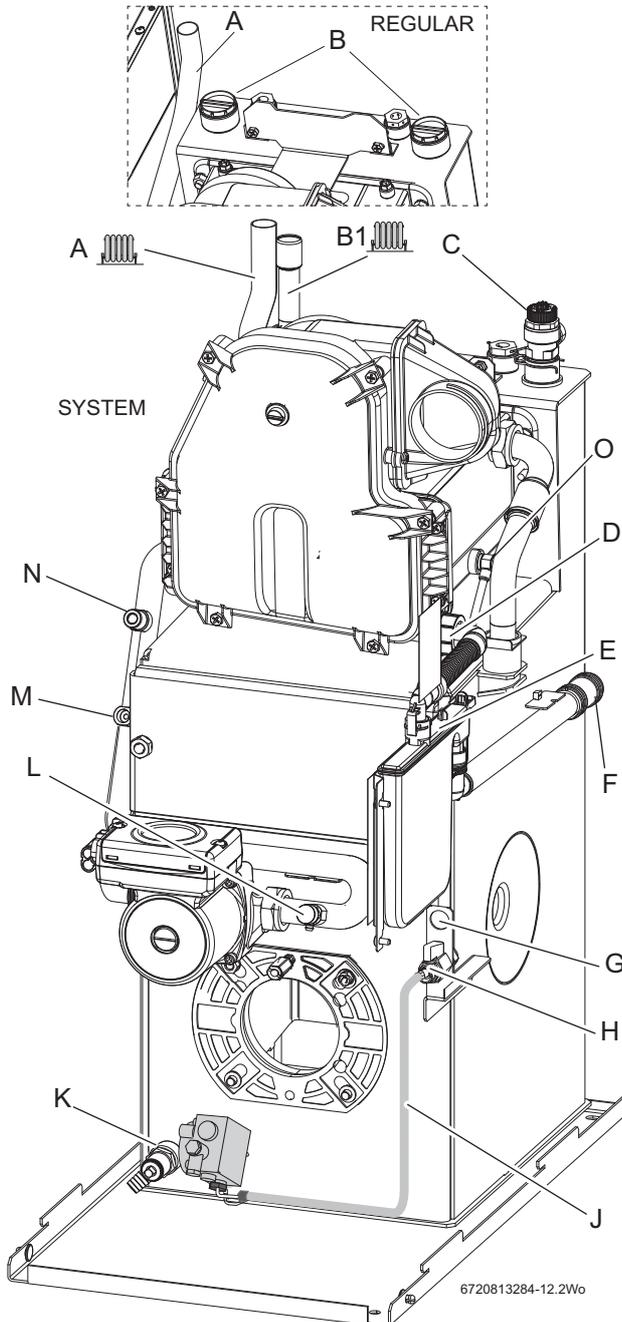


Fig. 41 Pipework connections

- [A] Return connection 22mm Ø copper (28mm Ø on 25/32 models)
- [B] Flow connection 22mm Ø copper (28mm Ø on 25/32 models)
- [B1] Flow & optional combined feed and vent 1" BSP
- [C] Pressure relief valve
- [D] Flue manifold condensate outlet
- [E] Condensate trap - supplied
- [F] Condensate outlet & flexible push fit connection (21.5mmØ)
- [G] Fixing point for optional oil return pipe
- [H] Oil isolating valve (10mmØ)
- [J] Flexible oil hose and routing
- [K] Primary Drain (hose connection)
- [L] Pump circuit drain point
- [M] Pressure gauge connection
- [N] Expansion vessel connection

## Water connections



Surplus water may be present due to factory testing.

- ▶ Remove the transit bungs from the pipework connections on the boiler.
- ▶ Ensure all of the pipework is clean.
- ▶ Align the water pipework and connect.
- ▶ Check that all the unused sockets have been capped.

## Return pipe connection

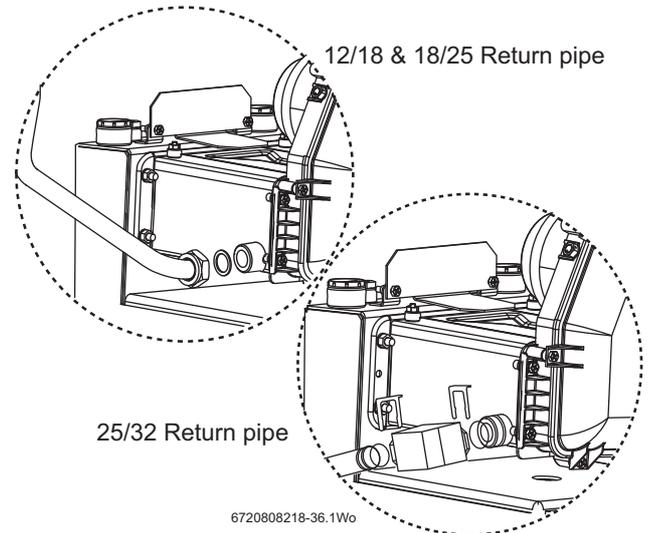


Fig. 42 Return pipes

## Oil supply connections

- ▶ Refer to figure 41 and ensure that the isolating valve (H) is fully closed and route the oil supply pipe along the right side of the boiler and connect to the isolating valve (H).

## Condensate connection

- ▶ Connect the 21.5mm polypropylene pipe (not supplied) to the condensate waste pipe flexible push fit connector [F] figure 29 and terminate to waste. Do not use any solvents, adhesives or lubricants when pushing the pipe into the flexible push fit connector [F] figure 29.
- ▶ Ensure that the condensate pipe runs away from the boiler at a constant fall of 52mm (minimum) for every metre.
- ▶ Carefully pour 500ml of water into the condensate collection [P] to fill condensate trap.
- ▶ Check the water is running away and the condensate pipework joints are water tight.
- ▶ Check the flue manifold seal (within the rim recess of the flue manifold access cover) is undamaged and seated correctly.
- ▶ Check the flue manifold seal (within the rim recess of the flue manifold access cover) is undamaged and seated correctly.
- ▶ Refit flue manifold access cover [R] and secure with screws [S].

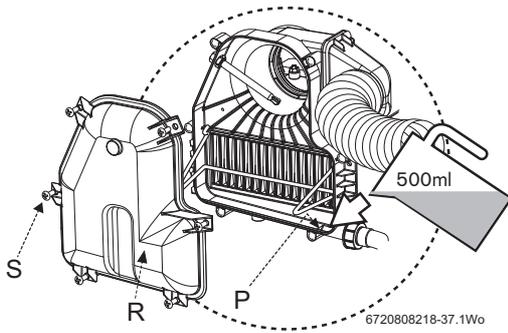


Fig. 43 Condensate

- [P] Condensate collection sump
- [R] Manifold access cover
- [S] Screws

**Fire valve**

Check that the oil supply pipe has a fire valve fitted externally to the building/appliance with the fire valve sensor located within the appliance case.

A fire valve sensor clip is provided for this purpose on the rear of the control box above the burner..

The fire valve label states that the fire valve should be rated at 85°C or above to avoid nuisance cut outs.

**5.7 Oil burner and pump**



**CAUTION: MAINS SUPPLIES**

▶ Isolate the oil & water mains supply before starting any work and observe all relevant safety precautions.



**NOTICE: Nozzle orifice contamination**

▶ to avoid contamination do not dismantle, clean or touch the nozzle tip

**Oil burner nozzle**

Before removing or fitting a new nozzle refer to figure 44:

- ▶ Remove the screws [1] from the blast tube [2] and remove the blast tube



There is a recirculation tube fitted to the 12/18 models, this does not need to be removed from the blast tube

- ▶ Unplug the HT leads [4]
- ▶ Loosen the screw [3] securing the break plate[5] and slide the unit off
- ▶ Use a suitable spanner to stop the nozzle body turning
- ▶ Remove the nozzle [8]and secure the new nozzle, hand tight
- ▶ Tighten the nozzle utilising the two spanners used during removal, do not overtighten
- ▶ Refit the break plate ensuring that the photocell and the break plate hole [5] are aligned and secure with the screw [3] into the seating provided [7]
- ▶ Reconnect the HT leads [4]
- ▶ Refit the blast tube [2] and secure with the screws [1]

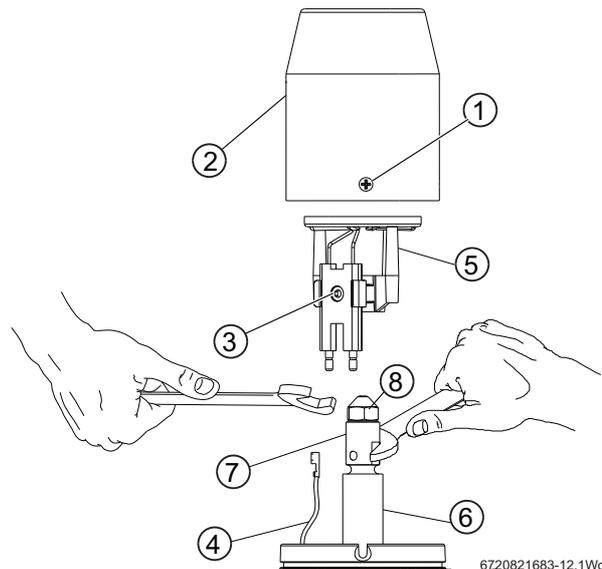


Fig. 44 Nozzle access

Refer to figure 45:

- ▶ Check that the nozzle [1] and the electrode [2] alignment settings are correct.
- ▶ Ensure that the nozzle [1] is aligned centrally within the combustion head [3].
- ▶ Inspect for any visible defects.

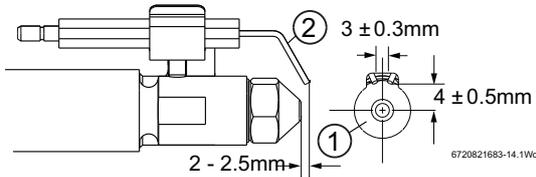


Fig. 45 Nozzle and electrode alignment

**Burner head adjustment**

The burner head adjustments are made to achieve the required output from the burner. The adjustments are made via a thumb-wheel on the burner. Refer to section 6.4.4 for setting information.

**Oil pump - Single pipe connection**

Connecting the oil pump for a single pipe system:

- ▶ The pump is factory set for single pipe operation with the flexible oil pipe fitted.
- ▶ Check connections before use.

**Oil pump - two pipe connection**

Converting the oil pump for a double pipe system:

1. Check the inlet pipe connection.
  - ▶ Unscrew the return plug [1].
  - ▶ Screw in by-pass screw [2] that is supplied in a plastic bag attached to the oil pump.
2. Connect the flexible oil pipe return hose [3] (not supplied) to the oil pump and return pipe fixing and tighten to secure (for routing see figure 41).

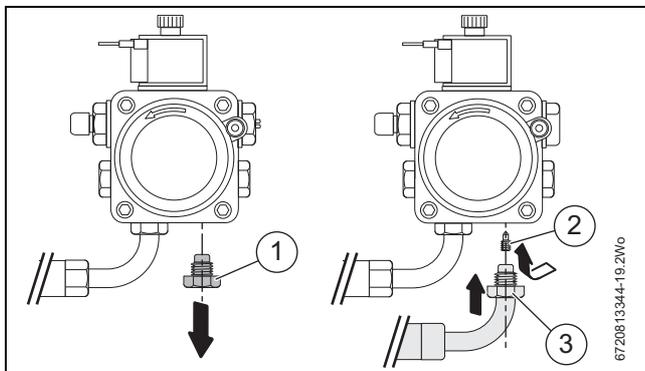


Fig. 46 Converting to double pipe system

- [1] Return plug
- [2] By-pass screw
- [3] Return pipe connection

**5.8 Refitting components**



**WARNING: Flue gas leakage**

The seal between the burner and the mounting flange must form a gas tight seal to prevent leakage of potentially dangerous gas from the combustion chamber.

- ▶ Unless the burner is level when pushing the burner into the flange the O-ring may not seat properly allowing flue gas to escape!
- ▶ Always check that the O-ring seal (Fig 47 item A) is in good condition before fitting the burner. Replace the O-ring seal if defective.

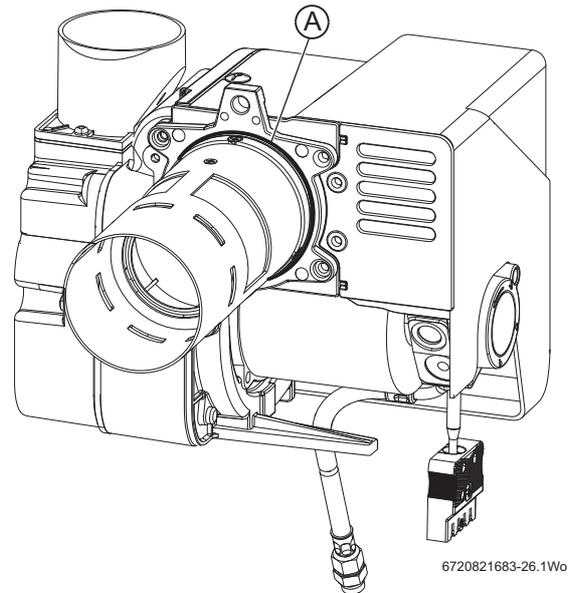


Fig. 47 12/18 Burner O-ring seal shown

Refer to figure 48

1. Align burner combustion head into the boiler collar.
  - ▶ Locate the burner retainer [A] over the threaded lug on the collar [B], ensure that the burner is level and push the burner firmly onto the flange ensuring the O-ring seal is fully engaged. Support the burner in position and secure with the retaining nut [C]. Tighten sufficiently to hold the burner but do not over tighten.
  - ▶ Check that the burner is seated correctly on its mounting flange and that the oil hose/s are routed correctly as shown in Fig. 41 and not trapped in front of or underneath the burner.
2. Attach air duct and tighten clip (D) to secure to the burner air intake.

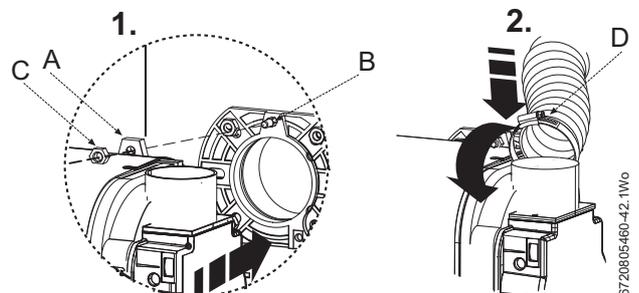


Fig. 48 Refitting the burner

- ▶ Plug burner lead into control box.

### 5.9 Electrical



**CAUTION:** ISOLATE THE 230v ELECTRICITY SUPPLY

- ▶ Ensure that the electricity supply is safely Isolated and secured to prevent inadvertent re-connection. Information on safe isolation can be found in the Health and Safety Executive guidance HSG85. Using test equipment approved to GS38 confirm that the electricity supply is disconnected.



**NOTICE:**

This appliance provides a permanent external electrical supply for frost protection and serving and must be fed via a circuit breaker incorporating earth leakage protection.



**WARNING:** Risk of Electric shock

- ▶ External equipment operated at 230 Volts should not be serviced or repaired under adverse weather conditions.



- ▶ The mains electrical supply to the boiler and system wiring centre must be common and through a common fused double pole isolator.
- ▶ The isolator shall be sited next to the boiler for new systems and where practicable, replacement boilers.
- ▶ The isolator must have a contact separation of 3mm minimum between all poles.
- ▶ Any additional components that are connected to the boiler with mains electrical supply must not have a separate supply.
- ▶ External 5 Amps.
- ▶ When stripping wires ensure copper strands do not fall into the control box.

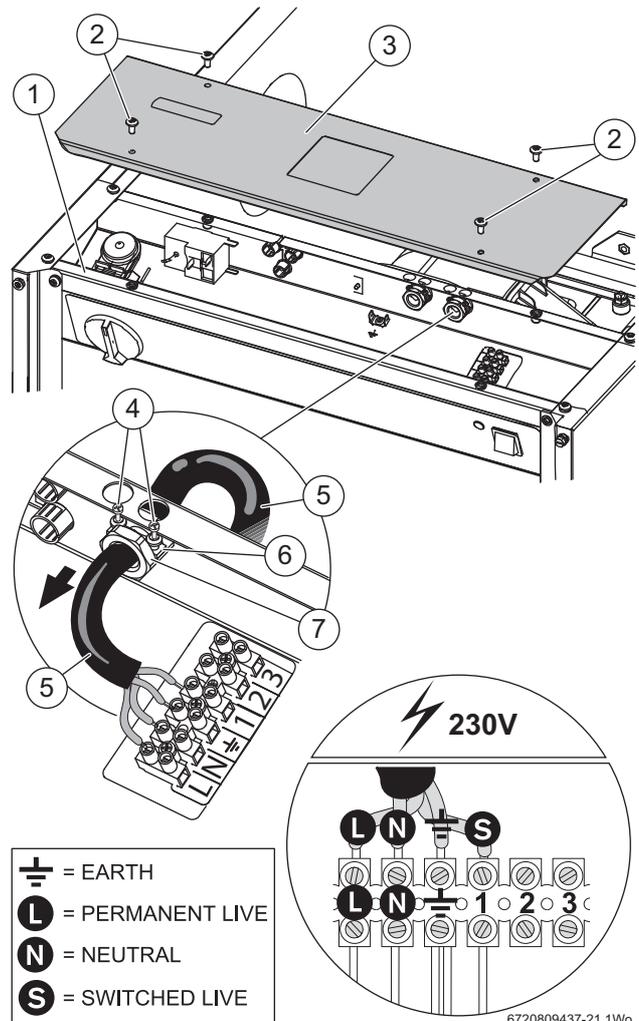


Fig. 49 Electrical connections

#### Access to 230V connections

- ▶ Remove the four cover panel retaining screws [2] from the control box [1].
- ▶ Release screws [4] from cable clamp [7].
- ▶ Pull inner clamp part [6] outwards.
- ▶ Feed sufficient power cable [5] through the cable clamp [7] and secure grip with screws [4].
- ▶ Separate wires from cable end and strip to 6mm.

#### 230V connections

- ▶ Connect the permanent LIVE wire (Brown) to terminal L.
- ▶ Connect NEUTRAL wire (Blue) to terminal N.
- ▶ Connect EARTH wire (Green/Yellow) to the earth terminal
- ▶ Connect the switched live wire to terminal 1



**Electrical power cable**

- ▶ Route the power cable down the side panel using the clip provided on the support panel to the external connection point avoiding any potentially hot surfaces allowing sufficient cable to pivot the control box into the service position.



A frost thermostat is fitted as standard to the external appliance to provide frost protection.

Regular appliance electrical connections.

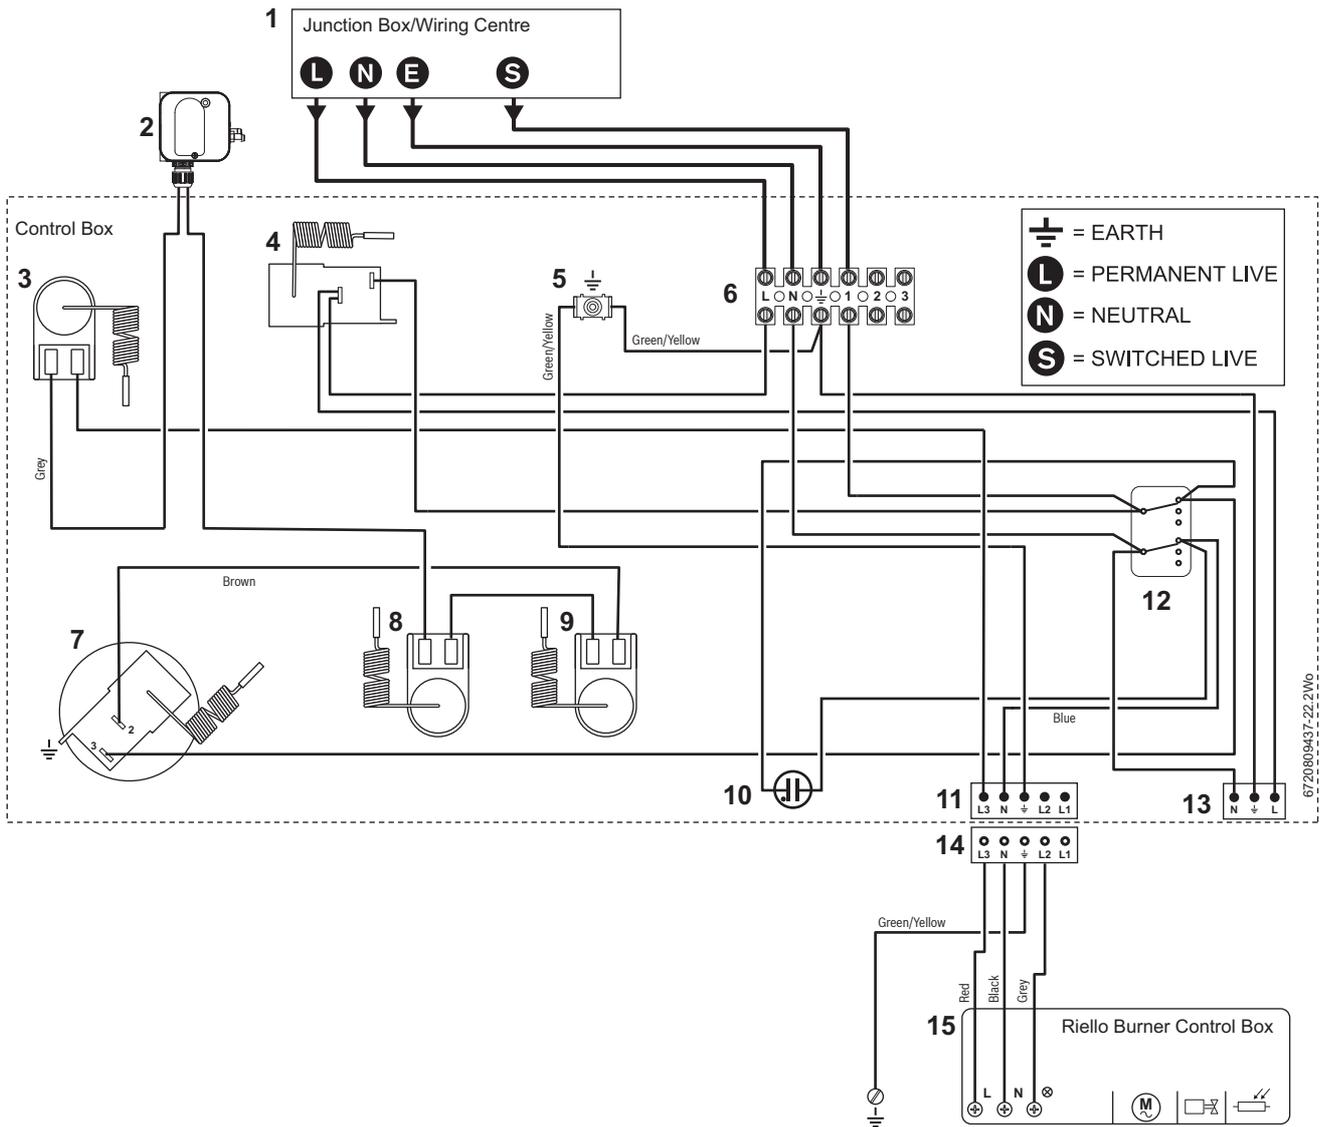


Fig. 50 Regular wiring diagram

**Key to components:**

- [1] Remote junction box / wiring centre.
- [2] Air pressure switch
- [3] High limit thermostat
- [4] Frost thermostat
- [5] Earth stud
- [6] Terminal connector block
- [7] Control thermostat
- [8] Flue manual reset overheat thermostat
- [9] Boiler manual reset overheat thermostat
- [10] Demand neon
- [11] Burner socket
- [12] Mode switch
- [13] Service socket connection
- [14] Burner plug
- [15] Burner control box

**System appliance electrical connections.**

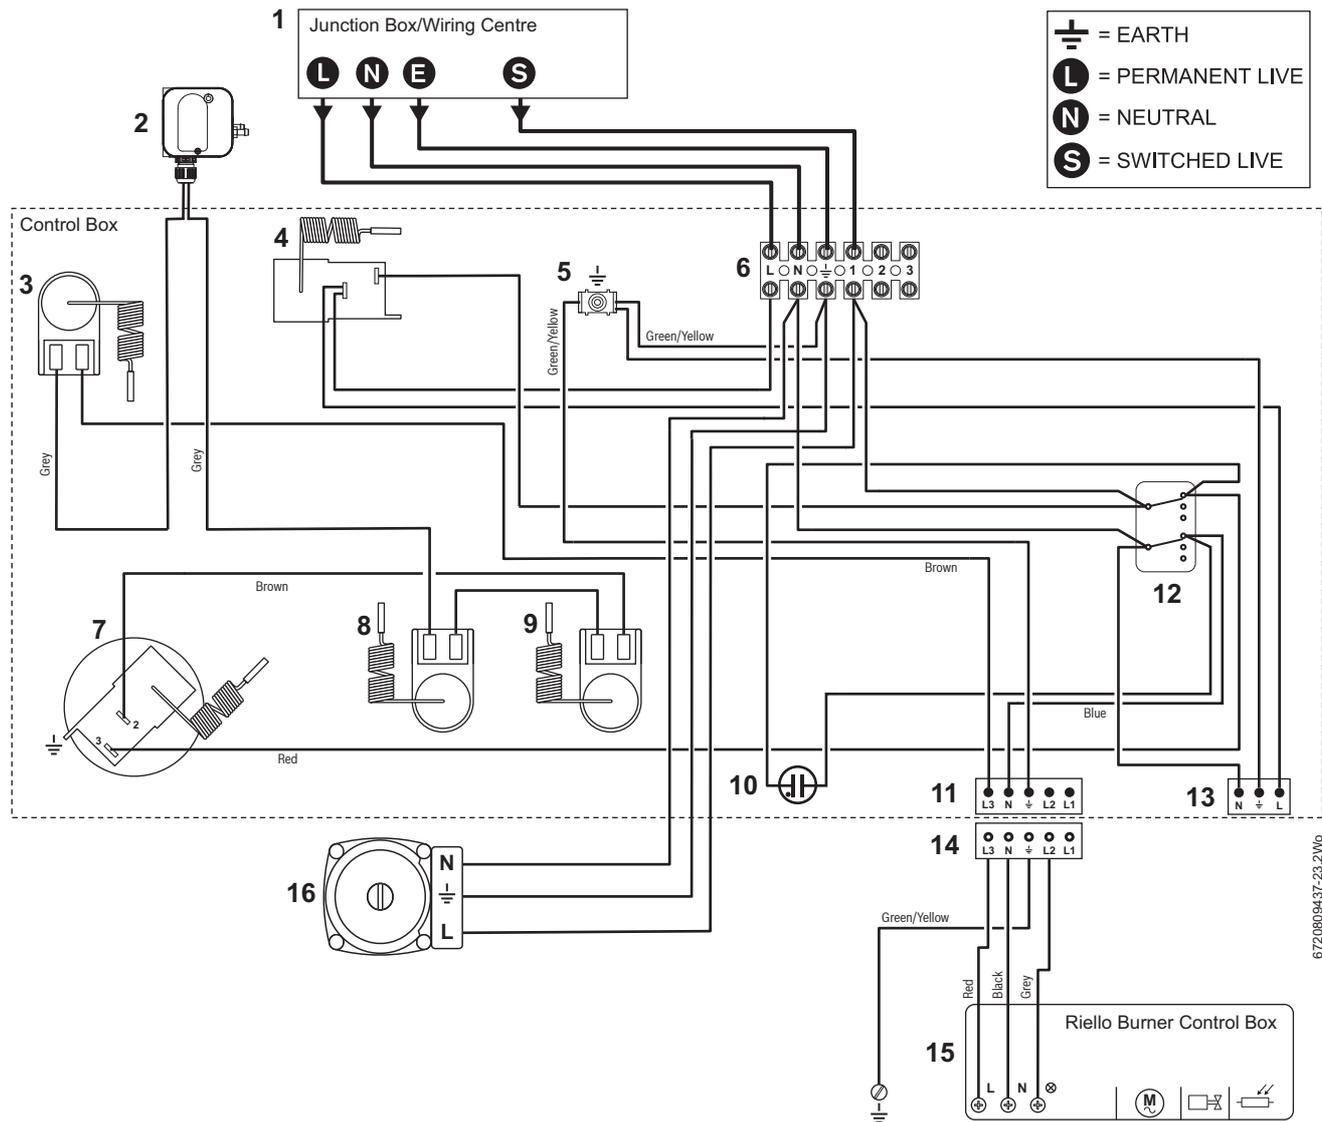


Fig. 51 System wiring diagram

**Key to components:**

- [1] Remote junction box / wiring centre.
- [2] Air pressure switch
- [3] High limit thermostat
- [4] Frost thermostat
- [5] Earth stud
- [6] Terminal connector block
- [7] Control thermostat
- [8] Flue manual reset overhear thermostat
- [9] Boiler manual reset overhear thermostat
- [10] Demand neon
- [11] Burner socket
- [12] Mode switch
- [13] Service socket connection
- [14] Burner plug
- [15] Burner control box
- [16] Pump

## 6 Commissioning

### 6.1 Pre-Commissioning checks - 18/25 Regular shown

**DANGER: ISOLATE THE 230V ELECTRICITY SUPPLY**

- ▶ Ensure that the supply is safely isolated and secured to prevent inadvertent re-connection. Information on safe isolation can be found in the Health and Safety Executive guidance HSG85. Using test equipment approved to GS38 confirm that the electricity supply is disconnected.

- ▶ Check that the service and water pipes are connected correctly.
- ▶ Check that all unused sockets are capped.
- ▶ Check that the oil supply is 28 second kerosene and that the pipework is connected correctly to the oil pump via the supplied flexible oil hose [2].
- ▶ Check that the burner is seated correctly on its mounting flange and that the oil hose/s are routed correctly. See page 45, figure 79 for correct routing of the oil hose.
- ▶ Turn on the main oil supply valve at the tank, check the oil supply pipework and connections. Rectify any leaks.
- ▶ Check the flue is correctly fitted and the connections are secure.
- ▶ Check the condensate pipework [1] is correctly fitted and connected.
- ▶ Check the condensate trap is filled with water and discharging correctly.

**NOTICE:** If the boiler is not to be commissioned then:

- ▶ After successfully completing all of the checks and any rectification work, close the water valves, shut off the oil supply and electrically isolate the boiler.
- ▶ Complete the installation part of the Guarantee Registration Card, and complete a CD10 or equivalent to inform the LABC of the installation.
- ▶ Refit the top panel.

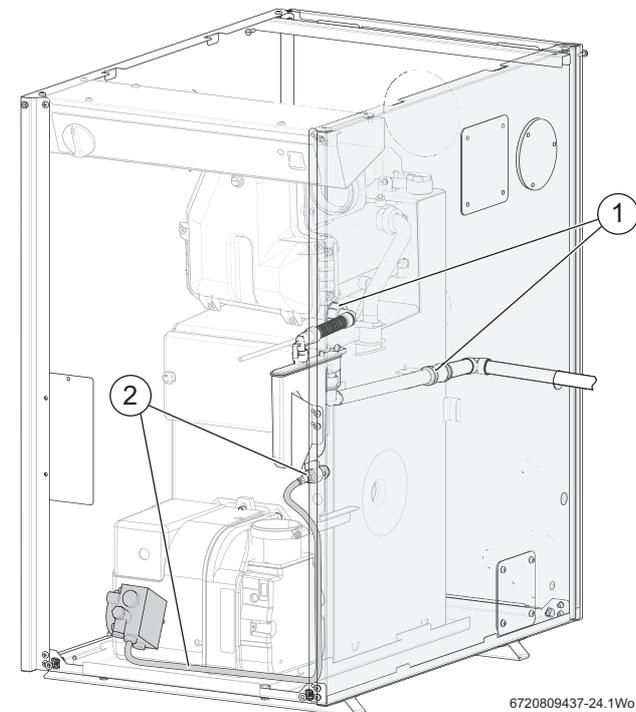


Fig. 52 Pre-Commissioning checks

### 6.2 Filling the system

- ▶ Open all system and radiator valves.
- ▶ Turn on the water main stop cock.
- ▶ Open vented systems only:
  - Turn on the water to the system feed and expansion cistern and allow the system to fill.
- ▶ Sealed systems only:
  - Check and if required, adjust the expansion vessel pressure using the Schraeder type valve.
- ▶ Fill the system to between 1 and 2 bar pressure via a WRAS approved filling link.
- ▶ Vent all radiators, retighten when completed.
- ▶ Monitor the pressure gauge during venting and repressurise if required.
- ▶ Check the system and correct any leaks.
- ▶ Bleed air from at least one of the secondary heat exchanger air vents (a radiator key is ideal for this). There are two venting bosses [1] on the top of the secondary heat exchanger. Only one can be used if fluing to the side.

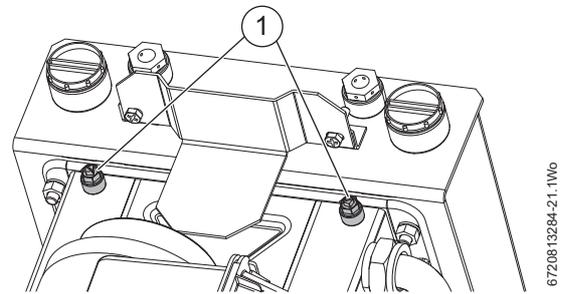


Fig. 53 Manual vent points

[1] Manual vent points (each side of the secondary heat exchanger).

### 6.3 Water treatment

**NOTICE:**

- ▶ Salt based, softened water must not be used to fill the central heating system.

**Ensure that the system has been cleaned. Refer to section 4.1.2 of these instructions.**

#### Inhibitor (Central Heating)

- ▶ Check drain cocks are closed and all radiator valves are open before adding a suitable inhibitor or combined inhibitor/anti-freeze, if the system is exposed to freezing conditions, to the heating system water in accordance with the manufacturers instructions.

**i** The pH value of the system water must be between 6.5 and 8 or the appliance warranty will be invalidated.

- ▶ Fill system.
- ▶ Record the date when the inhibitor was added to the system in the Boiler commissioning checklist and in the guarantee registration.

**NOTICE:**

- ▶ The concentration of inhibitor in the system should be checked every 12 months or sooner if system content is lost.
- ▶ In cases where all attempts to find a micro leak have failed, Worcester, Bosch Group supports the use of Fernox F4 leak sealer.

**Water treatment products**

Suitable water treatment products can be obtained from the following manufacturers:

ADEY	01242 546700 or www.adey.com
FERNOX	0330 100 7750 or www.fernox.com
SENTINEL	01928 704330 or www.sentinelprotects.com/uk

**6.3.1 Appliance drain points**

- ▶ The appliance can be drained via the primary heat exchanger point [3]:
  - There is an additional drain point on the secondary heat exchanger [1].

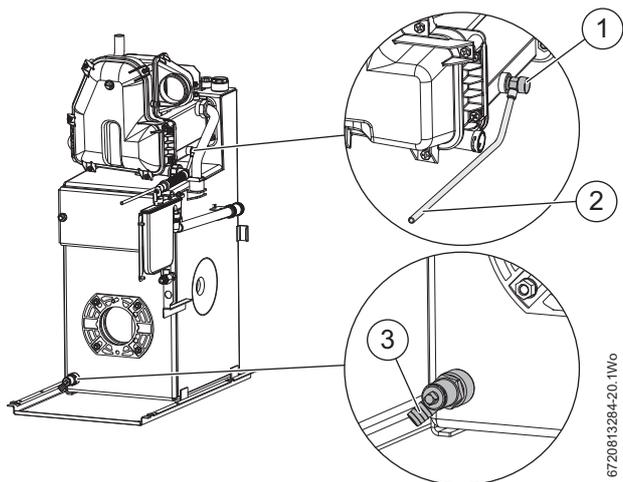


Fig. 54 Appliance drain points

- [1] Secondary heat exchanger drain point.
- [2] Secondary heat exchanger drain hose.
- [3] Primary heat exchanger drain point.

**6.3.2 Appliance vent points**

There are two vent points at the top of the secondary heat exchanger. Only one may be in use, the other may be obscured by side fluing.

- ▶ Use a radiator key or suitable screwdriver to open the vent point.

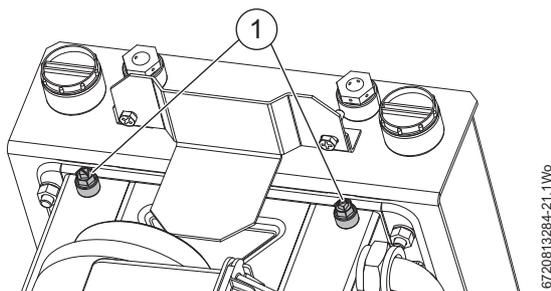


Fig. 55 Manual vent points

- [1] Manual vent points (each side of the secondary heat exchanger).

**6.4 Starting the appliance**

**NOTICE:**

- ▶ Never run the appliance when the appliance/system is unpressurised (sealed systems) or empty.

1. Check the oil supply is correctly fitted, pressure tested and in good working order before turning on the oil supply valves to the boiler.
- ▶ Turn on the main oil supply valve at the tank and draw off at least 2.5 litres of oil until a steady flow of clear uncontaminated oil can be seen as follows:

- The oil supply to the boiler should be primed before the burner is operated to avoid unnecessary pump wear.
- The use of an oil suction pump will prime and flush through any oil supply set up simply and easily, alternatively the following procedures can be used.

**6.4.1 Single pipe gravity feed systems:**

- ▶ Disconnect the flexible oil hose and open the isolating valve to discharge the oil into a suitable container.
- ▶ If a top entry tank has been used the pipework will need to be primed before the oil will discharge under gravity.
- ▶ When completed, close the isolating valve, reconnect the flexible oil hose.

**When the oil reaches the pump, bleed the air from the pump:**

- ▶ Fully open the isolating valve and the oil pump bleed port [1] to discharge into a suitable container once the boiler is started up.
- ▶ Switch on the electricity supply to the boiler.
- ▶ Set the programmer to ON for CH and DHW.
- ▶ Turn on the boiler CH control thermostat.
- ▶ Allow the burner to run through to lockout .

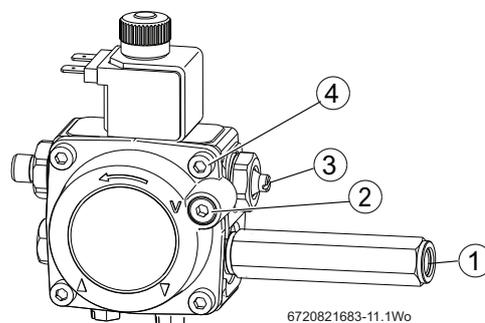


Fig. 56

- [1] Bleed and pressure gauge port
- [2] Vacuum gauge connection
- [3] Pressure adjuster
- [4] Cover retaining screws x4

**If no oil comes out of the port 1, then re-prime the oil line as detailed above**

- ▶ Wait 2 minutes then press the lockout reset button.
- ▶ Repeat the procedure until a steady stream of oil without air, runs from the bleed port, then lock bleed port [1].
- ▶ Switch off the boiler.

**6.4.2 Double pipe sub-gravity feed systems and single pipe suction lift with de-aerator:**

- ▶ Prime the oil supply pipework to prevent oil pump damage.
- ▶ To prime a de-aerator [2], disconnect the flexible oil inlet hose [7] from the isolation valve and place in a container of heating oil[6]. Connect a spare flexible oil hose [5], to discharge into container [6]. Open the isolating valve, turn on the power to the boiler and set the programmer to ON. Prime the de-aerator until there is a steady flow of oil into container [6]. Turn off the boiler then reconnect the flexible oil inlet hose [7].
- ▶ Turn on the boiler, set the programmer to ON and turn the room thermostat up to create a demand for heat. The oil level in the de-aerator will drop whilst the oil is being drawn from the tank. If the de-aerator empties and the burner locks out before the oil is drawn from the tank, you will have to prime the de-aerator again.

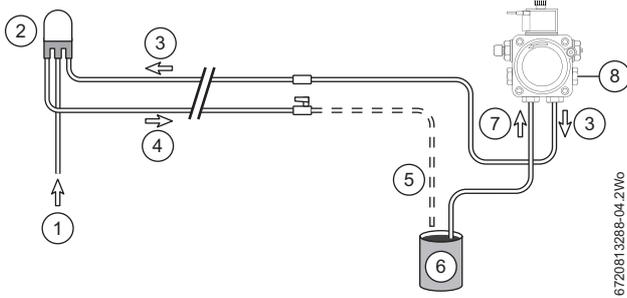


Fig. 57 Prime the oil supply pipework

- [1] Oil supply
  - [2] De-aerator
  - [3] Return
  - [4] Flow
  - [5] Spare flexible oil hose
  - [6] Container of oil
  - [7] Oil pump flexible inlet hose
  - [8] Bleed and pressure gauge port
- ▶ Switch off the boiler.
  - ▶ Safely dispose of the container/discharge.

**6.4.3 Pump adjustments**

2. Fit a suitable pressure gauge to port [3] on the oil pump.

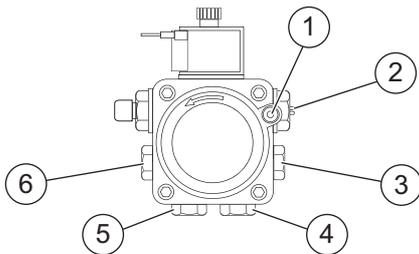


Fig. 58 Oil pump ports/connections

- [1] Vacuum gauge port
  - [2] Pressure adjuster
  - [3] Bleed and pressure gauge port
  - [4] Return connection
  - [5] Inlet connection
  - [6] Auxiliary pressure gauge port
- ▶ Adjust the air shutter [3] → figure 59 and pump pressure [2] → figure 58 as shown in the table 10 on page 39. The burner should ignite following a pre-ignition period of approximately 15 seconds.
  - ▶ If changing the burner output, check the position of the air damper disc is correct to the output as shown in the table below.



Adjust position of air damper discs to suit burner output (see table 10 on page 39), located as above. Access by undoing the two screws [4] to release the air inlet cover.

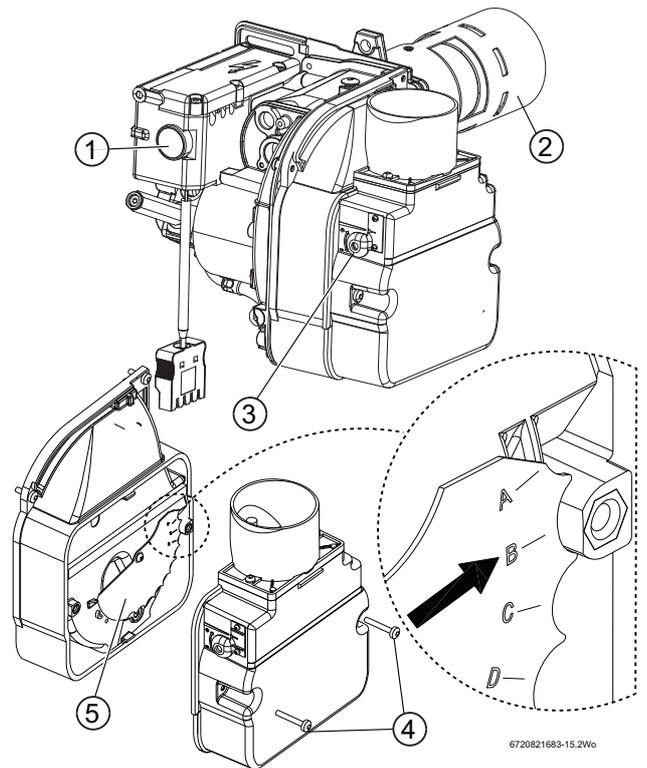


Fig. 59

- [1] Lockout reset button
- [2] Blast tube
- [3] Air shutter adjuster
- [4] Captive screws air intake cover
- [5] Air shutter disk

**6.4.4 Burner head setting**

Adjustments to the burner head are made on the basis of the required output, refer to table 10 for the required setting for your boiler.

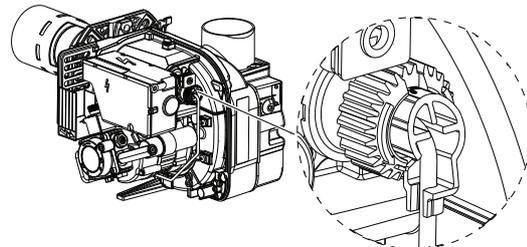


Fig. 60 Burner head adjustment thumbwheel

One complete rotation clockwise (cw) from the minimum position equals approximately one millimetre. Adjust the thumb-wheel to achieve the setting indicated in the table 10, according to your appliance model and output.

Using an engineer's rule or vernier gauge measure from the lip of the blast tube to the inside of the break plate as show in the figure below. Ensure that the break plate is level, check at four equal points to get an average of the required setting. The setting tolerance should be no more than  $\pm 0.25\text{mm}$

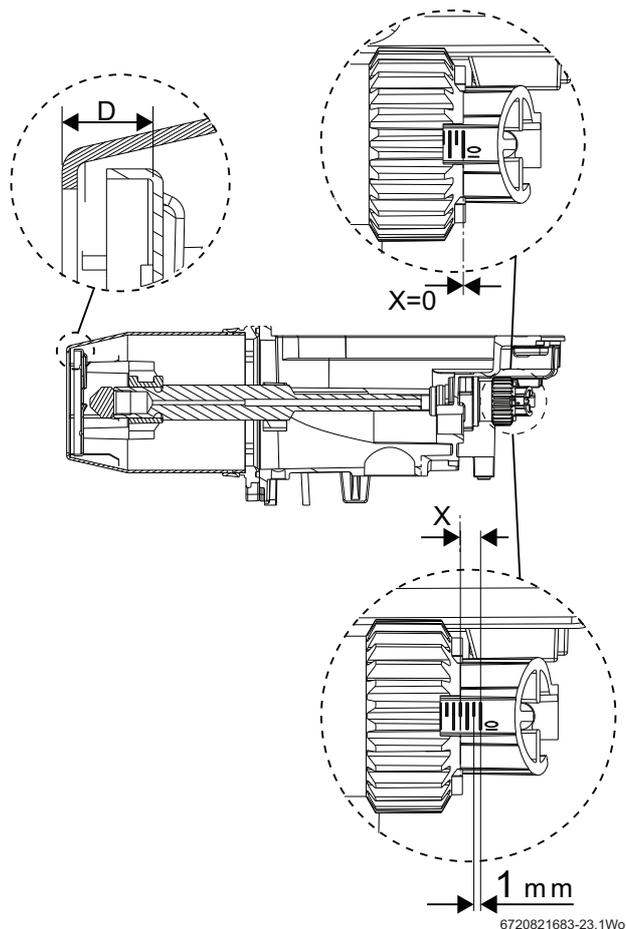


Fig. 61 Burner head adjustment

**6.4.5 Boiler lock out indicator on:**

If the burner fails to establish a normal firing pattern or flame failure occurs the flame monitoring photocell mounted in the burner body will alert the burner control box to shut the burner down and provide a safe lockout state indicated by the illumination of the lockout indicator [1].

- ▶ Wait 2 minutes then press the lockout reset button [1] (see figure 62) to initiate another start sequence.
- ▶ Repeat procedure until a flame is established.

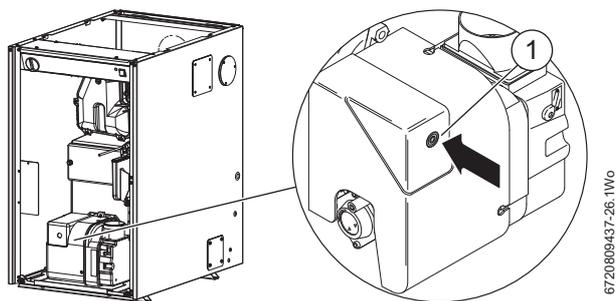


Fig. 62 Reset button

- ▶ Start and run for 3 minutes then switch off.
- ▶ Release the burner retainer nut.
- ▶ Remove the burner.
- ▶ Check for after-spurting from the nozzle, indicated by oil saturation on the combustion head [2] figure 64.

If after-spurting occurs:

- ▶ Remove the combustion head [2] figure 64 and electrodes, hold the burner vertically, unscrew the nozzle and fill the nozzle holder with kerosene.
- ▶ Refit nozzle, electrodes, combustion head [2] figure 64 and burner.

- ▶ Restart and run for 3 minute intervals until after-spurting stops.

**6.4.6 Combustion checks**

- ▶ Start and run the boiler for 20 minutes
- ▶ Remove sampling point plug [1] to check the smoke reading is between 0-1. If the smoke level is above 1, check the combustion settings are correct and the oil nozzle is in good condition.

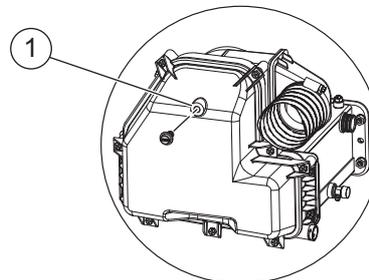


Fig. 63



Smoke readings may be inaccurate until the smoke from burning organic binder in the access door insulation has ceased.

- ▶ Check the CO<sub>2</sub> levels and adjust the air shutter [6] figure 64 setting according to the table opposite.
- ▶ Check the flue gas temperature is close to the values shown in the table 10 on page 39.



If the flue gas temperature is too high and the baffles are correctly fitted, then reduce the oil pump pressure [3] fig. 64, 5-10 p.s.i. to compensate for nozzle variations. If the pump pressure has been changed, the CO<sub>2</sub> levels must be rechecked and air shutter adjusted if necessary.

- ▶ Turn off the electrical supply.
- ▶ Isolate the oil supply to the burner.
- ▶ Remove the oil pressure gauge.
- ▶ Refit the blanking plug [4] figure 64.
- ▶ Check and rectify any oil leaks.
- ▶ Switch on the oil supply.
- ▶ Switch on the electrical supply.
- ▶ Restart the boiler and run for 5 minutes.
- ▶ Recheck the CO<sub>2</sub> levels and if required, adjust the air shutter setting [6] figure 64 to obtain the correct CO<sub>2</sub> level.
- ▶ Refit the sample point cap (hand tighten only, do not over tighten) and refit the burner cover.

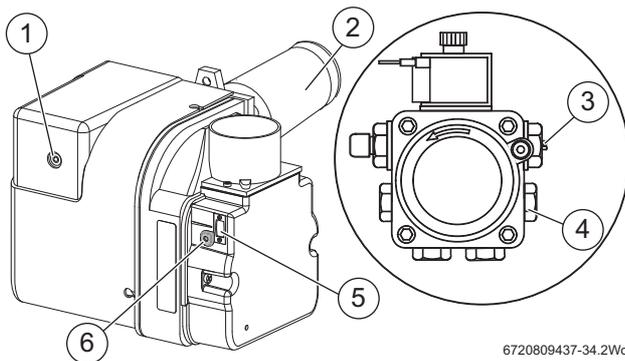


Fig. 64

- [1] Reset button
- [2] Blast tube
- [3] Pressure adjustment
- [4] Bleed and pressure gauge port
- [5] Air shutter display window
- [6] Air shutter adjuster

**6.4.7 Central heating**

- ▶ Open all radiator valves.
- ▶ Set room thermostat to maximum.
- ▶ Set programmer to ON for CH, OFF for DHW (if applicable).
- ▶ Turn the thermostat control [1] to max.

The demand indicator [2] should illuminate and the burner should be ON with the circulating pump.

- ▶ Ensure all radiators are heating up evenly and balance the system to the temperature difference required for the heating flow and return according to the heating load.
- ▶ Set the room thermostat to minimum.  
The demand indicator light [3], burner and circulating pump should be off.
- ▶ Check that any other controls that are fitted to the system are operating properly.

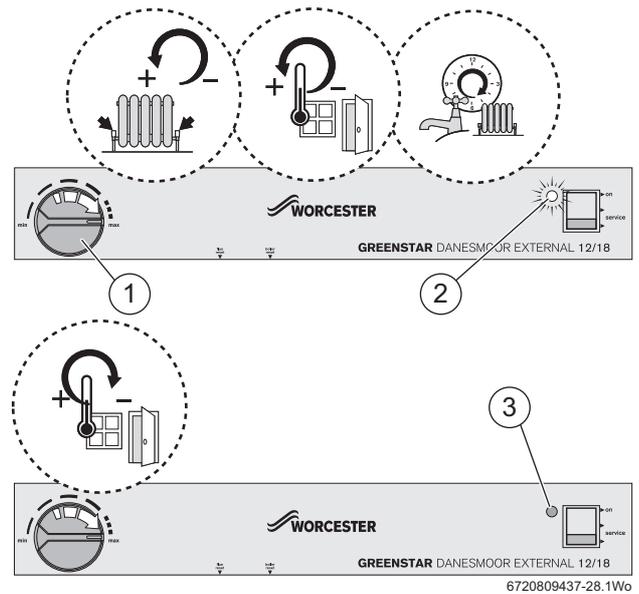


Fig. 65

**Combustion settings**



**APPLIANCE MUST BE SET TO CO<sub>2</sub> LEVELS.**  
**AIR SETTINGS GIVEN ARE APPROXIMATE ONLY, AS FLUE LENGTH AND NOZZLE VARIATIONS WILL AFFECT THIS.**


**Nominal boiler rating at normal operating temperature using Kerosene (Class C2)**

Nozzle	Oil pump pressure bar	Oil pump pressure psi	Fuel flow rate Kg/h	Fuel flow rate l/h	Approx flue gas temp. °C	CO <sub>2</sub> %	Combustion head settings mm	Approx. air setting	Input (appliance) kW	Output (appliance) kW	Air damper disc setting	Flue damper required	Burner head
<b>Greenstar Danesmoor 12/18 model</b>													
0.40 x 80° EH	8.5	123	1.12	1.38	67	12.0	10.5	2.3	13.2	13.0	A	Yes	BX & recirculation tube
0.40 x 80° EH	10.0	145	1.30	1.60	70	11.5	11	1.75	15.3	15	B	Yes	BX & recirculation tube
0.50 x 80° EH	10.0	145	1.54	1.90	80	12.0	11.5	2.5	18.3	18.0	C	Yes	BX & recirculation tube
<b>Greenstar Danesmoor 18/25 model</b>													
0.50 x 80° EH	10.0	145	1.54	1.90	76	12.5	12.5	1.5	18.3	18.0	N/A	Yes	BX
0.60 x 60° EH	8.8	128	1.84	2.28	81	12.5	14	3.25	21.9	21.5	N/A	Yes	BX
0.65 x 80° EH	9.5	138	2.15	2.66	90	12.5	15	3.25	25.5	25.0	N/A	Yes	BX
<b>Greenstar Danesmoor 25/32 model</b>													
0.65 x 80° EH	9.8	142	2.15	2.66	79	11.5	19	3.5	25.5	25.0	N/A	No	BX
0.75 x 80° EH	10.3	150	2.46	3.04	84	12.0	19	4.25	29.1	28.5	N/A	No	BX
0.85 x 80° EH	10.0	145	2.78	3.44	85	12.5	19	4.75	32.7	32.0	N/A	Yes	BX

Table 10 Combustion settings

## 6.5 Finishing commissioning

- ▶ Refit the top panel [2] and press down to compress the seal when fitting the securing screws [1].
- ▶ Push the front panel [4] up behind the top panel and push in at the base to secure with the latches [3] using the key provided. Always apply pressure at the edges of the boiler panels when securing to avoid accidental damage.

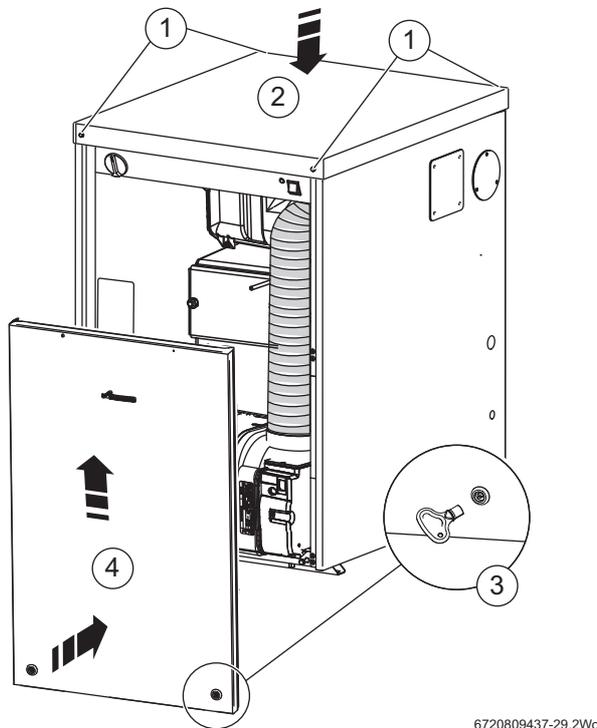

6720809437-29.2Wo

Fig. 66

### 6.5.1 Hand over

- ▶ Complete the Boiler commissioning checklist at the back of this manual and CD11 or an equivalent commissioning form.
- ▶ Set up the controls and show the customer how to operate all the controls shown in the User Guide plus any external controls.
- ▶ Instruct the customer on:
  - Sealed systems: The need to re-pressurise the appliance occasionally and the pressure expected at the pressure gauge.
  - Sealed systems: Location of the filling loop and system pressure gauge.
  - Sealed systems: The use of the filling loop and how to re-pressurise the system.
  - How to use the TRVs.
  - How to reset the appliance.
- ▶ Show the customer the fault finding information in the User guide.
- ▶ Show the customer where the serial number/appliance information is when they call in with a problem (Boiler commissioning checklist at the rear of the manual).
- ▶ Give the customer details of how to contact the installer/emergency numbers.
- ▶ Show the customer how to safely isolate the appliance.
- ▶ Advise the customer where they can find information on the Worcester, Bosch Group website [www.worcester-bosch.co.uk](http://www.worcester-bosch.co.uk).
- ▶ Advise the customer that the varying external temperatures will affect the output of the appliance, especially the DHW.
- ▶ Ensure that the User Guide and Installation, Commissioning and Service manual, with the Boiler commissioning checklist and service record, is left with the appliance or homeowner.

- ▶ If the appliance is unused and exposed to freezing conditions, shut off all the mains supplies and drain the system and appliance, label accordingly.
- ▶ Show the customer the location of the condensate pipe run for external/unheated areas that maybe at risk of prolonged cold temperatures.

### 6.5.2 Appliance guarantee

This appliance has a guarantee against faulty materials or workmanship for a period from the date of installation subject to the following terms and conditions:

- During the period of this guarantee any components of the appliance which are proven to be faulty or defective in manufacture will be exchanged or repaired free of charge by Bosch Thermotechnology Ltd.
- The householder may be asked to prove the date of installation, that the appliance was correctly commissioned and, where appropriate, the first year's service has been carried out to the satisfaction of Bosch Thermotechnology Ltd., when requested. These should be documented as a part of the Boiler commissioning Checklist.
- The appliance has been used only for the normal domestic purposes for which it was designed.

This guarantee does not affect your statutory rights.

### Guarantee registration

Your Greenstar appliance carries a guarantee against faulty material or manufacture subject to Terms and Conditions.

Guarantee Registration can be completed:

- On-line
  - You can register on our website:  
[www.worcester-bosch.co.uk/guarantee](http://www.worcester-bosch.co.uk/guarantee)
- By phone
  - You can register by ringing 0330 123 2552
- By post
  - Please send your completed form to:  
Worcester, Bosch Group, Cotswold Way, Warndon, Worcester, WR4 9SW.

To read the full Terms & Conditions please visit us on-line at [www.worcester-bosch.co.uk/guarantee](http://www.worcester-bosch.co.uk/guarantee).

Your statutory rights are not affected by the manufacturer's guarantee.

## 7 Service and Spares

### 7.1 Inspection and service - 18/25 Regular shown



**CAUTION: MAINS SUPPLIES**

- ▶ Isolate the water, electricity, and oil mains supplies before starting any work and observe all relevant safety precautions.

#### Routine servicing

To maintain efficient boiler operation, the following should be carried out at least once a year, carry out a pre-service check and note any operational faults.

#### Service requirements

See the following instructions for detail of some of the service requirements:

- ▶ Check that the safety and regulation devices (3 bar safety valve, air bleed, etc.) are operating properly.
- ▶ Also check that neither the installation nor the appliance present any water or fuel leaks, (leaks may produce a safety risk and shorten the life-span).
- ▶ Clean or replace all oil filters.
- ▶ When it is frequently necessary to add water to maintain pressure in the installation, even though no leaks have been discovered, perform an expansion vessel check.
- ▶ Check that the condensate system is not obstructed, clean and refill the condensate trap as necessary.
- ▶ Check the condition of the various seals (burner flange, burner door, flue outlet, etc.).
- ▶ Check and clean the burner.
- ▶ Replace the burner nozzle and flexible oil pipe/s.
- ▶ Check and clean the primary and secondary baffles.
- ▶ Check and clean the heat exchangers surfaces.
- ▶ Check the combustion chamber access door insulation board.
- ▶ Check that the flue system is unobstructed and clean as necessary.

#### Sealed system only

The PRV is a safety device and must be checked for correct operation. The expansion vessel pressure must also be checked and adjusted if required.

#### Oil supply system and tank


- ▶ The oil pipeline, filters, fire valve and tank should be inspected and maintained in accordance with OFTEC regulations.

#### Fire valve

- ▶ Check that the oil supply pipe has a fire valve fitted externally to the building / appliance with the fire valve sensor located within the appliance case.  
A fire valve sensor clip is provided for this purpose on the rear of the control box above the burner.  
The fire valve should be rated at 85 °C or above to avoid nuisance cut outs.

#### Pre-service checks


- ▶ Release the latches [3] at the base of the front panel [2] using the key provided and lift the panel and pull towards you to remove. Store the panel safely away from the working area.
- ▶ Operate the appliance and system and note any faults which may need to be corrected during the service.
- ▶ Switch into service mode at switch [1].

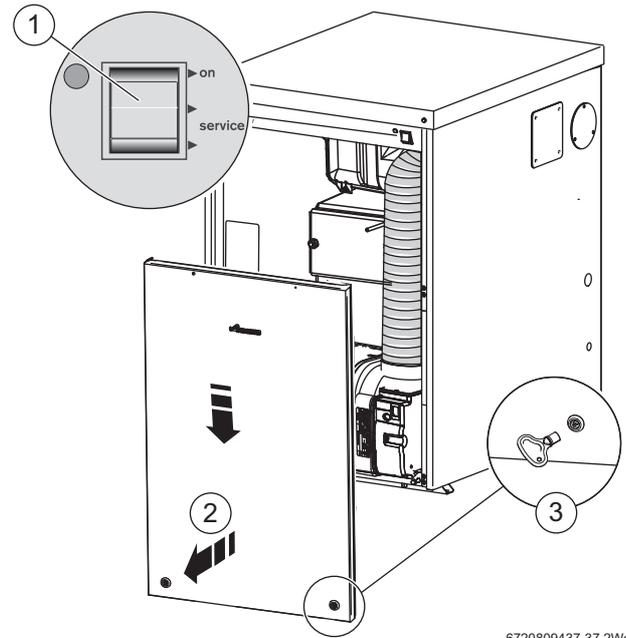

6720809437-37.2Wo

Fig. 67 Access to internal components

- ▶ Unplug burner lead [1] from control box.
- ▶ Unscrew to loosen the retaining ring [4] that secures the flexible air supply tube [3] to the burner and remove from the burner.
- ▶ Undo and remove the retaining nut [2] on the top of the burner. The burner can now be removed from the heat exchanger. Store the burner and retainer nut safely away from the boiler.

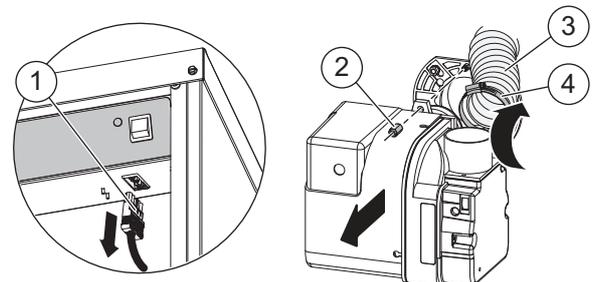

6720809437-16.1Wo

Fig. 68 Disconnecting burner

## 7.2 Clean the appliance

### 7.2.1 Cleaning the flue manifold and secondary heat exchanger

Refer to figure 69.

- ▶ Release screws [1] to remove the flue manifold access cover [2] and clear any debris.
- ▶ Check the flue system and clean if necessary. Leaks can be detected through the appearance of condensate runoff traces on the outside of the flue.
- ▶ Check:
  - the inside of the outlet with a torch.
  - the connection to the flue manifold assembly.
  - the end of the outlet and any joints.
- ▶ Remove the baffle retainer [3] and baffles [4] from the secondary heat exchanger.
- ▶ Check and clean the secondary heat exchanger surfaces.
- ▶ Clean the burner air inlet tube, if necessary.



Do not use wire brushes or cleaning agents to clean the stainless steel secondary heat exchanger components.

Check the condensate route [5] is clear.

- ▶ The condensate trap [7] should be removed and cleaned.
- ▶ Release the pipe locking tab [8] and disconnect the flexible pipe [9] from the top of the trap and move the flexible pipe up away from the trap.
- ▶ Release the trap locking tab [10] and move the trap up and back to remove from its mountings.
- ▶ Clean the trap by flushing with water.
- ▶ Check the O ring seals and replace if necessary, grease the seals with a solvent free grease.
- ▶ Refit the trap making sure that the locking tabs are locked in place.
- ▶ Pour 500 ml of water into drain [5] to refill the condensate trap and check that the condensate discharge pipe is discharging.
- ▶ Clean the secondary heat exchanger baffles [4] if necessary and refit correctly.
- ▶ Refit the baffle retainer [3].
- ▶ Check the seal on the manifold access cover [6] and replace if necessary.
- ▶ Refit the flue manifold access cover [2] and secure with screws [1].

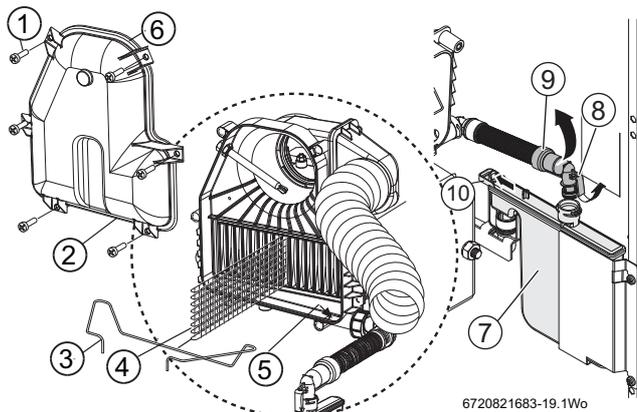


Fig. 69 Secondary heat exchanger and condensate trap detail

### 7.2.2 Combustion chamber baffle check

Refer to figure 70

- ▶ Release retaining nuts and washers [3] and remove combustion chamber access door [1].
- ▶ Check that the combustion chamber seal is in good condition, replace if necessary.
- ▶ Remove the baffle, check the condition of the baffle and clean or replace as necessary.
- ▶ Thoroughly clean all of the heat exchanger surfaces using a suitable brush and clear all loose debris from the combustion chamber.
- ▶ After cleaning ensure that the one piece baffle set [2] is in the right location, correctly resting on the baffle rests [4] on either side of the combustion chamber and pushed securely into place. Baffle sets for the 18/25 and 25/32 boilers are identified with tabs on the front and rear edge.

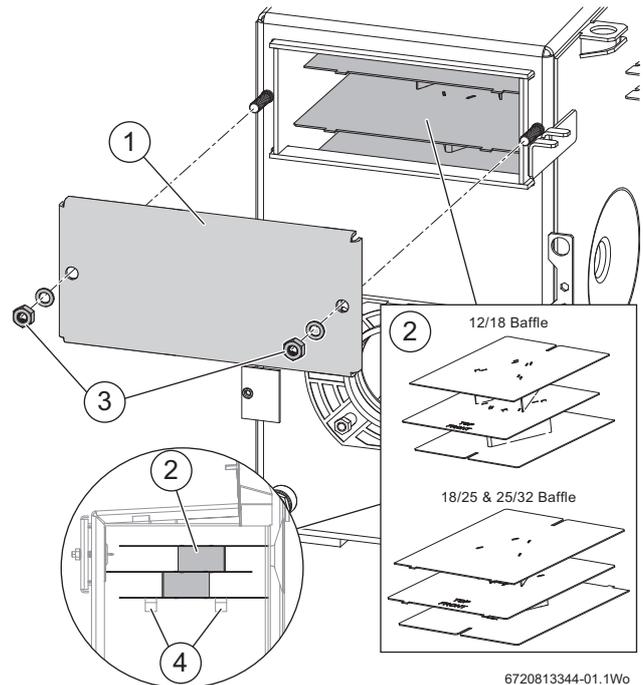


Fig. 70 Primary heat exchanger baffle check

- ▶ Check the condition of the combustion chamber access door insulation. If the insulation is damaged the door assembly must be replaced.
- ▶ Secure combustion chamber access door [1] with nuts and washers [3]. Tighten until door is firmly secured. Do not overtighten the nuts.

### 7.2.3 Clean the burner

- ▶ Remove the two hex head screws [1] and remove the air intake cover [2] and clear any debris from the air intake and air shutter.
- ▶ Remove the four screws [3] and remove the suction inlet [4] to gain access to the fan.
- ▶ Clean both sides of the fan and suction inlet cover with a brush and compressed air.
- ▶ Check the condition of the gaskets between these parts and replace if necessary.
- ▶ Note the position of the air shutter adjustment and check the air shutter moves freely.
- ▶ Check that the fan rotates freely.
- ▶ Reassemble the components.

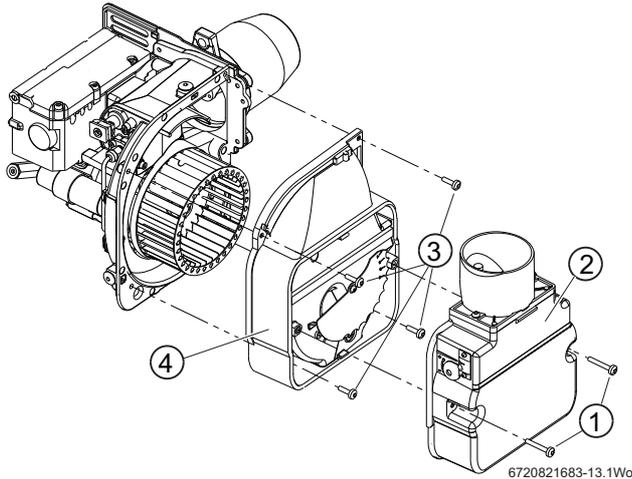


Fig. 71 Fan access

#### Oil burner nozzle

Before removing or fitting a new nozzle refer to figure 72:

- ▶ Remove the screws [1] from the blast tube [2] and remove the blast tube



There is a recirculation tube fitted to the 12/18 models, this does not need to be removed from the blast tube

- ▶ Unplug the HT leads [4]
- ▶ Loosen the screw [3] securing the break plate [5] and slide the unit off
- ▶ Use a suitable spanner to stop the nozzle body turning
- ▶ Remove the nozzle [8] and secure the new nozzle, hand tight
- ▶ Tighten the nozzle utilising the two spanners used during removal, do not overtighten

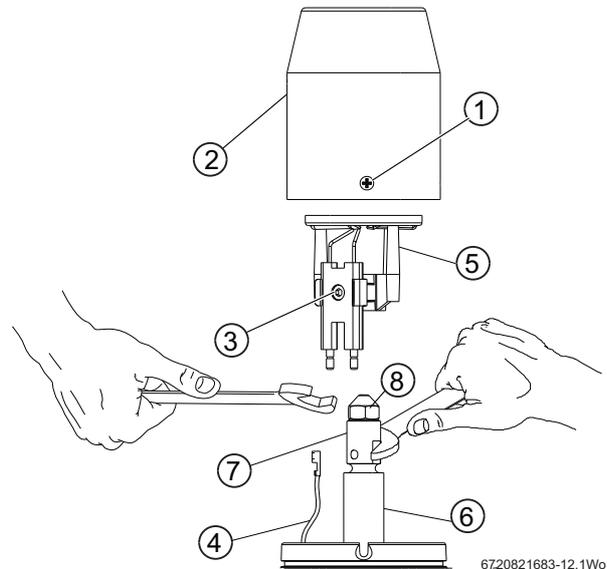


Fig. 72 Nozzle access

Refer to figure 73 Photo cell alignment

- ▶ Refit the break plate [5] ensuring that the break plate is pushed fully on to the nozzle holder [6].
- ▶ To align the hole [9] in the break plate with the photocell, ensure that the fixing screw [3] is located fully in the seating [7] provided in the nozzle holder [6].

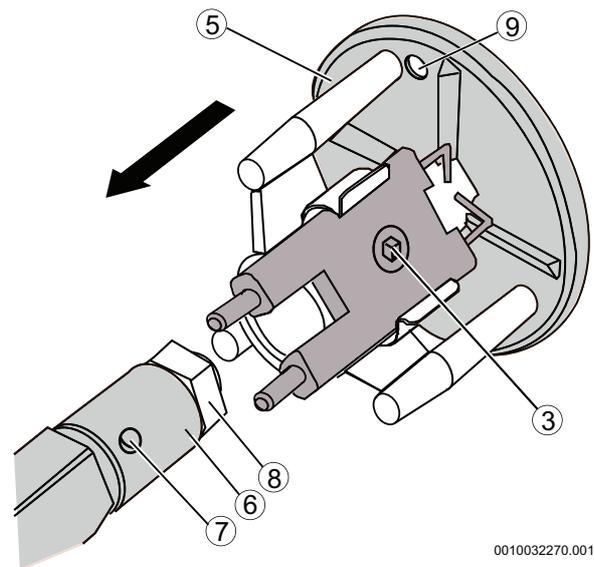


Fig. 73 Photocell alignment

- ▶ Reconnect the HT leads [4]
- ▶ Refit the blast tube [2] and secure with the screws [1]

Refer to figure 74:

- ▶ Check that the nozzle [1] and the electrode [2] alignment settings are correct.
- ▶ Ensure that the nozzle [1] is aligned centrally within the combustion head .
- ▶ Inspect for any visible defects.


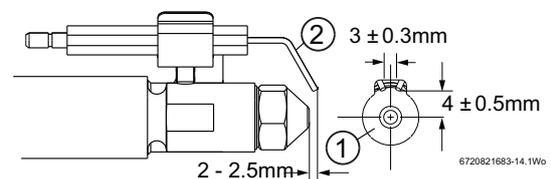


Fig. 74 Nozzle and electrode alignment

**Pump filter**

- ▶ Refer to figure 75 and remove the oil pump internal filter, clean in Kerosene and reassemble.

The internal filter is accessed by removing screws [1] and the oil pump cover [2].

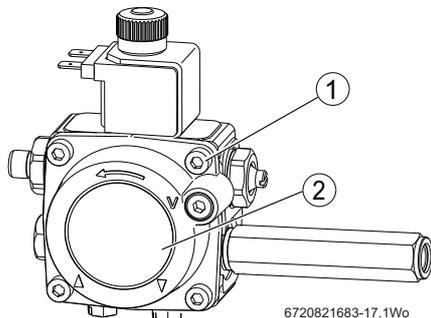

6720821683-17.1Wo

Fig. 75 Pump filter access


- ▶ Replace the standard flexible oil line/s at every annual service to prevent the possibility of leakage due to ageing.
- ▶ Reassemble the burner components.
- ▶ Check the O-ring seal located around the combustion head and replace if necessary. This seal must be in good condition, seal failure will cause flue gases to escape into the room.

**7.2.4 Re-commission the burner**

**WARNING:** Flue gas leakage

The seal between the burner and the mounting flange must form a gas tight seal to prevent leakage of potentially dangerous gas from the combustion chamber.

- ▶ Unless the burner is level when pushing the burner into the flange the O-ring may not seat properly allowing flue gas to escape!
- ▶ Always check that the O-ring seal (Fig 76 item A) is in good condition before fitting the burner. Replace the O-ring seal if defective.

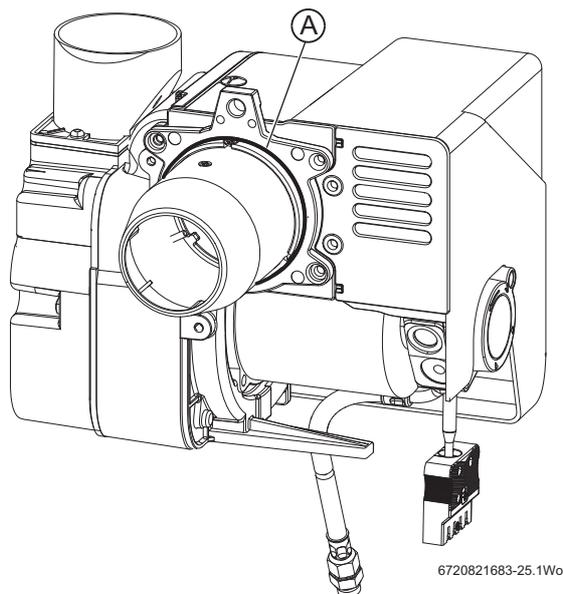

6720821683-25.1Wo


Fig. 76 18/25 and 25/32 Burner O-ring seal shown



**Combustion settings**

- ▶ Refer to table 10, page 39.


- ▶ Remove plastic cover [1] from the burner.
- ▶ Fit a suitable pressure gauge to the bleed and pressure gauge port [2] on the oil pump.

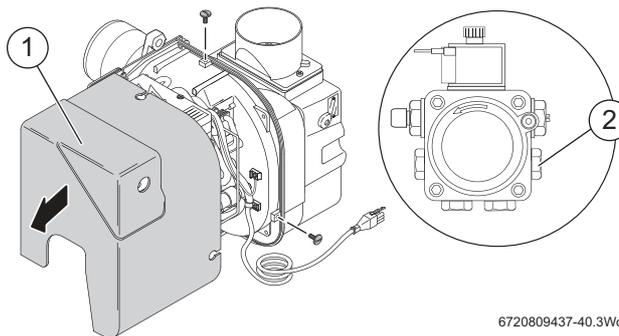

6720809437-40.3Wo

Fig. 77 Access to bleed and pressure gauge port

- ▶ Slide the burner into position in the heat exchanger and secure with the retaining nut [2] on top of the burner.
- ▶ Reposition the flexible air supply tube [3] over the burner air supply connection [5].
- ▶ Secure the flexible air supply tube [3] in place with the locking band [4].
- ▶ Plug the burner lead [1] into the control box.

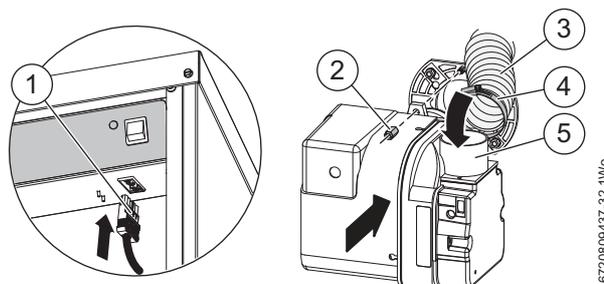

6720809437-32.1Wo

Fig. 78 Refitting the burner

- ▶ Create a heating demand, the burner should ignite following a pre-ignition period of approximately 15 seconds.
- ▶ Check that the:
  - Oil pressure is correct for the required appliance output.
  - Smoke reading is between 0 - 1.

If the smoke reading is above 1:

- ▶ Check the air setting.

If the air setting is correct:

- ▶ Check that the burner has been reassembled correctly.
- ▶ Allow the appliance to warm up then:
  - Ensure that the CO<sub>2</sub> levels are correct as indicated in table 10, page 39.
  - Adjust the CO<sub>2</sub> if necessary using the air shutter.

When the combustion settings are correct:

- ▶ Remove the pressure gauge, refit the blanking plug and plastic cover.

**Before hand over**

- ▶ Make sure oil flexible line/s are routed correctly so to avoid being damaged or trapped.

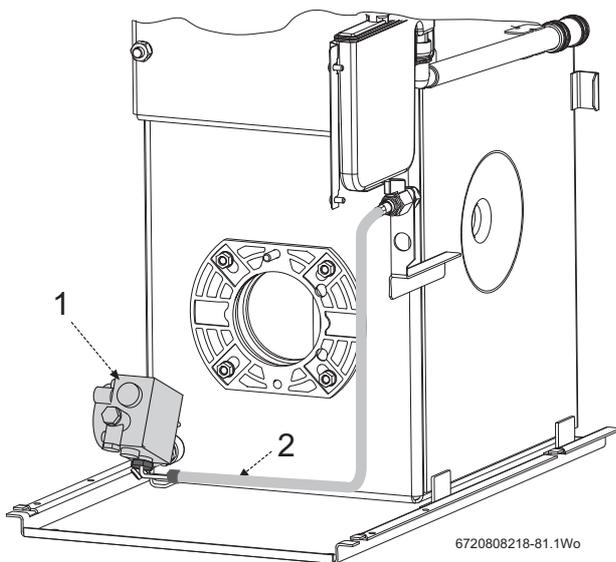


Fig. 79 Oil pump and hose detail

- [1] Oil pump
  - [2] Flexible oil hose route. Ensure that the rigid 90° connection at the pump points to right when the boiler is viewed from the front and the flexible hose follows the route as show in the figure above.
- ▶ Refit the top panel [2] and press down to compress the seal when fitting the securing screws [1].
  - ▶ Push the front panel [4] up behind the top panel and push in at the base to secure with the latches [3] using the key provided. Always apply pressure at the edges of the boiler panels when securing to avoid accidental damage.

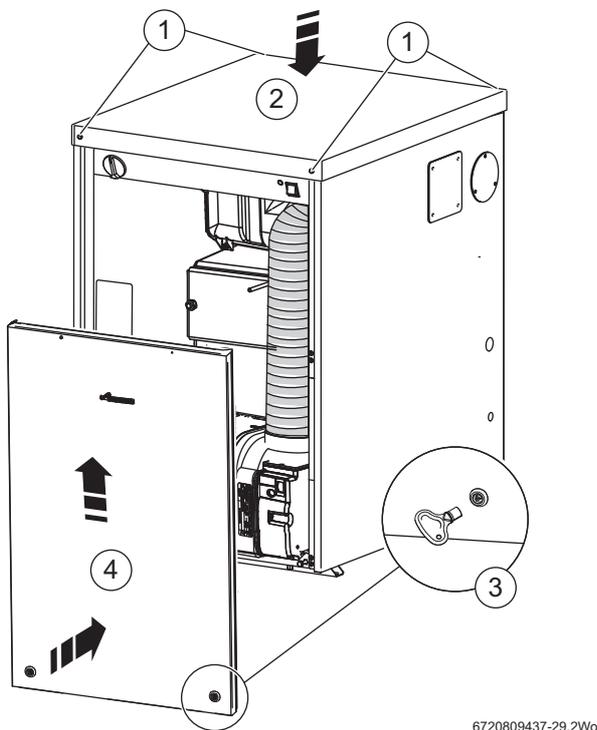


Fig. 80

#### After service hand over


- ▶ Make a note of the date of any water treatment.
- ▶ Set the controls back to the users requirements.
- ▶ Complete the service interval record at the back of this manual and a CD11 or an equivalent form.
- ▶ If the appliance is unused and exposed to freezing conditions; shut off all the mains supplies, isolate the boiler and drain the system and boiler, including the secondary heat exchanger.

#### Spares

For Worcester Bosch spares refer to the the website at [www.worcester-bosch.co.uk/spares](http://www.worcester-bosch.co.uk/spares)

## 8 Fault finding and diagnosis

### 8.1 Burner functions

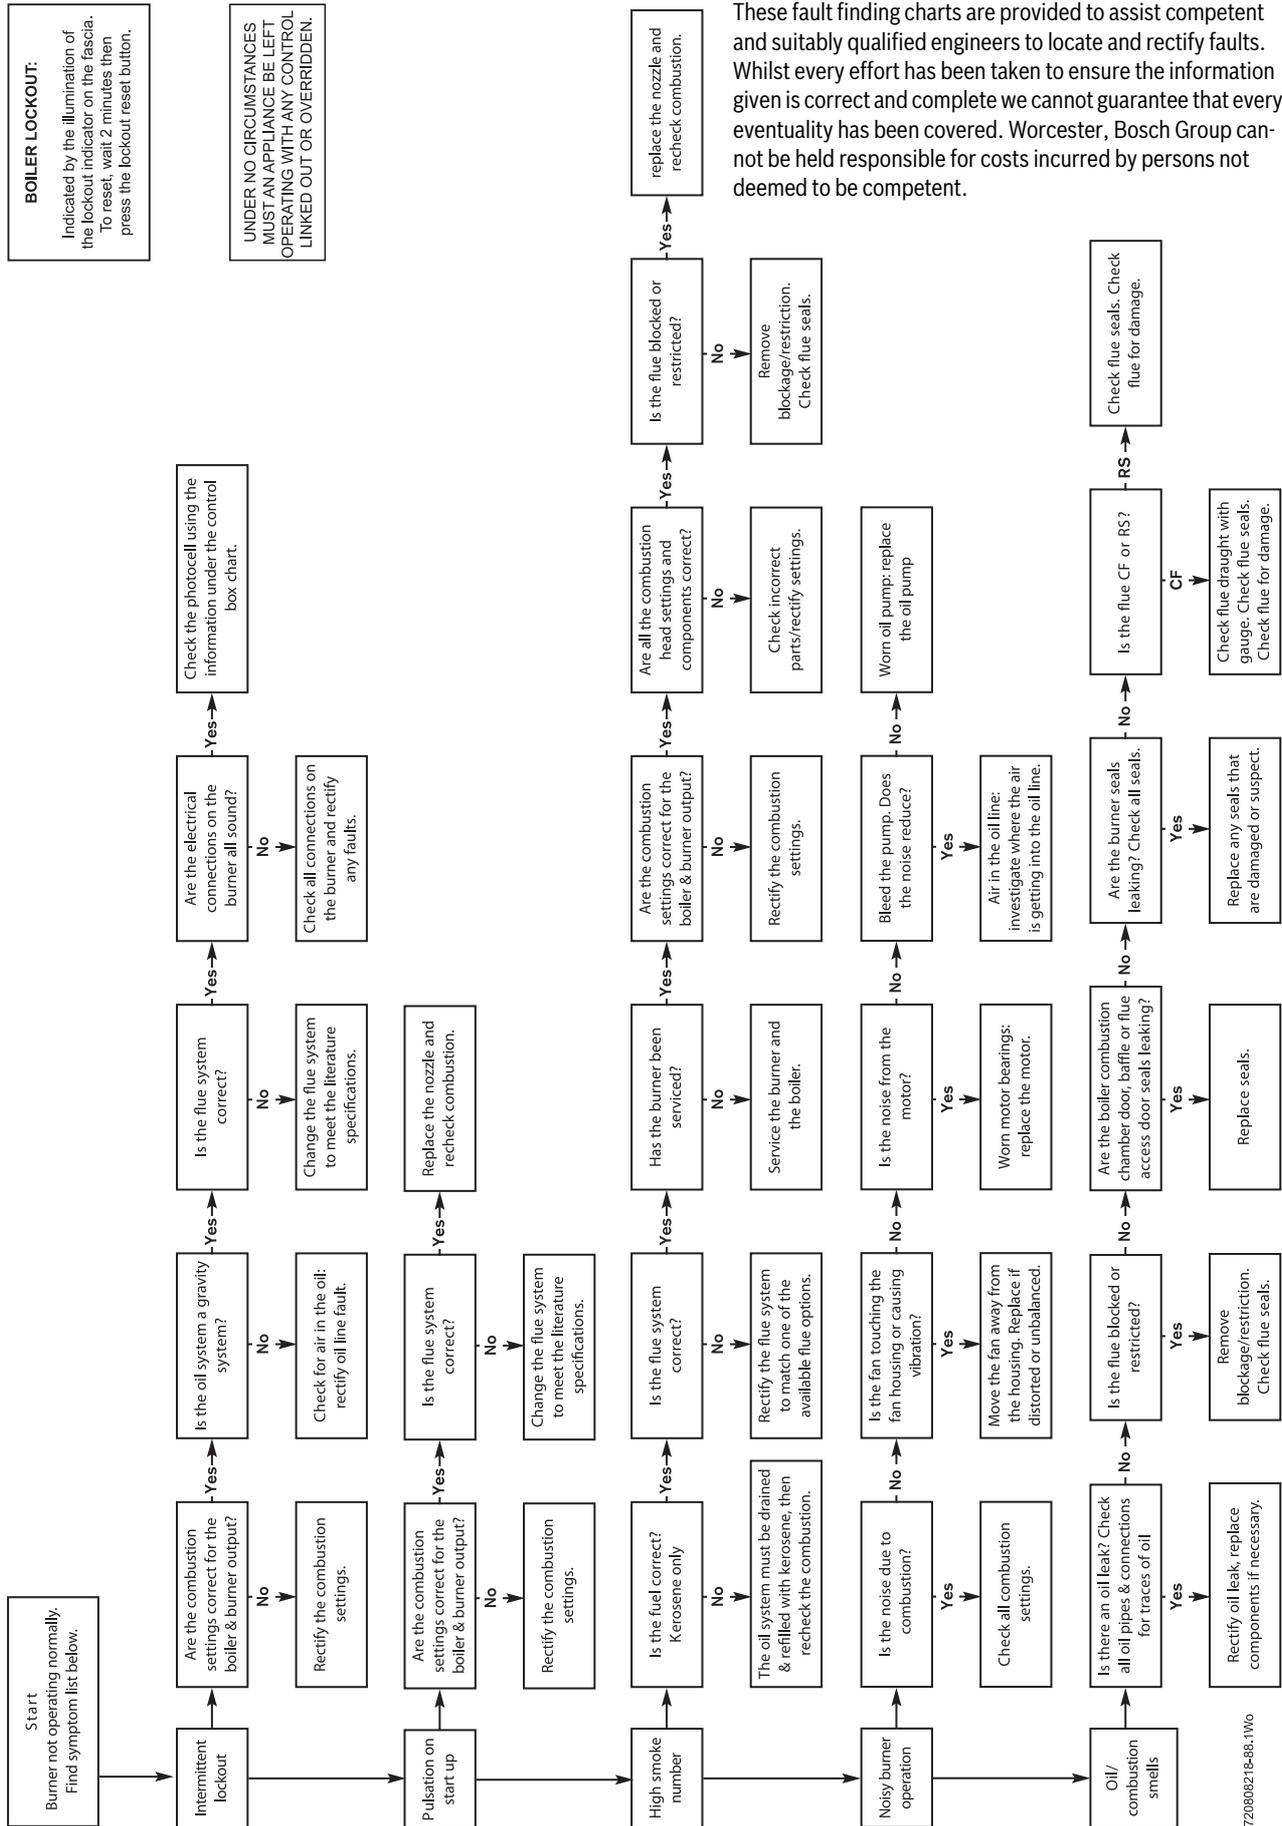

These fault finding charts are provided to assist competent and suitably qualified engineers to locate and rectify faults. Whilst every effort has been taken to ensure the information given is correct and complete we cannot guarantee that every eventuality has been covered. Worcester, Bosch Group cannot be held responsible for costs incurred by persons not deemed to be competent.


6720808216-08.1W0

## 8.2 Heating and hot water

These fault finding charts are provided to assist competent and suitably qualified engineers to locate and rectify faults. Whilst every effort has been taken to ensure the information given is correct and complete we cannot guarantee that every eventuality has been covered.


Worcester, Bosch Group cannot be held responsible for costs incurred by persons not deemed to be competent.

Measure all 230V tests between Neutral (N) and the pin, wire or terminal specified.

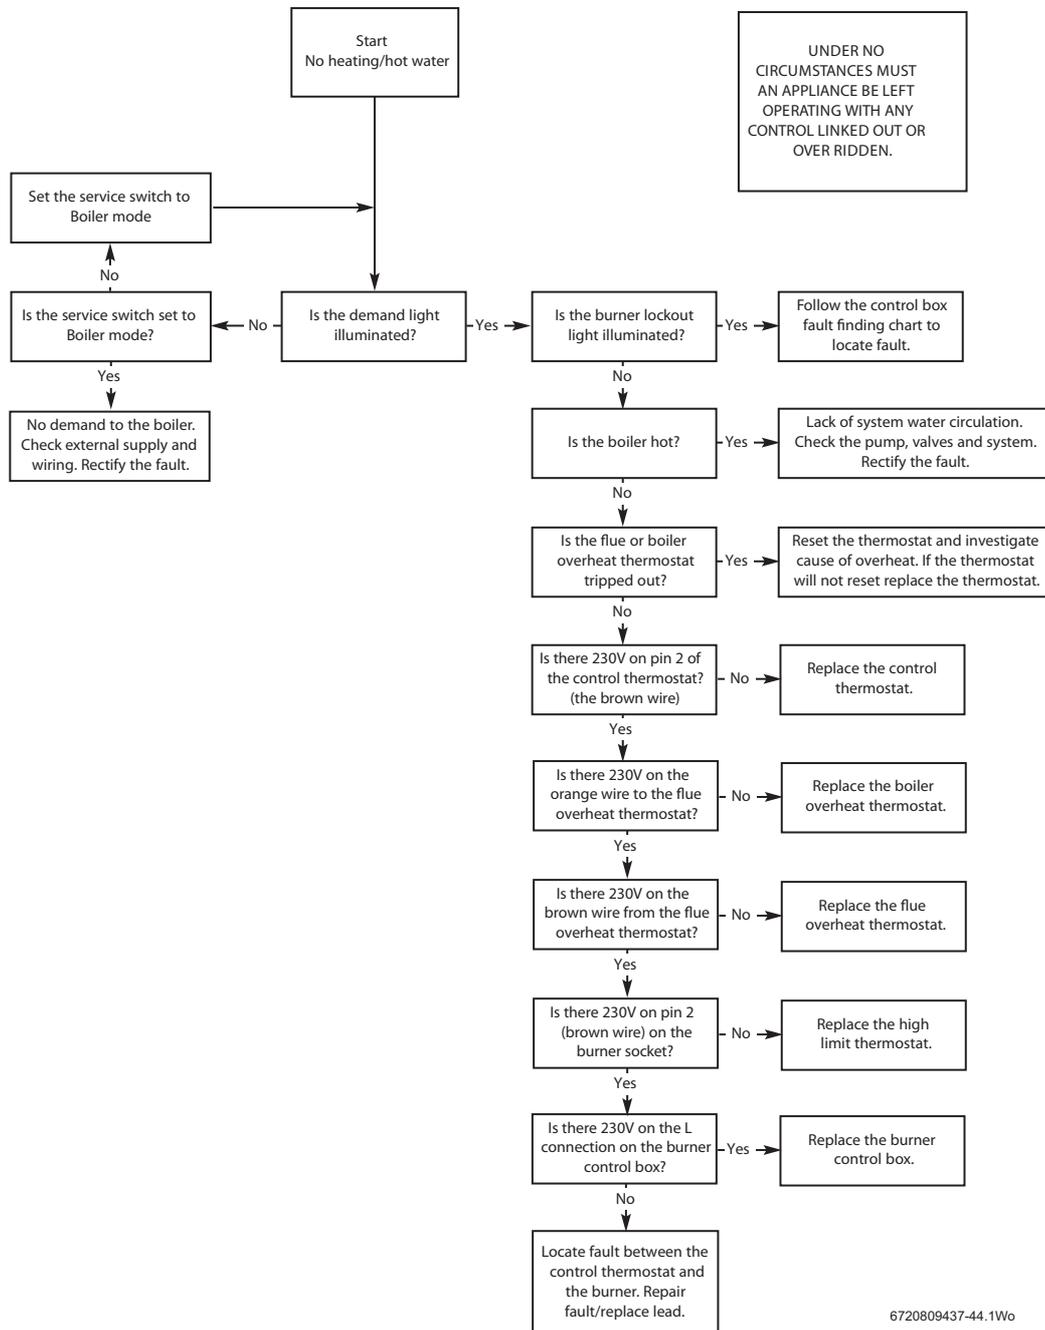

6720809437-44.1W6

### 8.3 Boiler function

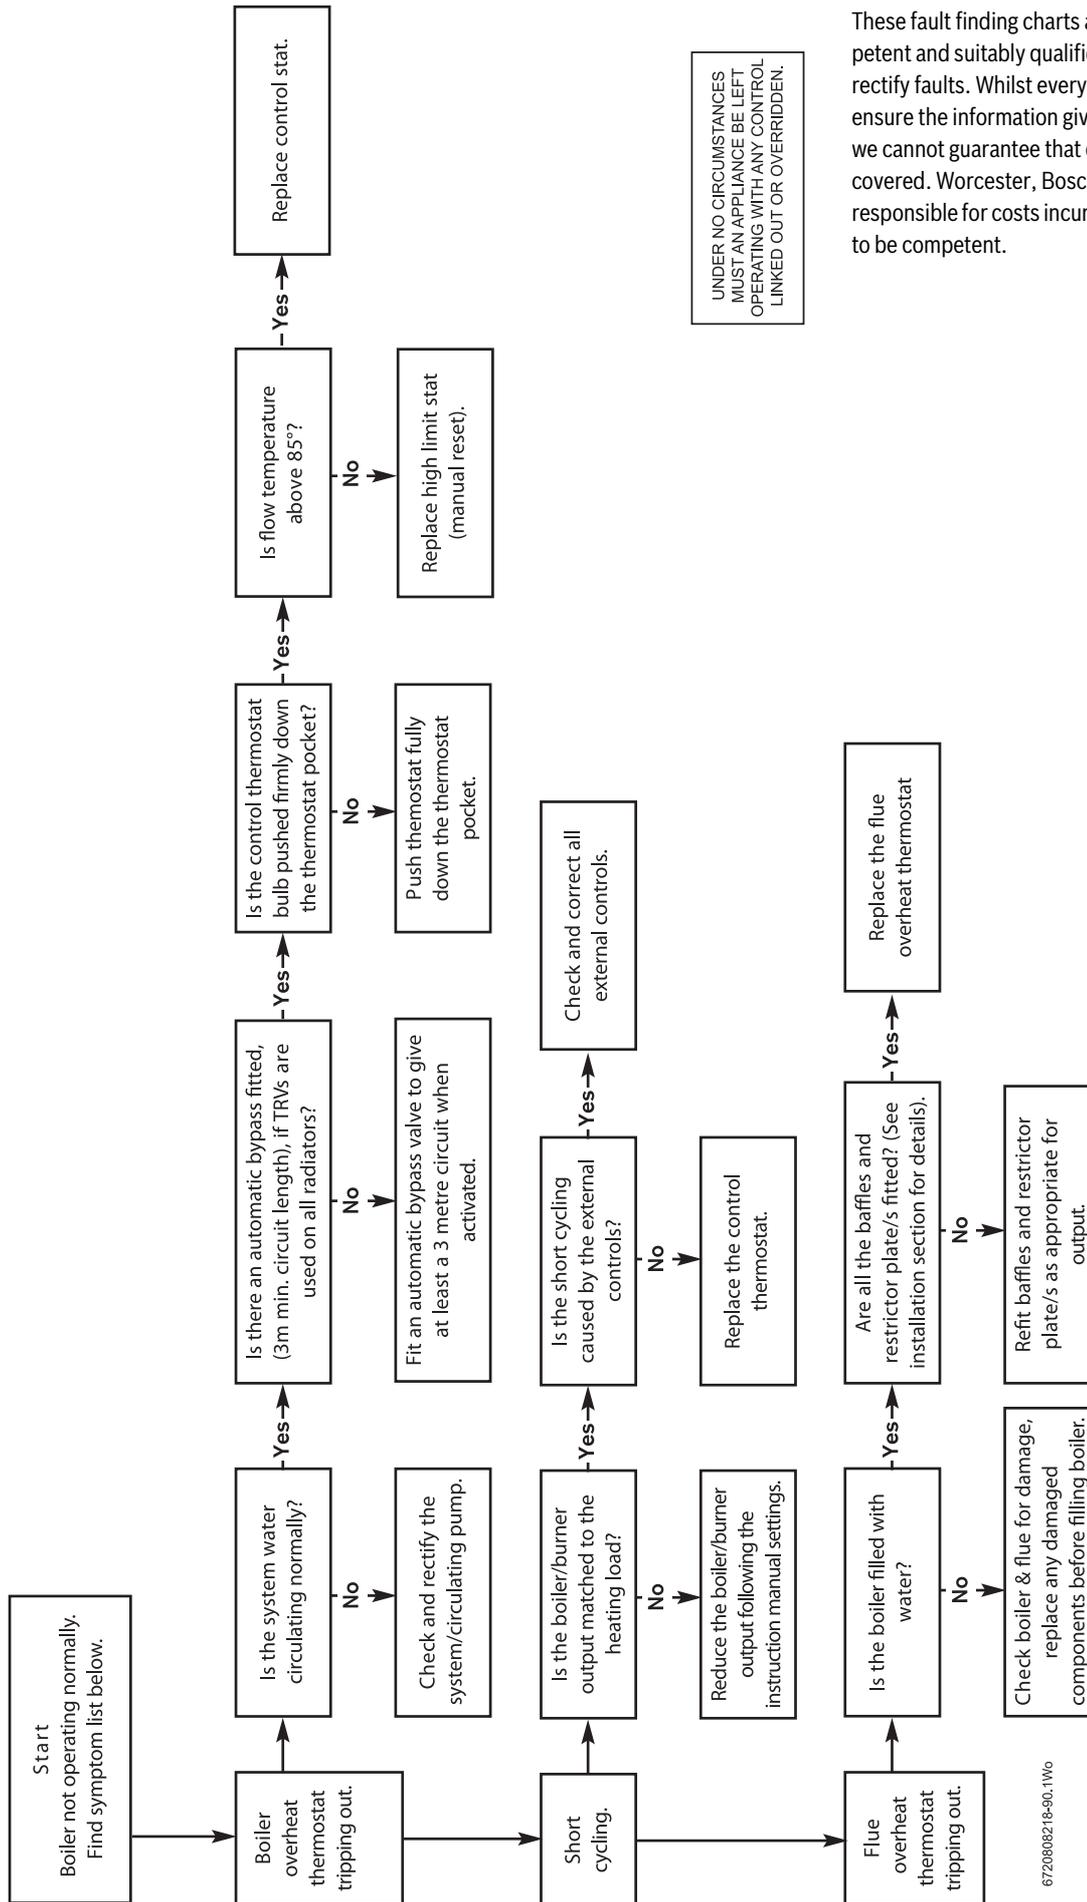


UNDER NO CIRCUMSTANCES MUST AN APPLIANCE BE LEFT OPERATING WITH ANY CONTROL LINKED OUT OR OVERRIDDEN.

These fault finding charts are provided to assist competent and suitably qualified engineers to locate and rectify faults. Whilst every effort has been taken to ensure the information given is correct and complete we cannot guarantee that every eventuality has been covered. Worcester, Bosch Group cannot be held responsible for costs incurred by persons not deemed to be competent.

672080218-90.1W6

8.4 Logic for the 535 SE/LD RDB control box

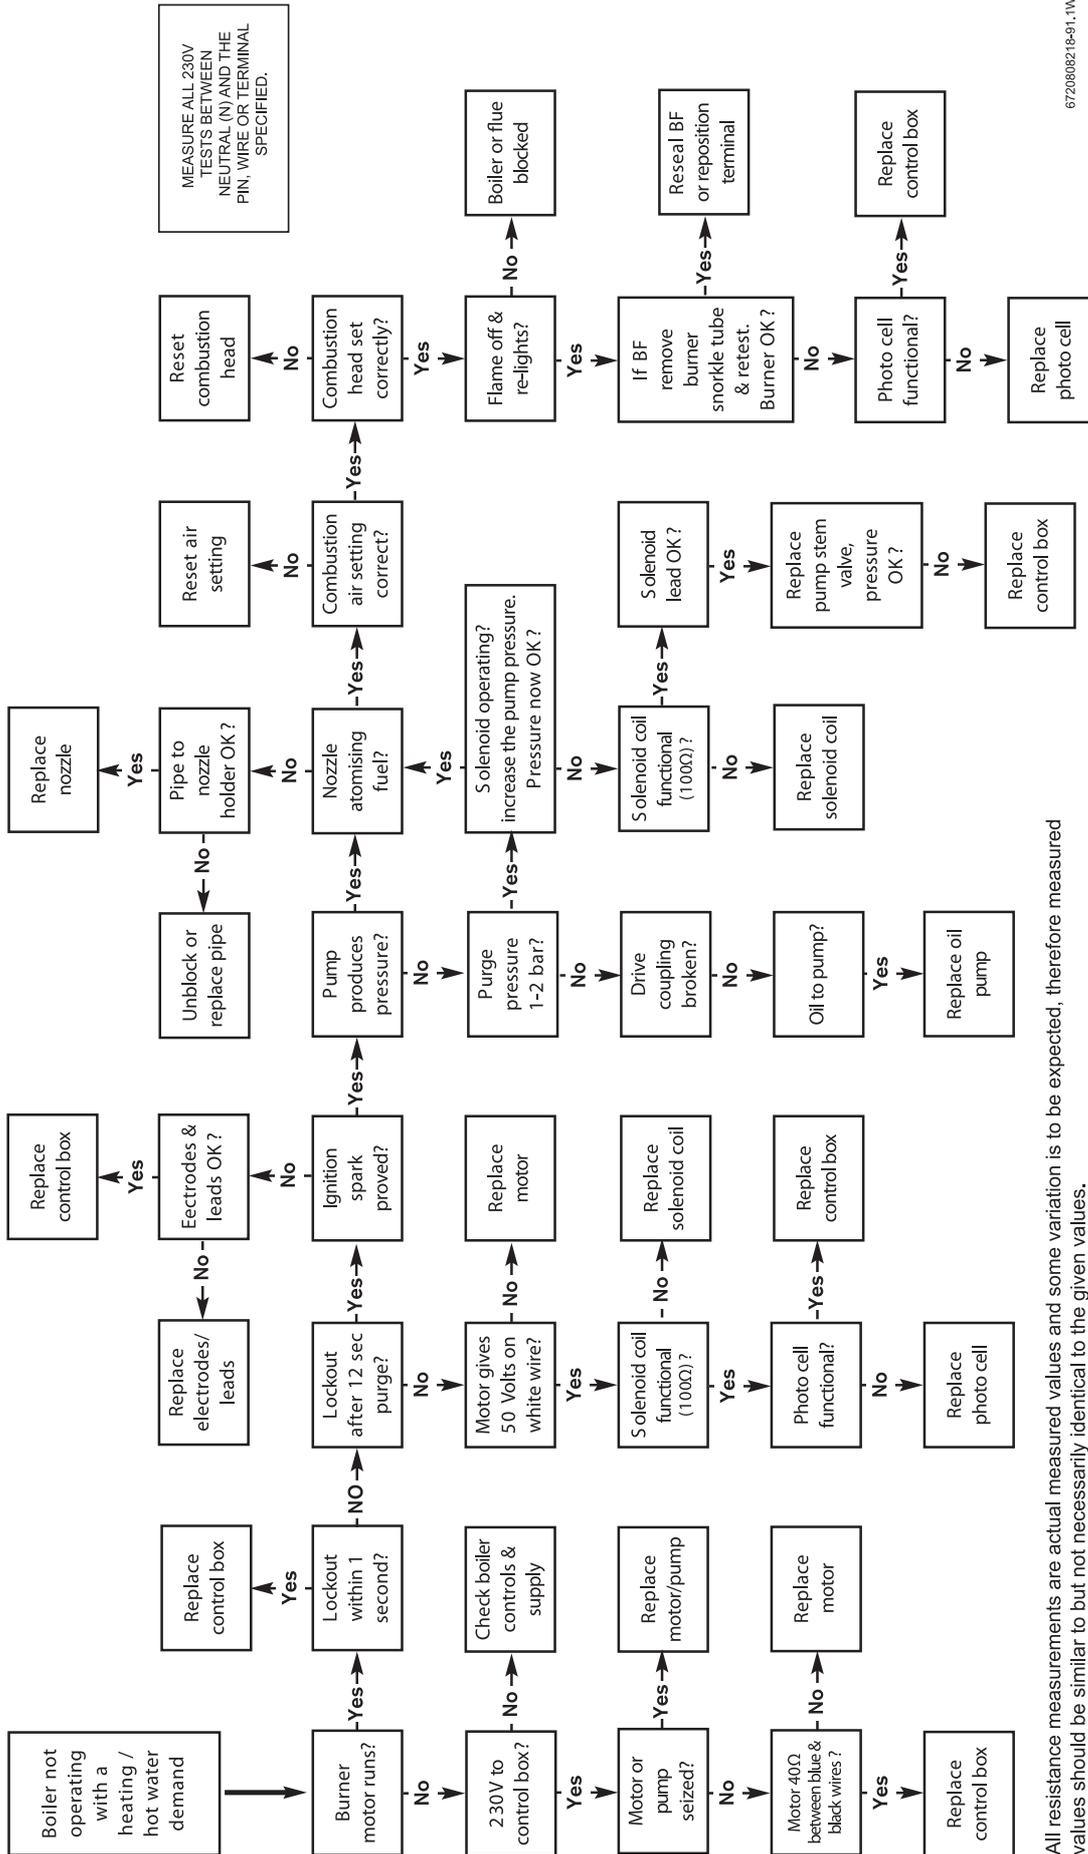

6720808216-91,1Wo

All resistance measurements are actual measured values and some variation is to be expected, therefore measured values should be similar to but not necessarily identical to the given values.  
Burners on balanced flue systems can recirculate flue products resulting in the burner cycling, if this happens check the flue system integrity and the terminal position.

## 8.5 Riello control box 12/18 model

### 8.5.1 Control box LED codes

Lockout types (burner in lockout)	
Refer to Fault finding chart, section 8.5.2, go to line number on chart	
<b>RED steady ON</b> Lockout for no flame after safety time	[3]
<b>RED 0.5 seconds ON/ RED 0.5 seconds OFF</b> Lock out for false flame signal	[5a]
<b>RED 0.2 seconds ON /RED 0.2 seconds OFF</b> Lock out for maximum number of flame loss re-lights	[9]
<b>RED 2.5 seconds ON / ORANGE 0.5 seconds ON</b> Lock out for fan motor failure	[3d]
<b>RED 2.5 seconds ON / GREEN 0.5 seconds ON</b> Lock out for oil valve circuit driver failure	[8c]
<b>ORANGE 0.5 seconds ON / GREEN 0.5 seconds ON</b> Lock out for EEPROM failure	Replace control box
<b>Red 0.5s ON / Red 2.5s OFF</b> Max pre-heat time exceeded (10 minutes)	[2]

Table 11

Anomaly types (Burner in stand-by)	
<b>Green 0.5 s ON / Green 2.5 s OFF</b> Pre-heating time	Fit pre-heat link

Table 12

Anomaly types (Burner in stand-by)	
<b>Green 0.5s ON / RED 0.5s ON</b> Extraneous light	Lock out after 25s
<b>Orange steady ON</b> Abnormal frequency supply	When an anomaly appears during: ▶ pre-purge. the burner remains in pre-purge. ▶ after ignition, burner remains in operation. When anomalies disappear the burner re-starts
<b>Orange 0.2s ON / Green 0.2s ON</b> Control box internal error	
<b>Green 0.2s ON / Red 0.2s ON</b> Reset pushbutton or remote reset failure	Remote reset / pushbutton is activated for more than 60 seconds. When anomaly appears the burner does not stop

Table 12

#### Last lockout memory feature

The control box allows the last lockout that happened to be displayed. Access to this function is possible in both STANDBY and OPERATING status.

- ▶ Keep the button pressed for 25 seconds = t < 30 seconds
- ▶ Release the button.

LED displaying the type of lockout memorised for 10 seconds

The time displaying the type of lockout can be extended by pressing the reset button again during the display of the lockout (the lock out display continues for another 10 seconds)

### 8.5.2 Fault finding

Line	Check	Action		
1	Control box is supplied with heat demand?	Yes	Go to line 2	
		No	Check boiler and system controls	
2	Is the pre-heater fitted or if no pre-heater is fitted, is the link fitted?	Yes	Go to line 3	
		No	Fit the Pre-Heater or link	
3	Motor starts after initialization check time 3.5 seconds?	Yes	Go to line 4	
		No	Go to line 3a	
	3a	Green 0.5 seconds ON/Red 0.5 seconds ON before lockout?	Yes	Go to line 5a
			No	Go to line 3b
	3b	Fan motor or oil pump seized?	Yes	Replace seized component
			No	Go to line 3c
	3c	230 Volts to motor across blue and black motor wires?	Yes	Go to line 3d
			No	Replace control box
3d	Approximately 35 Ω across blue and black motor wires?	Yes	Replace motor capacitor	
		No	Replace fan motor and check control box	
4	Motor runs for less than 12 seconds?	Yes	Go to line 4a	
		No	Go to line 5	
	4a	Motor gives 50 Volts a.c. across black and white wires?	Yes	Replace control box
		No	Replace fan motor	

Table 13

Line	Check	Yes	Action	
5	Burner does not fire, burner locks out after 25 seconds from motor start?	Yes	Go to line 5a	
		No	Go to line 6	
	5a	Burner fires when the photo cell is covered?	Yes	Remove extraneous light
			No	Go to line 5b
	5b	Photo cell voltage $\geq 3.8V$ in the dark and approximately 1.2V in the light?	Yes	Replace the control board
No			Replace the photo cell	
6	Pump washing pressure 1 to 2 bar?	Yes	Go to line 7	
		No	Go to line 6a	
	6a	Pump pressure more than 6 bar?	Yes	Replace oil pump
			No	Go to line 6b
	6b	Check oil supply to the pump, if oil supply is OK	Go to line 6c	
	6c	Drive coupling broken?	Yes	Replace drive coupling
No			Replace oil pump	
7	Ignition spark present?	Yes	Go to line 8	
		No	Go to line 7a	
	7a	Are ignition leads and electrodes OK and set correctly?	Yes	Replace control box
No			Replace/reset electrodes/ignition leads	
8	Solenoid coil releases working pressure?	Yes	Go to line 9	
		No	Go to line 8a	
	8a	Does burner light or green 0.5 seconds ON/red 0.5 seconds ON before lockout?	Yes	Go to line 5a
			No	Go to line 8b
	8b	Contaminated fuel filters?	Yes	Clean/Replace filters
			No	Go to line 8c
	8c	Coil lead OK	Yes	Go to line 8d
			No	Replace solenoid coil lead
	8d	Solenoid coil resistance 90 to 110 $\Omega$	Yes	Go to line 8e
			No	Replace solenoid coil
8e	After 15 seconds from motor start, 25 to 30 Volts d.c. to solenoid coil? (coil connected)	Yes	Replace oil pump	
		No	Replace control box	
9	Air set correctly?	Yes	Go to line 10	
		No	Adjust combustion air settings	
10	Does the burner light? Flue damper fitted? (if required)	Yes	Go to line 11	
		No	Go to line 10a	
	10a	Is the nozzle atomising the fuel?	Yes	Go to line 11
			No	Go to line 10b
	10b	Nozzle new?	Yes	Go to line 10c
			No	Replace nozzle
10c	Check oil pipe from pump to nozzle holder	Clean/ replace pump and fuel line filters		
11	Combustion head set correctly?	Yes	Go to line 11a	
		No	Reset combustion head	
	11a	Flame goes out then re-lights	Yes	Go to line 11c
			No	Go to line 11b
	11b	Boiler or flue blocked	Yes	Clear blockage
			No	Go to line 11c
	11c	If balanced flue, remove the snorkel and test - now OK?	Yes	Go to line 11d
			No	Go to line 11e
	11d	Balanced flues can recirculate gases causing recycling	Check the flue position and seals	
	11e	Photo cell voltage $\geq 3.8V$ in the dark and approximately 1.2V in the light?	Yes	Replace the control box
No			Replace photocell	

Table 13

### 8.5.3 Flame sensing photocell 12/18 models

To check the correct functioning of the photocell, perform the following actions:

- ▶ Electrically isolate the burner
- ▶ Remove the photocell
- ▶ Connect a voltmeter across the blue and brown wires to the photocell
- ▶ Reconnect the power to the burner and wait until the burner locks out due to the false flame fault (red and green LEDs blinking)
- ▶ Cover the photocell to exclude any light and the voltmeter should read 3.8 Volts or higher
- ▶ Expose the photocell to light and the voltmeter should read approximately 1.2 Volts
- ▶ If these two conditions are not met, change the photocell
- ▶ Disconnect the voltmeter
- ▶ Disconnect the burner and replace the photocell

### 8.5.4 Flame sensing photocell 18/25 and 25/32 models

If the photocell is suspected to be faulty, replace the photocell.

### 8.6 Oil supply vacuum testing

A vacuum gauge can be attached to the oil pump vacuum test port [2] and the boiler operated to check the vacuum readings. Oil pumps can operate if readings are between plus 0.4 bar and minus 0.35 bar. This means oil tanks can be 4 metres higher (to top of oil) or 3.5 metres lower (if fitted with a de-aerator or two-pipe oil delivery system) than the oil pump.

If vacuum is greater than minus 0.35 bar then you must also check that the oil supply is not obstructed and that the oil supply pipe is correctly sized.

Accessory 8-716-116-333-0 is available to assist in connecting a vacuum gauge to the vacuum test port.

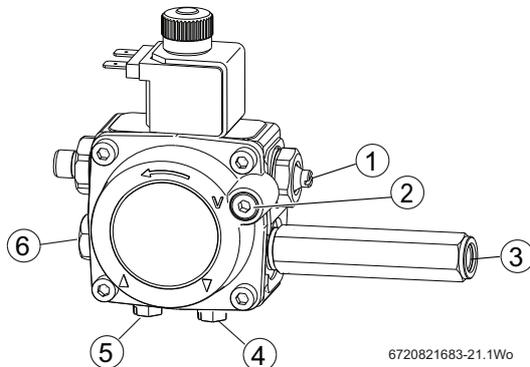


Fig. 81 Oil pump ports/connections

- [1] Pressure adjuster
- [2] Vacuum gauge port
- [3] Bleed and pressure gauge port
- [4] Return connection
- [5] Inlet connection
- [6] Auxiliary pressure gauge port

### 8.7 Air pressure switch and flue overhear reset

This is a blocking error that must be reset by pressing thermostat reset button or air pressure switch reset button.

If the flue-gas temperature exceeds the cut-off point or the flue is restricted, the appliance will lockout,

- ▶ Press the flue-gas thermostat reset button located on the underside of the control box assembly.

-or-

- ▶ Press the air pressure reset button [1], located on the underside of the support bracket [2].

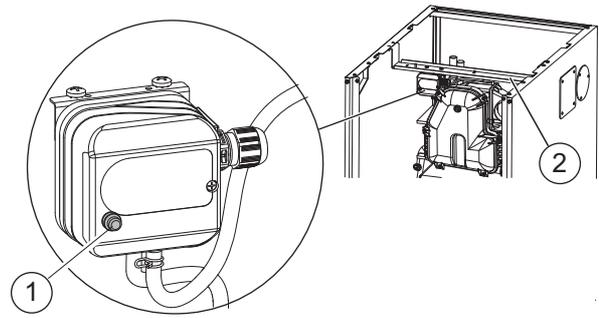


Fig. 82

- [1] Air pressure switch reset
- [2] Boiler cross brace

### 8.8 Air pressure switch connections

**NOTICE:** APS pressure sensing tubes

- ▶ Ensure that the pressure sensing tubes are not kinked or trapped when working on the boiler.
- ▶ Kinked or trapped tubes will prevent the APS from functioning correctly

**i** **Air pressure switch sensing tube connections:**

- ▶ Ensure that the sensing tubes are connected correctly, refer to figure 83

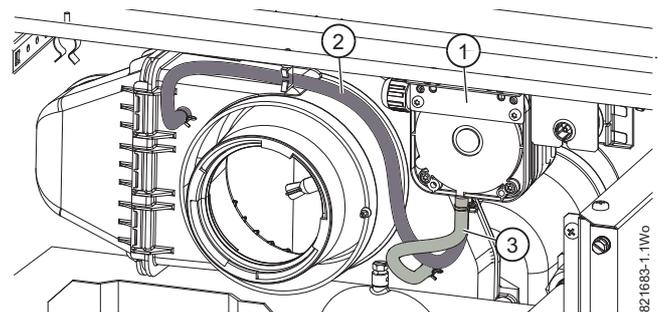


Fig. 83 Sensing tube connections

- [1] Air pressure switch
- [2] Air intake connection (front connection)
- [3] Flue exhaust connection (rear connection marked with a +)



### 8.10 Service interval record

It is recommended that your appliance is serviced annually and that the Service Interval Record is completed and signed.

Before completing the service Interval record below, ensure that you have carried out the service functions described in this manual. Always use the manufacturer's recommended spare parts

<b>Service 1</b>		Date:	
Engineer's name:			
Company name:			
Telephone number:			
Registration number:			
Fire valve inspected (rated to 85 °C)		Yes <input type="checkbox"/>	No <input type="checkbox"/>
Nozzle changed?	Yes <input type="checkbox"/> No <input type="checkbox"/>	Pump pressure:	psi
CO <sub>2</sub>	CO	ppm	CO/CO <sub>2</sub> ratio
F.G.T.	°C	Flue pressure:	
Comments:			
Signature:			

<b>Service 2</b>		Date:	
Engineer's name:			
Company name:			
Telephone number:			
Registration number:			
Fire valve inspected (rated to 85 °C)		Yes <input type="checkbox"/>	No <input type="checkbox"/>
Nozzle changed?	Yes <input type="checkbox"/> No <input type="checkbox"/>	Pump pressure:	psi
CO <sub>2</sub>	CO	ppm	CO/CO <sub>2</sub> ratio
F.G.T.	°C	Flue pressure:	
Comments:			
Signature:			

<b>Service 3</b>		Date:	
Engineer's name:			
Company name:			
Telephone number:			
Registration number:			
Fire valve inspected (rated to 85 °C)		Yes <input type="checkbox"/>	No <input type="checkbox"/>
Nozzle changed?	Yes <input type="checkbox"/> No <input type="checkbox"/>	Pump pressure:	psi
CO <sub>2</sub>	CO	ppm	CO/CO <sub>2</sub> ratio
F.G.T.	°C	Flue pressure:	
Comments:			
Signature:			

<b>Service 4</b>		Date:	
Engineer's name:			
Company name:			
Telephone number:			
Registration number:			
Fire valve inspected (rated to 85 °C)		Yes <input type="checkbox"/>	No <input type="checkbox"/>
Nozzle changed?	Yes <input type="checkbox"/> No <input type="checkbox"/>	Pump pressure:	psi
CO <sub>2</sub>	CO	ppm	CO/CO <sub>2</sub> ratio
F.G.T.	°C	Flue pressure:	
Comments:			
Signature:			

<b>Service 5</b>		Date:	
Engineer's name:			
Company name:			
Telephone number:			
Registration number:			
Fire valve inspected (rated to 85 °C)		Yes <input type="checkbox"/>	No <input type="checkbox"/>
Nozzle changed?	Yes <input type="checkbox"/> No <input type="checkbox"/>	Pump pressure:	psi
CO <sub>2</sub>	CO	ppm	CO/CO <sub>2</sub> ratio
F.G.T.	°C	Flue pressure:	
Comments:			
Signature:			

<b>Service 6</b>		Date:	
Engineer's name:			
Company name:			
Telephone number:			
Registration number:			
Fire valve inspected (rated to 85 °C)		Yes <input type="checkbox"/>	No <input type="checkbox"/>
Nozzle changed?	Yes <input type="checkbox"/> No <input type="checkbox"/>	Pump pressure:	psi
CO <sub>2</sub>	CO	ppm	CO/CO <sub>2</sub> ratio
F.G.T.	°C	Flue pressure:	
Comments:			
Signature:			

<b>Service 7</b>		Date:	
Engineer's name:			
Company name:			
Telephone number:			
Registration number:			
Fire valve inspected (rated to 85 °C)		Yes <input type="checkbox"/>	No <input type="checkbox"/>
Nozzle changed?	Yes <input type="checkbox"/> No <input type="checkbox"/>	Pump pressure:	psi
CO <sub>2</sub>	CO	ppm	CO/CO <sub>2</sub> ratio
F.G.T.	°C	Flue pressure:	
Comments:			
Signature:			

<b>Service 8</b>		Date:	
Engineer's name:			
Company name:			
Telephone number:			
Registration number:			
Fire valve inspected (rated to 85 °C)		Yes <input type="checkbox"/>	No <input type="checkbox"/>
Nozzle changed?	Yes <input type="checkbox"/> No <input type="checkbox"/>	Pump pressure:	psi
CO <sub>2</sub>	CO	ppm	CO/CO <sub>2</sub> ratio
F.G.T.	°C	Flue pressure:	
Comments:			
Signature:			

<b>Service 9</b>		Date:	
Engineer's name:			
Company name:			
Telephone number:			
Registration number:			
Fire valve inspected (rated to 85 °C)		Yes <input type="checkbox"/>	No <input type="checkbox"/>
Nozzle changed?	Yes <input type="checkbox"/> No <input type="checkbox"/>	Pump pressure:	psi
CO <sub>2</sub>	CO	ppm	CO/CO <sub>2</sub> ratio
F.G.T.	°C	Flue pressure:	
Comments:			
Signature:			

<b>Service 10</b>		Date:	
Engineer's name:			
Company name:			
Telephone number:			
Registration number:			
Fire valve inspected (rated to 85 °C)		Yes <input type="checkbox"/>	No <input type="checkbox"/>
Nozzle changed?	Yes <input type="checkbox"/> No <input type="checkbox"/>	Pump pressure:	psi
CO <sub>2</sub>	CO	ppm	CO/CO <sub>2</sub> ratio
F.G.T.	°C	Flue pressure:	
Comments:			
Signature:			



**In the unlikely event the boiler does not give complete satisfaction, before calling for a Service Engineer, the Installer should check the following:-**

**General checks**

- ▶ Is the mode switch in boiler/ON mode?
- ▶ Is there 230V across the boiler live and neutral terminals?
- ▶ Is there 230V across the terminals 1 and N? If not there is no demand to the boiler from the controls or the control wiring is not correct.
- ▶ Is the polarity correct? (230V across live and earth, 0V across neutral and earth)
- ▶ Is the air bled from the primary system?
- ▶ Is the air bled from the oil supply?
- ▶ Is the flue sized and routed correctly?

**Boiler runs straight to lockout**

- ▶ Has the oil line been purged of air?
- ▶ Where an air eliminator is used in conjunction with a top feed oil tank the non-return valve, (if fitted), should be removed from the oil dip pipe.

**No domestic hot water**

- ▶ Is there a domestic hot water demand from the programmer and has the tank reached temperature?
- ▶ Is the circulating pump operating?
- ▶ Are the programmer, tank thermostat, circulating pump and diverter valve/zone valves wired correctly?
- ▶ Is there 230V across 1 and N? If not there is no demand to the boiler from the controls or the controls wiring is not correct.

**No central heating**

- ▶ Are both programmer and room thermostat on demand for central heating?
- ▶ Are the room thermostat, programmer, circulating pump and diverter valve/zone valves (if CH and DHW system) wired correctly?
- ▶ Is the circulating pump operating?
- ▶ Is there 230V across 1 and N? If not there is no demand to the boiler from the controls or the controls wiring is not correct.

**WORCESTER, BOSCH GROUP:**

TECHNICAL SUPPORT:	0330 123 3366
APPOINTMENTS:	0330 123 9339
SPARES:	0330 123 9779
LITERATURE:	0330 123 9119
TRAINING:	0330 123 0166
SALES:	0330 123 9669

Worcester, Bosch Group  
Cotswold Way, Warndon, Worcester WR4 9SW.  
Tel. 0330 123 9559

Worcester, Bosch Group is a brand name of Bosch Thermotechnology Ltd.  
worcester-bosch.co.uk

6 720 821725 (2021/09)



**WORCESTER**  
Bosch Group